

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

GALEO

PC2000-8

SERIAL NUMBERS 20001 and up

KOMATSU

FOREWORD

FOREWORD

This manual provides rules and guidelines which will help you use this machine safely and effectively. The precautions in this manual must be followed at all times when performing operation and maintenance. Most accidents are caused by the failure to follow fundamental safety rules for the operation and maintenance of machines. Accidents can be prevented by knowing beforehand conditions that may cause a hazard when performing operation and maintenance.



WARNING

Before beginning operation or maintenance, operators and maintenance personnel must always observe the following points.

- Read this manual thoroughly and understand its contents fully.
- Read the safety messages and safety labels given in this manual carefully so that they should be understood fully.

 
Keep this manual at the storage location for the Operation and Maintenance Manual given below so that all personnel involved in working on the machine can consult it periodically.

In case this manual should be lost or damaged, immediately contact Komatsu or your Komatsu distributor to obtain a new copy.

When you sell the machine, make sure that this manual should be provided to the new owner together with the machine.

In this manual, measurements are expressed in international standard units (SI). For the reference purpose, weight units used in the past are also displayed in ().

Storage location for the Operation and Maintenance Manual:
magazine box on the left side of the operator's seat.

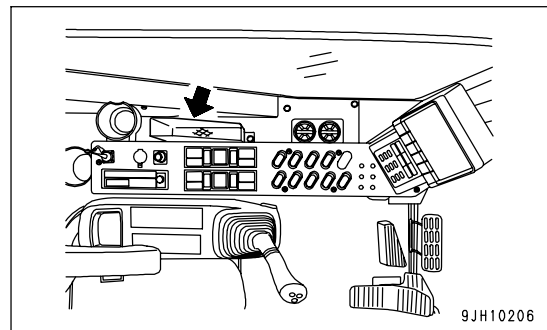

EMISSION CONTROL WARRANTY**EMISSION CONTROL WARRANTY STATEMENT (APPLIES TO CANADA ONLY)****1. Products Warranted**

Komatsu America International Company, Komatsu Mining Systems Inc. and Komatsu Utility Corporation (collectively "Komatsu") produce and/or market products under brand names of Komatsu, Dresser, Dressta, Haulpak and Galion. This emissions warranty applies to new engines bearing the Komatsu name installed in these products and used in Canada in machines designed for industrial off-highway use. This warranty applies only to these engines produced on or after January 1, 2000. This warranty will be administered by Komatsu distribution in Canada.

2. Coverage

Komatsu warrants to the ultimate purchaser and each subsequent purchaser that the engine is designed, built and equipped so as to conform, at the time of sale by Komatsu, with all U.S. Federal emission regulations applicable at the time of manufacture and that it is free from defects in workmanship or material which would cause it not to meet these regulations within five years or 3,000 hours of operation, whichever occurs first, as measured from the date of delivery of the engine to the ultimate purchaser.

3. Limitations

Failures, other than those resulting from defects in materials or workmanship, are not covered by this warranty. Komatsu is not responsible for failures or damage resulting from what Komatsu determines to be abuse or neglect, including, but not limited to: operation without adequate coolant or lubricants; over fueling; over speeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the engine. Komatsu is also not responsible for failures caused by incorrect fuel or by water, dirt or other contaminants in the fuel. Komatsu is not responsible for non-engine repairs, "downtime" expense, related damage, fines, all business costs or other losses resulting from a warrantable failure.

KOMATSU IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty, together with the express commercial warranties, are the sole warranties of Komatsu. **THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

GARANTIE SUR LE CONTRÔLE DES ÉMISSIONS**ÉNONCÉ DE GARANTIE SUR LE CONTRÔLE DES ÉMISSIONS (APPLICABLE AU CANADA SEULEMENT):****1. Produits garantis:**

Komatsu America International Company, Komatsu Mining Systems Inc. et Komatsu Utility Corporation (collectivement Komatsu) produisent et/ou font la mise en marché de produits portant les noms de marque Komatsu, Dresser, Dressta, Haulpak et Galion. Cette garantie sur les émissions s'applique à tous les nouveaux moteurs portant le nom Komatsu, installés dans ces produits et utilisés au Canada dans des machines conçues pour utilisation industrielle non-roulière. Cette garantie s'applique seulement sur les moteurs produits à partir du 1er Janvier 2000. Cette garantie sera administrée par la distribution de Komatsu au Canada.

2. Couverture:

Komatsu garantit à l'acheteur ultime et chaque acheteur subséquent que le moteur est conçu, construit et équipé en toute conformité, au moment de la vente par Komatsu, avec toutes les Réglementations fédérales américaines sur les émissions applicables au moment de la fabrication et qu'il est exempt de défauts de construction ou de matériaux qui auraient pour effet de contrevenir à ces réglementations en dedans de 5 ans ou 3000 heures d'opération, mesuré à partir de la date de livraison du moteur au client ultime.

3. Limitations:

Les bris, autres que ceux résultant de défauts de matériaux ou de construction, ne sont pas couverts par cette Garantie. Komatsu n'est pas responsable pour bris ou dommages résultant de ce que Komatsu détermine comme étant de l'abus ou négligence, incluant mais ne se limitant pas à: l'opération sans lubrifiants ou agent refroidissants adéquats; la suralimentation d'essence; la survitesse; le manque d'entretien des systèmes de lubrification, de refroidissement ou d'entrée; de pratiques non-propices d'entreposage, de mise en marche, de réchauffement, de conditionnement ou d'arrêt; les modifications non-autorisées du moteur. De plus, Komatsu n'est pas responsable de bris causés par de l'essence inadéquate ou de l'eau, des saletés ou autres contaminants dans l'essence. Komatsu n'est pas responsable des réparations non-relées au moteur, des dépenses encourues suite aux temps d'arrêts, des dommages relatifs, amendes, et de tout autre coût d'affaires ou autres pertes résultant d'un bris couvert par la garantie.

KOMATSU N'EST PAS RESPONSABLE DES INCIDENTS OU DOMMAGES CONSÉQUENTS.

Cette garantie, ainsi que les garanties expresses commerciales, sont les seules garanties de Komatsu. **IL N'Y A AUCUNE AUTRE GARANTIE, EXPRESSE OU SOUS-ENTENDUE, MARCHANDABLE OU PROPICE A UNE UTILISATION PARTICULIÈRE.**




SAFETY INFORMATION

To enable you to use this machine safely, safety precautions and labels are given in this manual and affixed to the machine to give explanations of situations involving potential hazards and of the methods of avoiding such situations.


Signal words

The following signal words are used to inform you that there is a potential hazardous situation that may lead to personal injury or damage.

In this manual and on machine labels, the following signal words are used to express the potential level of hazard.

- | | |
|--|---|
|  DANGER | Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. |
|  WARNING | Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. |
|  CAUTION | Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. This word is used also to alert against unsafe practices that may cause property damage. |

Example of safety message using signal word

 WARNING
When standing up from the operator's seat, always place the lock lever in the LOCK position. If you accidentally touch the control levers when they are not locked, this may cause a serious injury or death.

Other signal words

In addition to the above, the following signal words are used to indicate precautions that should be followed to protect the machine or to give information that is useful to know.

NOTICE This word is used for precautions that must be taken to avoid actions which could shorten the life of the machine.


REMARKS This word is used for information that is useful to know.

- Safety labels

Safety labels are affixed to the machine to inform the operator or maintenance worker on the spot when carrying out operation or maintenance of the machine that may involve hazard.

This machine uses "Safety labels using words" and "Safety labels using pictograms" to indicate safety procedures.

Example of safety label using words

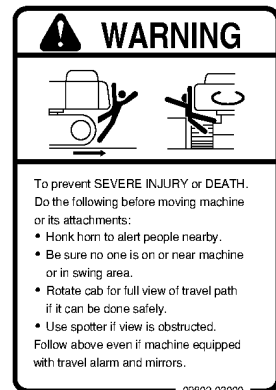

Part No

Safety labels using pictogram

Safety pictograms use a picture to express a level of hazardous condition equivalent to the signal word. These safety pictograms use pictures in order to let the operator or maintenance worker understand the level and type of hazardous condition at all times. Safety pictograms show the type of hazardous condition at the top or left side, and the method of avoiding the hazardous condition at the bottom or right side. In addition, the type of hazardous condition is displayed inside a triangle and the method of avoiding the hazardous condition is shown inside a circle.



Part No

Komatsu cannot predict every circumstance that might involve a potential hazard in operation and maintenance. Therefore, the safety messages in this manual and on the machine may not include all possible safety precautions. If any procedures or actions not specifically recommended or allowed in this manual are used, it is your responsibility to take the necessary steps to ensure safety.

In no event should you engage in prohibited uses or actions described in this manual.

The explanations, values, and illustrations in this manual were prepared based on the latest information available at that time. Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Komatsu or your Komatsu distributor for the latest available information of your machine or for questions regarding information in this manual.

The numbers in circles in the illustrations correspond to the numbers in () in the text. (For example: ① → (1))

 
INTRODUCTION

This Komatsu machine is designed to be used mainly for the following work:

- Digging work
- Loading work

See the section "RECOMMENDED APPLICATIONS (PAGE 3-226)" for further details.

DIRECTIONS OF MACHINE

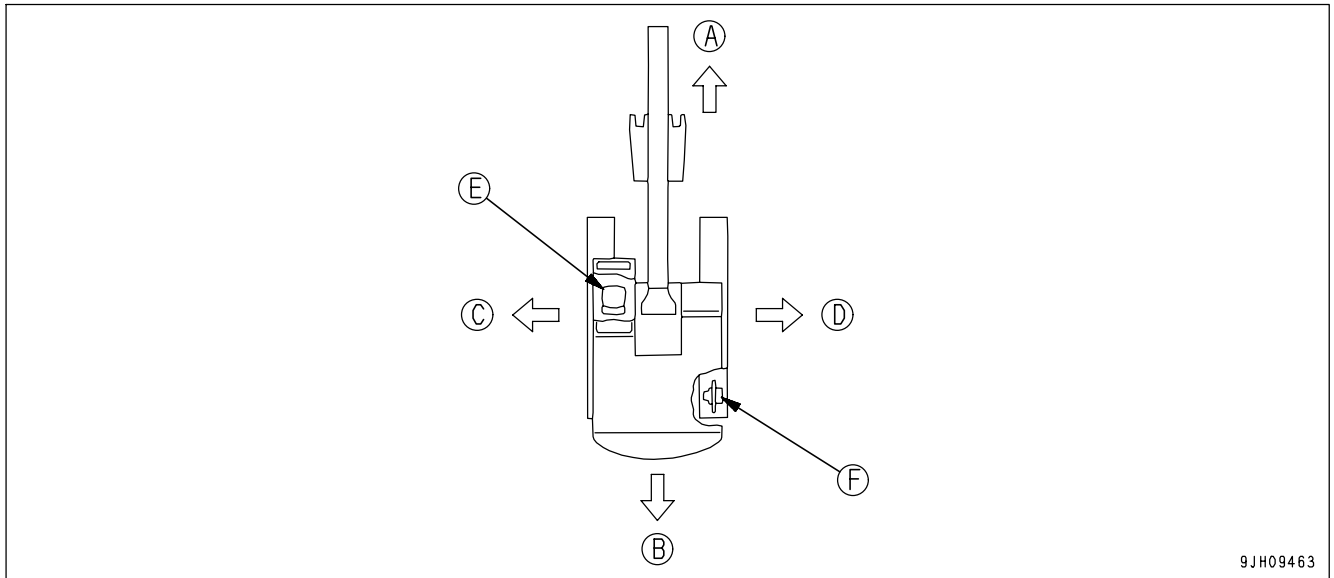

- | | |
|-----------|---------------------|
| (A) Front | (E) Operator's seat |
| (B) Rear | (F) Sprocket |
| (C) Left | |
| (D) Right | |

 
In this manual, the terms front, rear, left, and right refer to the travel direction as seen from the operator's seat when the operator's seat is facing the front and the sprocket is at the rear of the machine.

VISIBILITY FROM OPERATOR'S SEAT

The visibility standards (ISO 5006) for this machine require a view shown in the diagram below.


PROXIMITY VISIBILITY

The visibility of this machine in the area 1 m from the outside surface of the machine at a height of 1.5 m is shown in the diagram below. The hatched area (A) shows the area where the view is blocked by part of the machine when mirrors or other aids to visibility are installed as standard. Please be fully aware that there are places that cannot be seen when operating the machine.

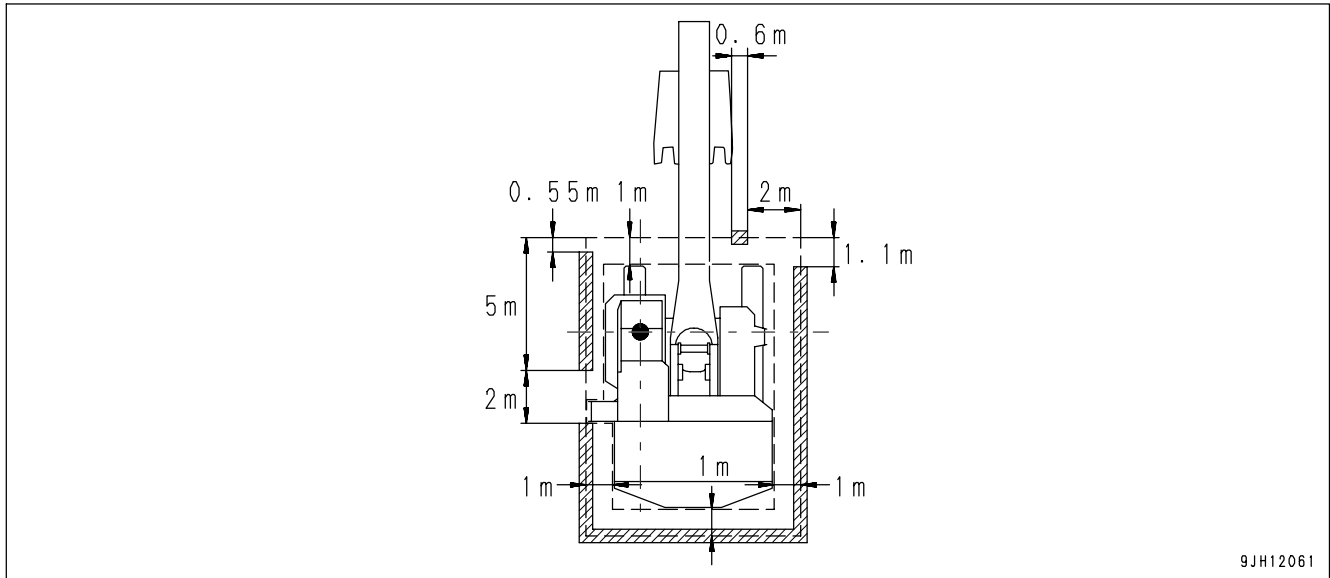

12M CIRCUMFERENCE VISIBILITY

 The visibility at a radius of 12 m from the machine is as shown in the diagram below. The hatched areas (B) show the areas where the view is blocked when mirrors or other aids to visibility are installed as standard. Please be fully aware that there are places that cannot be seen when operating the machine.

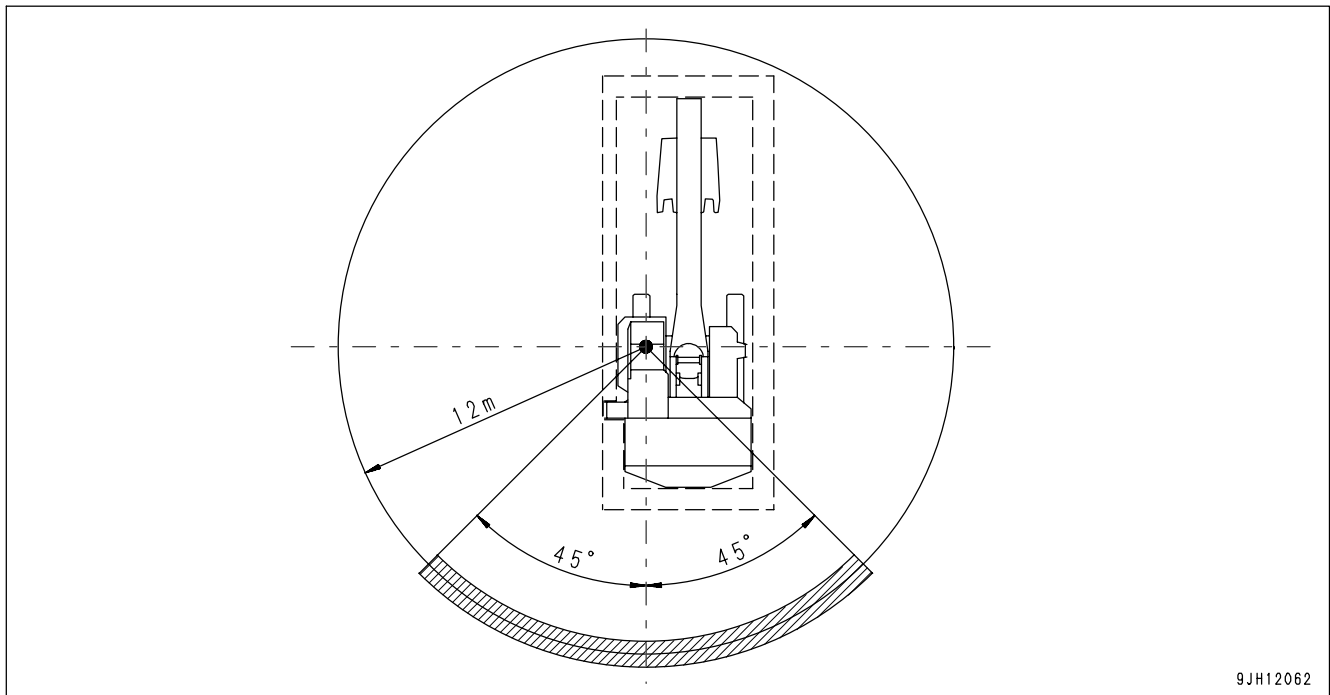

BREAKING-IN THE NEW MACHINE

NOTICE

Your Komatsu machine has been thoroughly adjusted and tested before shipment from the factory. However, operating the machine under full load before breaking the machine in can adversely affect the performance and shorten the machine life.

Be sure to break in the machine for the initial 100 hours (as indicated on the service meter).

Make sure that you fully understand the content of this manual, and pay careful attention to the following points when breaking in the machine.

 
- Run the engine at idle for 15 seconds after starting it. During this time, do not operate the control levers or fuel control dial.
- Idle the engine for 5 minutes after starting it up.
- Avoid operation with heavy loads or at high speeds.
- Immediately after starting the engine, avoid sudden starts, sudden acceleration, unnecessary sudden stops, and sudden changes in direction.

PRODUCT INFORMATION

When requesting service or ordering replacement parts, please inform your Komatsu distributor of the following items.

PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE


This is at the bottom right of the room under the operator's cab.
The design of the nameplate differs according to the territory.

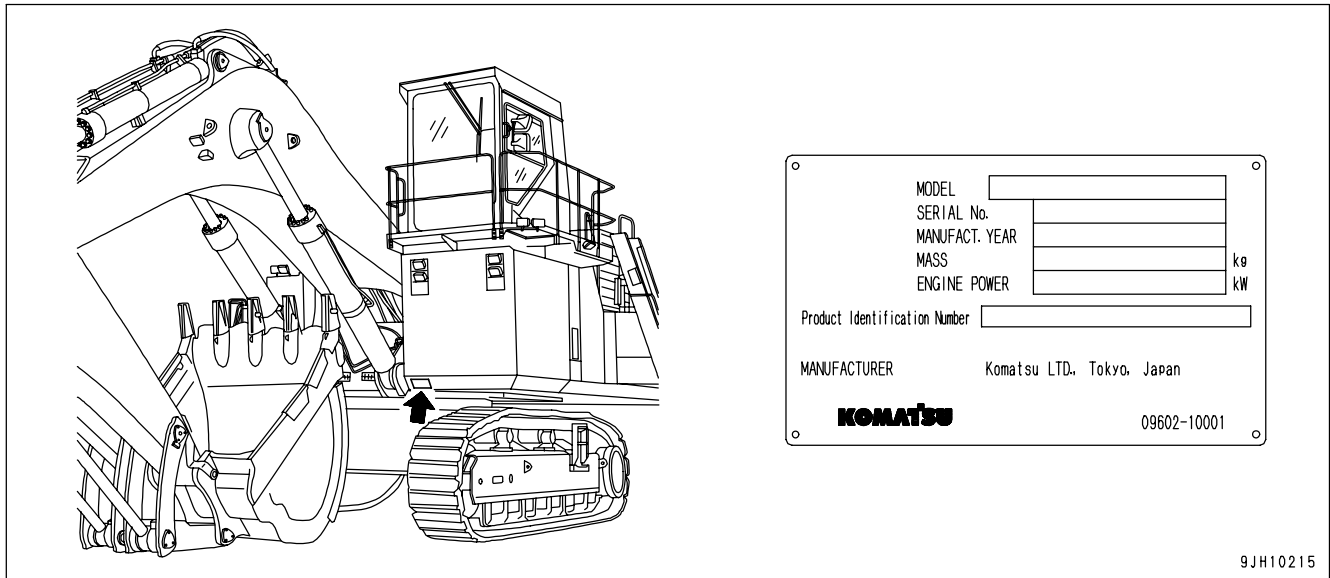

9JH10215

EPA REGULATIONS, ENGINE NUMBER PLATE

 This is at the top left of fuel filter (1) on the engine cylinder block, as seen from the front of the machine.

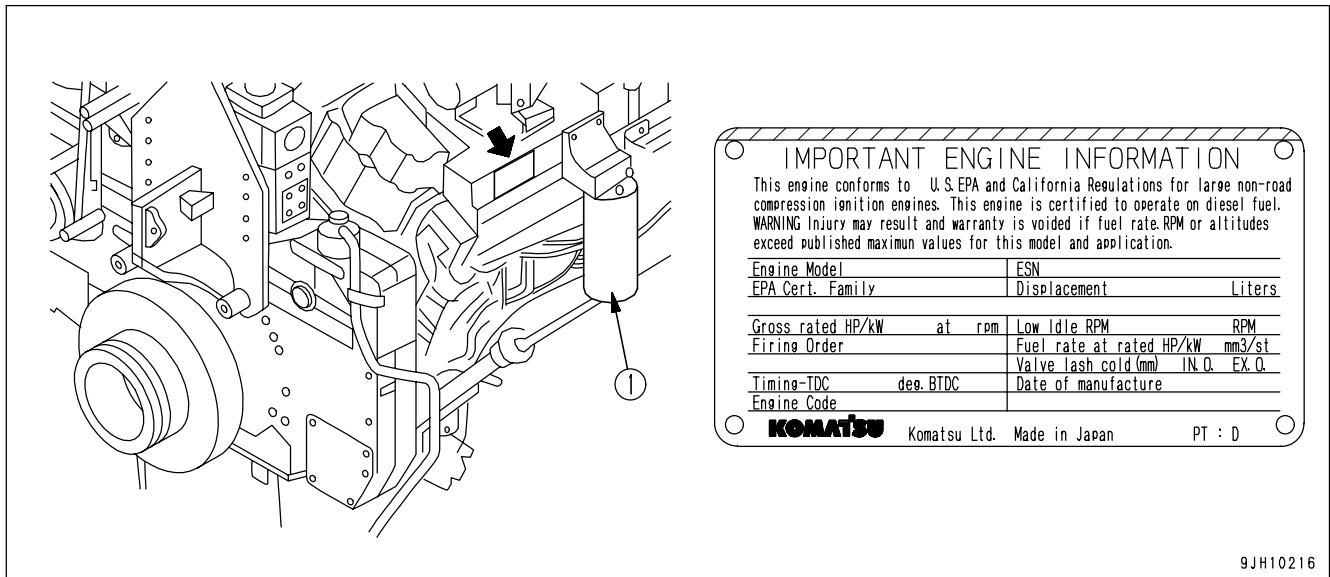


9JH10216

EPA: Environmental Protection Agency, U.S.A.

SERVICE METER LOCATION

 On top of the machine monitor

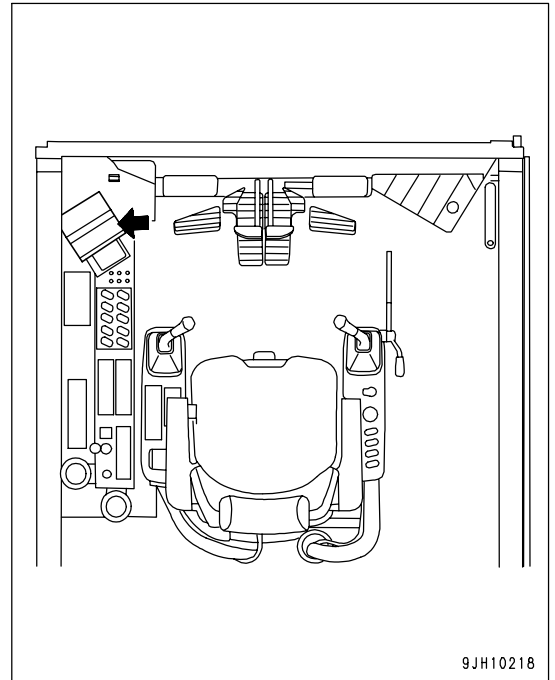

9JH10218

YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR

Machine serial No.	
Engine serial No.	
Product identification number (PIN)	
Distributor name	
Address	-----

Service Personnel	
Phone/Fax	

CONTENTS

FOREWORD	1- 1
FOREWORD	1- 2
SAFETY INFORMATION	1- 5
INTRODUCTION	1- 7
DIRECTIONS OF MACHINE	1- 7
VISIBILITY FROM OPERATOR'S SEAT	1- 8
BREAKING-IN THE NEW MACHINE	1- 9
PRODUCT INFORMATION	1- 10
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE	1- 10
EPA REGULATIONS, ENGINE NUMBER PLATE	1- 10
SERVICE METER LOCATION	1- 11
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR	1- 11
SAFETY	2- 1
SAFETY	2- 2
SAFETY LABELS	2- 4
LOCATION OF SAFETY LABELS	2- 5
SAFETY LABELS	2- 6
GENERAL PRECAUTIONS	2- 11
SAFETY MACHINE OPERATION	2- 21
STARTING ENGINE	2- 21
OPERATION	2- 23
TRANSPORTATION	2- 28
BATTERY	2- 29
TOWING	2- 31
SAFETY MAINTENANCE INFORMATION	2- 32
OPERATION	3- 1
MACHINE VIEW ILLUSTRATIONS	3- 2
OVERALL MACHINE VIEW	3- 2
CONTROLS AND GAUGES	3- 3
DETAILED CONTROLS AND GAUGES	3- 7
MONITORING SYSTEM	3- 7
SWITCHES	3- 82
LAMP	3- 97
CONTROL LEVERS AND PEDALS	3-100
DOOR LOCK	3-103
EMERGENCY EXIT FROM OPERATOR'S CAB	3-103
EMERGENCY ESCAPE HAMMER	3-104
EMERGENCY ESCAPE EQUIPMENT	3-105
FIRE EXTINGUISHER	3-107
CAP WITH LOCK	3-108
ASHTRAY	3-109
CUP HOLDER	3-109
MAGAZINE BOX	3-110
HOOK	3-110
UTILITY BOX	3-111
AIR CONDITIONER CONTROLS	3-112
RADIO	3-130
AUXILIARY ELECTRIC POWER	3-135
FUSE	3-136

CIRCUIT BREAKER	3-138
FUSE (IF EQUIPPED)	3-141
CONTROLLER	3-142
TOOL, CAN STORAGE PLACE	3-143
HANDLING GREASE PUMP AND GREASE GUN	3-143
ACCUMULATOR	3-151
HANDLING OF SLIDING LADDER	3-153
HANDLING MACHINES EQUIPPED WITH VHMS	3-154
MACHINE OPERATIONS AND CONTROLS	3-156
BEFORE STARTING ENGINE	3-156
STARTING ENGINE	3-186
AFTER STARTING ENGINE	3-189
STOPPING THE ENGINE	3-201
MACHINE OPERATION	3-207
STEERING THE MACHINE	3-211
SWINGING	3-213
WORK EQUIPMENT CONTROLS AND OPERATIONS	3-215
WORKING MODE	3-217
PROHIBITED OPERATIONS	3-218
GENERAL OPERATION INFORMATION	3-222
TRAVELING ON SLOPES	3-223
ESCAPE FROM MUD	3-225
RECOMMENDED APPLICATIONS	3-226
BUCKET REPLACEMENT	3-227
PARKING MACHINE	3-229
CHECK BEFORE SHUT OFF ENGINE	3-230
MACHINE INSPECTION AFTER DAILY WORK	3-230
LOCKING	3-231
TRANSPORTATION	3-232
TRANSPORTATION PROCEDURE	3-232
PRECAUTIONS FOR TRANSPORTATION	3-232
METHOD OF LIFTING UNITS FOR TRANSPORTATION	3-232
TRANSPORTATION POSTURE	3-232
COLD WEATHER OPERATION	3-233
COLD WEATHER OPERATION INFORMATION	3-233
AFTER DAILY WORK COMPLETION	3-235
AFTER COLD WEATHER SEASON	3-235
LONG TERM STORAGE	3-236
BEFORE STORAGE	3-236
DURING STORAGE	3-236
AFTER STORAGE	3-237
STARTING MACHINE AFTER LONG-TERM STORAGE	3-237
TROUBLES AND ACTIONS	3-238
RUNNING OUT OF FUEL	3-238
PHENOMENA THAT ARE NOT FAILURES	3-238
TOWING THE MACHINE	3-239
SEVERE JOB CONDITION	3-239
DISCHARGED BATTERY	3-240
OTHER TROUBLE	3-244

MAINTENANCE -----	4- 1
MAINTENANCE INFORMATION -----	4- 2
OUTLINE OF SERVICE -----	4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC -----	4- 4
ELECTRIC SYSTEM MAINTENANCE -----	4- 8
WEAR PARTS -----	4- 9
WEAR PARTS LIST -----	4- 9
RECOMMENDED FUEL, COOLANT, AND LUBRICANT -----	4- 10
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL -----	4- 12
TIGHTENING TORQUE SPECIFICATIONS -----	4- 13
TIGHTENING TORQUE LIST -----	4- 13
SAFETY CRITICAL PARTS -----	4- 14
SAFETY CRITICAL PARTS LIST -----	4- 15
MAINTENANCE SCHEDULE -----	4- 16
MAINTENANCE SCHEDULE CHART -----	4- 16
MAINTENANCE PROCEDURE -----	4- 18
INITIAL 100 HOURS MAINTENANCE (ONLY AFTER THE FIRST 100 HOURS) -----	4- 18
INITIAL 500 HOURS MAINTENANCE (ONLY AFTER THE FIRST 500 HOURS) -----	4- 18
INITIAL 4000 HOURS MAINTENANCE (ONLY AFTER THE FIRST 4000 HOURS) WHEN REQUIRED -----	4- 18
CHECK BEFORE STARTING -----	4- 19
EVERY 250 HOURS MAINTENANCE -----	4- 63
EVERY 500 HOURS MAINTENANCE -----	4- 64
EVERY 1000 HOURS MAINTENANCE -----	4- 73
EVERY 2000 HOURS MAINTENANCE -----	4- 85
EVERY 4000 HOURS MAINTENANCE -----	4-104
EVERY 5000 HOURS MAINTENANCE -----	4-106
EVERY 8000 HOURS MAINTENANCE -----	4-110
EVERY 8000 HOURS MAINTENANCE -----	4-114
SPECIFICATIONS -----	5- 1
SPECIFICATIONS -----	5- 2
ATTACHMENTS AND OPTIONS -----	6- 1
GENERAL PRECAUTIONS FOR SAFETY -----	6- 2
PRECAUTIONS WHEN SELECTING -----	6- 2
READ THE INSTRUCTION MANUAL THOROUGHLY -----	6- 2
PRECAUTIONS WHEN REMOVING OR INSTALLING -----	6- 2
PRECAUTIONS WHEN USING -----	6- 2
ATTACHMENT GUIDE -----	6- 3
COMBINATIONS OF WORK EQUIPMENT -----	6- 3
FRONT GUARD -----	6- 3
EMERGENCY LADDER -----	6- 4
ESCAPE PROCEDURE -----	6- 5
PRECAUTION WHEN STORING ROPE LADDER -----	6- 7
CHECK EMERGENCY LADDER -----	6- 7
HANDLING FUEL QUICK CHARGE -----	6- 8
GENERAL LOCATIONS -----	6- 8
PROCEDURE FOR OPERATING FUEL CHARGE -----	6- 9
ACTION WHEN MACHINE DOES NOT MOVE BECAUSE OF FAILURE IN PROXIMITY SWITCH -----	6- 11
ORBCOM CONTROLLER (COMMUNICATIONS TERMINAL) -----	6- 15

LOADING SHOVEL	7-	1
MACHINE VIEW ILLUSTRATIONS	7-	2
OVERALL MACHINE VIEW	7-	2
EXPLANATION OF COMPONENTS	7-	3
SWITCHES	7-	3
OPERATIONS	7-	5
OPERATION OF WORK EQUIPMENT	7-	5
PRECAUTIONS DURING OPERATION	7-	7
EXCAVATOR WORK	7-	11
PRECAUTIONS WHEN DISASSEMBLING MACHINE	7-	12
RELEASING PRESSURE	7-	12
TRANSPORTATION	7-	13
MACHINE CONFIGURATION FOR TRANSPORT	7-	13
MAINTENANCE	7-	14
EVERY 10 HOURS MAINTENANCE	7-	14
SPECIFICATION	7-	19
WEAR PARTS	7-	21
WEAR PARTS LIST	7-	21
COMBINATION OF WORK EQUIPMENT	7-	22
COMBINATION OF WORK EQUIPMENT	7-	22
INDEX	8-	1

SAFETY

WARNING

Please read and make sure that you fully understand the precautions described in this manual and the safety labels on the machine. When operating or servicing the machine, always follow these precautions strictly.

SAFETY

SAFETY LABELS	2- 4
LOCATION OF SAFETY LABELS	2- 5
SAFETY LABELS	2- 6
SAFETY INFORMATION	
Safety rules	2- 11
If problems are found	2- 11
Working wear and personal protective items	2- 11
Fire extinguisher and first aid kit	2- 11
Safety equipment	2- 12
Keep machine clean	2- 12
Keep operator's compartment clean	2- 12
Leaving operator's seat with lock	2- 12
Handrails and steps	2- 13
Precautions when working in high place	2- 13
Mounting and dismounting	2- 13
No persons on attachments	2- 13
Do not get caught in articulated portion	2- 14
Burn prevention	2- 14
Fire prevention and explosion prevention	2- 15
Action if fire occurs	2- 16
Windshield washer fluid	2- 16
Falling objects, flying objects and intruding objects prevention	2- 17
Attachment installation	2- 17
Attachment combinations	2- 17
Cab window glasses	2- 17
Unauthorized modifications	2- 18
Safety at jobsite	2- 18
Working on loose ground	2- 18
Distance to high voltage cables	2- 19
Ensure good visibility	2- 19
Ventilation for enclosed area	2- 20
Signalman's signal and signs	2- 20
Emergency exit from operator's cab	2- 20
Asbestos dust hazard prevention	2- 20


SAFETY MACHINE OPERATION	2- 21
STARTING ENGINE	2- 21
Checks before starting engine	2- 21
Safety rules for starting engine	2- 22
Starting engine in cold weather	2- 22
OPERATION	2- 23
Checks before operation	2- 23
Safety rules for changing machine directions	2- 23
Safety rules for traveling	2- 24
Traveling on slopes	2- 25
Operations on slopes	2- 26
Prohibited operations	2- 26
Operations on snow	2- 28
Parking machine	2- 28
TRANSPORTATION	2- 28
BATTERY	2- 29
Battery hazard prevention	2- 29
Starting engine with booster cables	2- 30
TOWING	2- 31
Safety rules for towing	2- 31
SAFETY MAINTENANCE INFORMATION	2- 32
Warning Tag	2- 32
Keep Work Place Clean and Tidy	2- 32
Appoint Leader when Working with Others	2- 33
Stop Engine Before Carrying Out Maintenance	2- 33
Two Workers for Maintenance when Engine is Running	2- 34
Proper Tools	2- 34
Accumulator	2- 35
Personnel	2- 35
Attachments	2- 35
Work Under the Machine	2- 35
Noise	2- 35
When Using Hammer	2- 36
Welding Works	2- 36
Removing Battery Terminals	2- 36
Safety First when Using High-pressure Grease to Adjust Track Tension	2- 36
Safety Rules for High-pressure Oil	2- 37
Precaution for High Fuel Pressure	2- 37
Safety Handling High-pressure Hoses	2- 37
Precaution for High Voltage	2- 37
Waste Materials	2- 38
Air Conditioner Maintenance	2- 38
Compressed Air	2- 38
Periodic Replacement of Safety Critical Parts	2- 38

SAFETY LABELS

The following warning signs and safety labels are used on this machine.

- Be sure that you fully understand the correct position and content of labels.
- To ensure that the content of labels can be read properly, be sure that they are in the correct place and always keep them clean. When cleaning them, do not use organic solvents or gasoline. These may cause the labels to peel off.
- There are also other labels in addition to the warning signs and safety labels. Handle those labels in the same way.
- If the labels are damaged, lost, or cannot be read properly, replace them with new ones. For details of the part numbers for the labels, see this manual or the actual label, and place an order with Komatsu distributor.

 LOCATION OF SAFETY LABELS

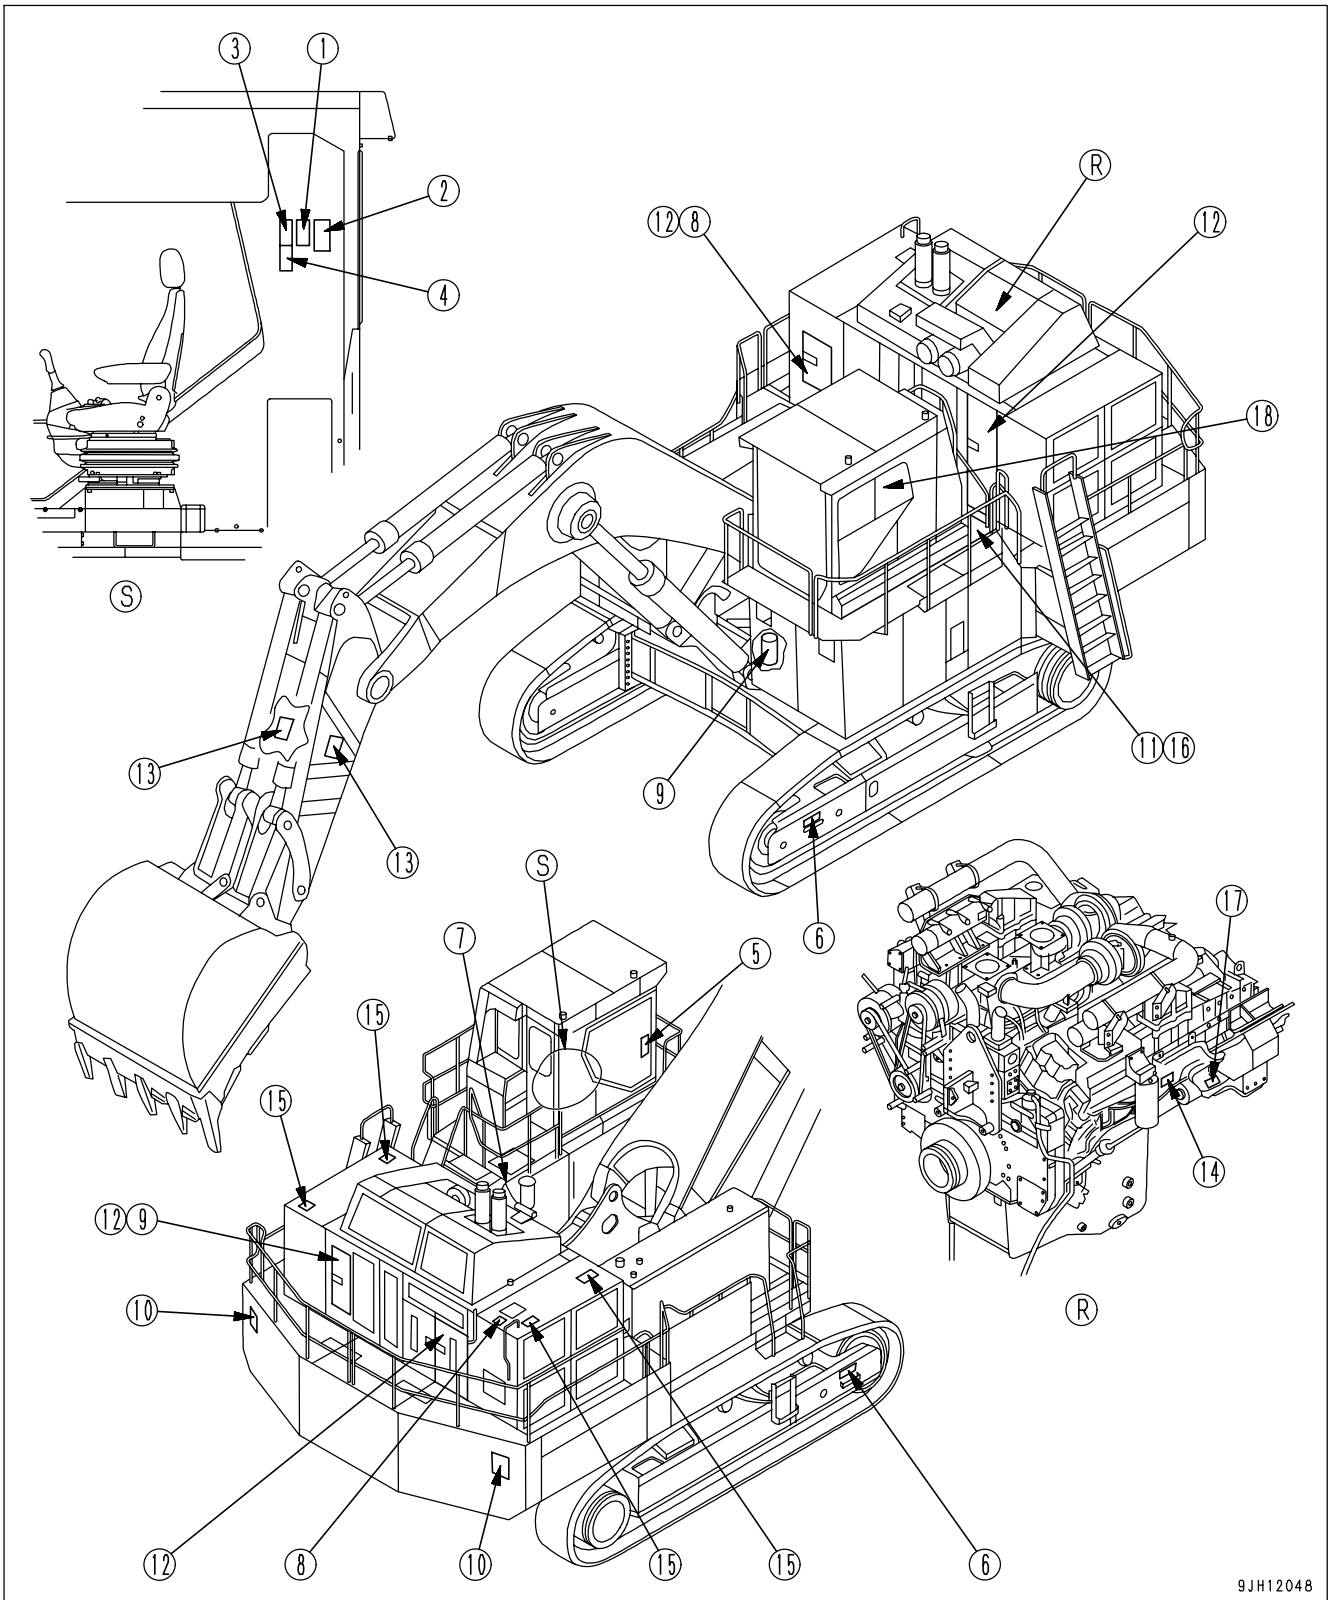


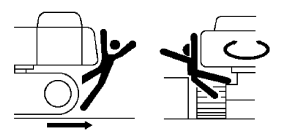
9JH12048

SAFETY LABELS

- (1) Caution before operating or maintaining machine
(09651-03001)

 WARNING
<p>Improper operation and maintenance can cause serious injury or death.</p> <p>Read manual and labels before operation and maintenance. Follow instructions and warnings in manual and in labels on machine.</p> <p>Keep manual in machine cab near operator. Contact Komatsu distributor for a replacement manual.</p>
09651-03001

- (2) Caution before operating (09802-03000)


 WARNING

<p>To prevent SEVERE INJURY or DEATH, do the following before moving machine or its attachments:</p> <ul style="list-style-type: none"> • Honk horn to alert people nearby. • Be sure no one is on or near machine or in swing area. • Rotate cab for full view of travel path if it can be done safely. • Use spotter if view is obstructed. <p>Follow above even if machine is equipped with travel alarm and mirrors.</p>
09802-03000

- (3) Caution for leaving operator's seat (09654-03001)

 WARNING
<p>To avoid hitting unlocked operation levers, lower equipment to ground and move LOCK LEVER (located near seat) to LOCK position before standing up from operator's seat.</p> <p>Sudden and unwanted machine movement can cause serious injury or death.</p>
09654-03001

(4) Caution for going close to electric cables (09801-03001)

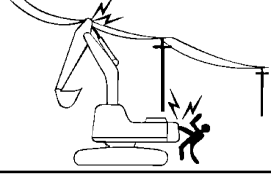⚠ DANGER



Hazardous voltage hazard. Serious injury or death can occur if machine or attachments are not kept safe distance away from electric lines.

VOLTAGE		SAFE DISTANCE
LOW VOLTAGE	100V 200V	2m
	6.600V	2m
	22.000V	3m
SPECIAL HIGH VOLTAGE	66.000V	4m
	154.000V	5m
	187.000V	6m
	275.000V	7m
	500.000V	11m


09801-03001

(5) Caution for operating pattern (09822-03000)

⚠ WARNING


In order to prevent an accident resulting in injury or death caused by error-operation, confirm the machine motion and indicated operating pattern, when operating machines. Pay attention to the circumference and operate slowly when confirming the machine motion.

ISO pattern

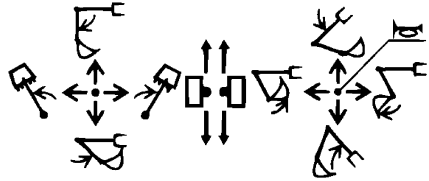

09822-03000

(6) Caution for adjusting track tension (09657-03003)

⚠ WARNING 

Compressed spring lubricator and grease are under hazardous high pressure and can cause serious injury or death.

- When adjusting track tension, only turn lubricator ONE TURN, turning lubricator further could cause lubricator and grease to fly off and hurt you. See manual for adjustment instructions.
- When loosening track shoe, if it does not loosen after turning lubricator ONE TURN, ask Komatsu dealer or distributor to disassemble.

09657-03003



Download the full PDF manual instantly.

Our customer service e-mail:

aservicemanualpdf@yahoo.com