

TABLE OF CONTENTS

1 SAFETY

INTRODUCTION	1-1
CLEANING, WAXING, AND POLISHING	1-1
CONTROLLING CORROSION	1-2
PROPELLERS	1-2
FUEL SYSTEM	1-7
LOADING	1-9
HORSEPOWER	1-10
FLOTATION	1-10
EMERGENCY EQUIPMENT	1-12
COMPASS	1-15
STEERING	1-17
ANCHORS	1-17
MISCELLANEOUS EQUIPMENT	1-18
BOATING ACCIDENT REPORTS	1-19
NAVIGATION	1-19

2 TUNING

INTRODUCTION	2-1
TUNE-UP SEQUENCE	2-2
COMPRESSION CHECK	2-3
SPARK PLUG INSPECTION	2-4
IGNITION SYSTEM	2-5
SYNCHRONIZING	2-5
BATTERY SERVICE	2-5
CARBURETOR ADJUSTMENTS	2-8
FUEL PUMPS	2-9
STARTER AND SOLENOID	2-11
INTERNAL WIRING HARNESS	2-12
WATER PUMP CHECK	2-13
PROPELLER	2-14
LOWER UNIT	2-15
BOAT TESTING	2-16

3 POWERHEAD

INTRODUCTION	3-1
Theory of Operation	3-1
CHAPTER ORGANIZATION	3-4
POWERHEAD DISASSEMBLING	3-5

HEAD SERVICE	3-6
REED SERVICE	3-7
Description	3-7
Cleaning and Service	3-10
Reed Assembling	3-10
Installation	3-10
EXHAUST COVER	3-10
Cleaning	3-12
TOP SEAL	3-12
Removal -- V4 Engine	3-12
Removal -- 3-Cylinder Engine	3-12
BOTTOM SEAL	3-12
Inspection	3-13
CENTERING PINS	3-14
MAIN BEARING BOLTS AND CRANKCASE SIDE BOLTS	3-15
CRANKCASE COVER	3-16
CONNECTING RODS AND PISTONS	3-16
Removal	3-17
Disassembling	3-18
Rod Inspection and Service	3-20
Piston and Ring Inspection and Service	3-22
Cleaning and Inspecting	3-23
Assembling	3-24
CRANKSHAFT	3-26
Removal	3-26
Cleaning and Inspecting	3-27
Assembling	3-28
CYLINDER BLOCK SERVICE	3-29
Honing Procedures	3-30
POWERHEAD ASSEMBLING	3-35
PISTON AND ROD ASSEMBLY INSTALLATION	3-35
CRANKSHAFT INSTALLATION NEEDLE MAIN AND ROD BEARINGS	3-37
CRANKCASE COVER	3-41
BOTTOM SEAL INSTALLATION TYPE ATTACHED TO LOWER END OF CRANKCASE	3-43

3 POWERHEAD (CONT)

EXHAUST COVER AND BYPASS COVER INSTALLATION	3-44
REED BOX INSTALLATION	3-44
HEAP INSTALLATION	3-45
BREAK-IN PROCEDURES	3-46

4 FUEL

INTRODUCTION	4-1
GENERAL CARBUJETION INFORMATION	4-1
FUEL SYSTEM	4-3

TROUBLESHOOTING	4-3
Fuel Pump Tests	4-5
Fuel Line Test	4-6
Rough Engine Idle	4-7
Excessive Fuel Consumption	4-7
Engine Surge	4-8
JOHNSON/EVINRUDE CARBURETORS	4-8

TYPE IA CARBURETOR DOWNDRAFT, DOUBLE BRL. WITH HIGH- AND LOW-SPEED NEEDLE VALVES	
50 HP -- 1958 AND 1959)
60 HP -- 1964 AND 1965)
75 HP -- 1960)
	4-9

TYPE IB CARBURETOR SAME AS TYPE IA EXCEPT WITH HIGH-SPEED FIXED ORIFICE	
60 HP -- 1366 AND 1967)
65 HP -- 1968)
75 HP -- 1961 THRU 1965)
80 HP -- 1966 AND 1967)
85 HP -- 1968)
	4-9

DESCRIPTION	4-9
REMOVAL	4-10
CARBURETOR DISASSEMBLING	4-11
CLEANING AND INSPECTING	4-14
ASSEMBLING	4-17

TYPE II CARBURETOR	
30 HP -- 1964 AND 1965)
100 HP -- 1966 TMRU 1968)
	4-22

DESCRIPTION	4-22
Choke System	4-22
REMOVAL	4-22
DISASSEMBLING	4-24

CLEANING AND INSPECTING	4-27
ASSEMBLING	4-29

CHOKE SYSTEM SERVICE	4-35
Heat/Electric Choke	
Removal	4-35
Installation	4-37

All Electric Choke	
Removal & Disassembling	4-38
Assembling	

Water Choke	
Description	4-39
Removal	4-40
Installation	4-41

TYPE III CARBURETOR	
55 hp -- 1968 AND 1969)
60 HP -- 1970 AND 1971)
	4-43

REMOVAL	4-43
DISASSEMBLING	4-44
CLEANING AND INSPECTING	4-46

ASSEMBLING	4-47
INSTALLATION	4-50

TYPE IVA CARBURETOR WITH LOW-SPEED NEEDLE VALVE AND FIXED HIGH-SPEED ORIFICE	
85 HP -- 1969)
100 HP -- 1971)
115 HP -- 1969 AND 1970)
125 HP -- 1971)
	4-51

TYPE IVB CARBURETOR WITH FIXED LOW-SPEED AND HIGH-SPEED ORIFICES	
85 HP -- 1972)
100 HP -- 1972)
125 HP -- 1972)
	4-51

DESCRIPTION	4-51
REMOVAL	4-51
DISASSEMBLING	4-53
CLEANING AND INSPECTING	4-54

ASSEMBLING	4-55
INSTALLATION	4-59
FUEL PUMP SERVICE	4-61

Troubleshooting	4-62
Removal and Repair	4-62
Cleaning and Inspecting	4-64
Assembling and Installation	4-64

FUEL TANK SERVICE	4-67
-------------------	------

5 IGNITION

INTRODUCTION	5-1
Ignition Systems	5-2
SPARK PLUG EVALUATION	5-3
Removal	5-3
EXAMINATION	5-3
OTHER IGNITION PARTS	5-5
Description	5-5

TYPE I IGNITION

DISTRIBUTOR MAGNETO	
50 HP -- 1958 AND 1959)
60 HP -- 1964 THRU 1966)
75 HP -- 1960 THRU 1965) 5-8
80 HP -- 1966)
Description	5-8
TROUBLESHOOTING	5-10
SERVICING	5-13
General Information	5-13
Removal	5-13
Servicing	5-15
Cleaning and Inspecting	5-18
Installation	5-19
BELT REPLACEMENT	5-27
Engine Mistimed	5-27

TYPE II IGNITION

DISTRIBUTOR BATTERY	
75 HP -- 1961 THRU 1965)
80 HP -- 1966 AND 1967)
90 HP -- 1964 AND 1965) 5-31
100 HP -- 1966)
Description	5-31
TROUBLESHOOTING	5-34
SERVICING	5-37
Removal	5-37
Cleaning and Inspecting	5-39
Installation	5-42
BELT REPLACEMENT	5-46
Engine Mistimed	5-46
Installation	5-49

TYPE III IGNITION

CAPACITOR DISCHARGE (CD)	
WIM SENSOR	
100 MP -- 1967, 1968,)
AND 1972)
115 HP -- 1969 AND 1970) 5-53
125 HP -- 1971 AND 1972)
TROUBLESHOOTING	
100 HP -- 1967 AND 1968	5-57
TROUBLESHOOTING	
115 HP -- 1969 AND 1370	5-61

TRUBLESHOOTING

100 HP -- 1972)
125 HP -- 1971 AND 1972) 5-65
COMPONENT REPLACEMENT	
Rotor Replacement	
100 hp -- 1967	5-68
Sensor Replacement	
100 hp -- 1967	5-68
Powerpack Replacement	
100 hp -- 1967	5-68
COMPONENT REPLACEMENT	
IGNITION PARTS UNDER	
FLYWHEEL: STATOR,	
DISTRIBUTOR CAP,	
DISTRIBUTOR ROTOR,	
SENSOR ROTOR, AND SENSOR	
100 MP -- 8968 ANC 1972)
115 HP -- 1969 AND 1970) 5-69
125 HP -- 1971 AND 1972)
Removal	5-69
Cleaning and Inspecting	5-71
Assembling	5-71

CAPACITOR DISCHARGE (CD)

WIM BREAKER POINTS	
55 HP 3-CYL. -- 1968)
AND 1969)
60 HP 3-CYL. -- 1970)
AND 1971)
65 MP V4 -- 1968) 5-74
85 HP V4 -- 1968 THRU 1972)
100 MP V4 -- 1971)
Description	5-74
Safety	5-74
General Troubleshooting	
All CD Models	5-75
Troubleshooting	
55 hp -- 1968 and 1969)
65 hp -- 1968) 5-78
85 hp -- 1968)
Troubleshooting	
85 hp -- 1969 thru 1972) 5-81
100 hp -- 1971)
Troubleshooting	
60 hp -- 1970 and 1971	5-84

CD IGNITION SYSTEM

PARTS REPLACEMENT	
AND ADJUSTMENT	
55 HP 3-CYL -- 1968 & 1969)
60 HP 3-CYL -- 1970 & 1971)
65 HP V4 -- 1968) 5-87
85 HP V4 -- 1968 THRU 1972)
100 HP V4 -- 1971)
Removal	5-87
Cleaning and Inspecting	5-89

5 IGNITION (CONT)

SYNCHRONIZING		
DISTRIBUTOR AND CARBURETOR		
MAGNETO IGNITION MODELS		
50 HP 1958 AND 1959)	5-92
SYNCHRONIZING		
DISTRIBUTOR AND CARBURETOR		
BATTERY IGNITION		
MAGNETO IGNITION		
60 HP -- 1964 THRU 1966)	
75 HP -- 1960 THRU 1965)	
80 HP -- 1966 AND 1967)	5-94
90 HP -- 1964 AND 1965)	
100 HP -- 1966 AND 1967)	
SYNCHRONIZING		
FUEL SYSTEM		
AND IGNITION SYSTEM		
55 HP -- 1968 AND 1969)	
60 HP -- 1970 AND 1971)	5-97
SYNCHRONIZING		
65 HP -- 1968)	
85 HP -- 1968)	5-97
100 HP -- 1968)	
SYNCHRONIZING		
85 HP -- 1969)	5-98
SYNCHRONIZING		
85 HP -- 1970)	
115 HP -- 1969 AND 1970)	5-99
SYNCHRONIZING		
85 HP -- 1971 AND 1972)	
100 HP -- 1971 AND 1972)	5-99
125 HP -- 1971 AND 1972)	
TIMING POINTER ADJUSTMENT		
85 HP -- 1971 AND 1972)	
100 HP -- 1971 AND 1972)	5-100
125 HP -- 1971 AND 1972)	
TIMING		
55 HP -- 1968 AND 1969)	
60 HP -- 1970 AND 1971)	5-101
TIMING		
65 HP -- 1968)	
85 HP -- 1968 THRU 1970)	
100 HP -- 1968 AND 1969)	5-102
115 HP -- 1969 AND 1970)	
TIMING		
CD IGNITION		
FLYWHEEL WITH SENSOR		
100 HP 1967)	5-103
TIMING		
125 HP -- 1971 AND 1972)	5-104

6 ELECTRICAL

INTRODUCTION		6-1
BATTEPIES		6-1
Jumper Cables		6-5
Dual Battery Installation		6-5
GAUGES AND HORNS		6-7
FUEL SYSTEM		
Fuel Gauge		6-8
Fuel Gauge Hookup		6-8
Fuel Gauge Troubleshooting		6-9
TACHOMETER		6-10
HORNS		6-10
ELECTRICAL SYSTEM		
GENERAL INFORMATION		6-11
GENERATOR CHARGING CIRCUIT		
Troubleshooting		6-12
Generator Service		6-10
Cleaning and Inspecting		6-18
Assembling		6-20
ALTERNATOR CHARGING CIRCUIT		
Operation		6-22
Troubleshooting		6-24
ALTERNATOR WITH		
BATTERY IGNITION		
MODELS 1961 THRU 1967		6-25
ALTERNATOR WITH CD IGNITION		
100 HP -- 1967 AND		
ALL CD IGNITION 1968		
THRU 1972		6-27
Troubleshooting		6-27
CHOKE CIRCUIT SERVICE		6-31
STARTER MOTOR CIRCUIT SERVICE		
Circuit Description		6-31
Starter Motor Description		6-32
Troubleshooting		6-34
Testing		6-34
STARTER MOTOR DRIVE GEAR		
Starter Removal		
All V4's 1958 Thru 1968		6-37
Starter Drive Removal		6-37
Cleaning and Inspecting		6-38
Installation		6-38
STARTER DRIVE GEAR SERVICE		
55 HP 3-CYLINDER		
1968 AND 1969)	
60 HP 3-CYLINDER		
1970 AND 1971)	
85 HP V4 -- 1969 THRU 1972)	6-39
115 HP V4 -- 1969 AND 1970)	
125 HP V4 -- 1971 AND 1972)	
Removal		6-39
Disassembling		6-40
Cleaning and Inspecting		6-41
Assembling		6-41

DELCO-REMY SERVICE	
Removal	6-41
Disassembling	6-42
Armature Testing	6-43
Cleaning and Inspecting	6-44
Assembling	6-45

AUTOLITE SERVICE	
Removal	6-47
Disassembling	6-48
Armature Testing	6-48
Cleaning and Inspecting	6-50

PRESTOLITE SERVICE	
Removal from Starboard	
Installation with	
Separate Drive Gear	6-52
Removal from Port Side	
Installation with	
Drive Gear on	
Armature Shaft	6-52
Disassembling	6-53
Armature Testing	6-53
Cleaning and Inspecting	6-55
Assembling	6-56

STARTER MOTOR TESTING	6-57
STARTER MOTOR INSTALLATION	6-57

7 ACCESSORIES

DESCRIPTION	7-1
SHIFT BOXES	7-1
OLD-STYLE DOUBLE LEVER	
Troubleshooting	7-3
Disassembling	7-4
Cleaning and Inspecting	7-5
Assembling	7-5
NEW-STYLE SWIFT LEVER	
Troubleshooting	7-6
Removal	7-8
Disassembling	7-8
Cleaning and Inspecting	7-9
Assembling	7-10
ELECTRIC GEAR BOXES	
AND SINGLE LEVER CONTROL	
JOHNSON UNITS	7-12
Troubleshooting	7-12
Disassembling	7-15
Cleaning and Inspecting	7-16
Assembling	7-17
PUSHBUTTON SHIFT BOX	
EVINRUDE UNITS ONLY	7-1"
Troubleshooting	7-20
Disassembling	7-22
Cleaning and Inspecting	7-24
Assembling	7-24

HYDRO-ELECTRIC SHIFT BOX	
60 HP -- 1970 AND 1971)
85 HP -- 1970 THRU 1972)
100 HP -- 1971 AND 1972) 7-26
115 HP -- 1970)
125 HP -- 1971 AND 1972)

Troubleshooting	7-26
Disassembling	7-29
Cleaning and Inspecting	7-31
Assembling	7-32

CABLE END FITTING	
INSTALLATION AT	
ENGINE END	7-34

8 LOWER UNIT

DESCRIPTION	8-11
CHAPTER COVERAGE	8-1
ILLUSTRATIONS	8-2
PROPELLER SERVICE	8-2
Propeller with Shear Pin	
Removal	8-2
Installation	8-3
Exhaust Propeller	8-3
Removal	8-4
Installation	8-4

LOWER UNIT LUBRICATION	8-5
Draining	8-5
Filling	8-6

TROUBLESHOOTING	
MANUAL SHIFT	
TYPE I AND TYPE II UNITS	
50 HP -- 1958 AND 1959)
60 HP -- 1964 THRU 1967)
65 HP -- 1968)
75 HP -- 1960 THRU 1965) 8-7
80 HP -- 1966 AND 1967)
85 HP -- 1968)

TYPE I LOWER UNIT SERVICE	
MANUAL SHIFT	
SPLIT LOWER UNIT	
50 HP -- 1958 AND 1959)
60 HP -- 1964 THRU 1967) 8-10
65 HP -- 1968)
Removal	8-10

WATER PUMP REMOVAL	8-11
Lower Unit Disassembling	8-11
Cleaning and Inspecting	8-14
Lower Unit Assembling:	8-16

WATER PUMP INSTALLATION	8-19
Lower Unit Installation	8-20

8 LOWER UNIT (CONT)

TYPE H LOWER UNIT SERVICE

MANUAL SHIFT	
SINGLE ENCLOSED HOUSING	
60 HP -- 1964 THRU 1967)	
65 HP -- 1068	
75 HP -- 1960 THRU 1965)	8-22
80 HP -- 1066 ANP 1967)	
85 HP -- 1968)	

Troubleshooting	8-23
Removal	8-23

WATER PUMP REMOVAL	8-24
Lower Unit Disassembling	8-24
Cleaning and Inspecting	8-29
Lower Unit Assembling	8-31

WATER PUMP INSTALLATION	8-36
Lower Unit Installation	8-38

TYPE III ELECTROMATIC

LOWER UNIT SERVICE	
75 HP -- 1962 THRU 1965)	
80 HP -- 1966 AND 1967)	
85 HP -- 1968)	8-40
90 HP -- 1964 AND 1965)	
100 HP -- 1966 THRU 1968)	

Description	
Type III and Type IV Units	8-40
Troubleshooting	
Type III and Type IV Units	8-48
Removal	
Type III Units	8-43

WATER PUMP REMOVAL	8-45
Disassembling	8-44
Cleaning and Inspecting	8-50
Assembling	8-52

WATER PUMP INSTALLATION	8-60
Lower Unit Installation	8-61

TYPE IV LOWER UNIT

ELECTROMATIC	
800 HP -- 1966 THRU 1968	8-62
Troubleshooting	8-63

WATER PUMP REMOVAL	8-64
Lower Unit Disassembling	8-64
Cleaning and Inspecting	8-69
Lower Unit Assembling	8-71

WATER PUMP INSTALLATION	8-80
Lower Unit Installation	8-81

TYPE V LOWER UNIT

ELECTRIC SHIFT	
TWO SOLENOIDS	
55 HP -- 1968 AND 1969)	
60 HP -- 1970 AND 1971)	
85 HP -- 1969 THRU 1972)	8-82
100 HP -- 1971 AND 1972)	
115 HP -- 1969 AND 1970)	
125 HP -- 1971 AND 1972)	

Description	8-82
Troubleshooting	8-83
Lower Unit Removal	8-86

WATER PUMP REMOVAL	8-86
Lower Unit Disassembling	8-87
"Frozen" Propeller Shaft	8-83
Cleaning and Inspecting	8-93
Lower Unit Assembling	8-95

WATER PUMP INSTALLATION	8-105
Lower Unit Installation	8-108

"FROZEN" PROPELLER

Description	8-110
Removal	8-110

9 HAND STARTER

ENGINES WITH MANUAL

SHIFT AND MAGNETO IGNITION	
50 HP V4 -- 1958 AND 1959)	9-1
75 HP V4 -- 1960 THRU 1965)	

Description	9-1
Removal	9-2
Disassembling	9-3
Cleaning and Inspecting	9-4
Assembling	9-5
Rope Installation	9-5
Starter Installation	9-8

10 MAINTENANCE

INTRODUCTION	10-1
ENGINE SERIAL NUMBERS	10-2
FIBERGLASS HULLS	10-3
ALUMINUM HULLS	10-3
BELOW WATERLINE SERVICE	10-4
SUBMERGED ENGINE SERVICE	10-5
WINTER STORAGE	10-7

LOWER UNIT SERVICE	10-9
Propellers	10-9
Draining Lower Unit	10-12
Filling Lower Unit	10-12

BATTERY STORAGE	10-14
PRESEASON PREPARATION	10-14

APPENDIX

METRIC CONVERSION CHART	A-1	75 hp V4 with Magneto, Generator, and Standard Shift -- 1961	A-19
DRILL SIZE CONVERSION CHART	A-2	75 hp thru 90 hp V4 with Electric Shift 1961 thru 1965	A-20
TORQUE SPECIFICATIONS	A-3	80 hp V4 with Generator -- 1966	A-21
ENGINE SPECIFICATIONS AND TUNE-UP ADJUSTMENTS	A-4	80 hp V4 -- 1967	A-22
POWERHEAD SPECIFICATIONS	A-8	80 hp V4 with Electric Shift -- 1967	A-23
GEAR OIL CAPACITIES	A-10	85 hp V4 -- 1968	A-24
OIL/FUEL MIXTURE	A-10	85 hp V4 with Electric Shift -- 1968	A-25
ELECTRICAL SPECIFICATIONS	A-11	85 hp V4 with Alternator 1969 and 1970	A-26
WIRE IDENTIFICATION DRAWINGS		85 hp V4 with Alternator -- 1972	A-27
55 hp 3-Cylinder -- 1968	A-12	85 hp and 100 hp V4 with Alternator -- 1971	A-28
55 hp 3-Cylinder with Alternator -- 1969	A-13	100 hp V4 with CD Ignition 1967 and 1968	A-29
60 hp V4 with Generator 1964 thru 1966	A-14	100 hp V4 and 125 hp V4 with Alternator -- 1972	A-30
60 hp V4 -- 1967 also VX-12M -- 1967	A-15	115 hp V4 -- 1969 and 1970	A-31
60 hp 3-Cylinder with Alternator -- 1970	A-16	125 hp V4 -- 1971	A-32
60 hp 3-Cylinder with Alternator -- 1971	A-17		
65 hp V4 -- 1968	A-18		


1 SAFETY

1-1 INTRODUCTION

Your boat probably represents a sizeable investment for you. In order to protect this investment and to receive the maximum amount of enjoyment from your boat it must be cared for properly while being used and when it is out of the water. Always store your boat with the bow higher than the stern and be sure to remove the transom drain plug and the inner hull drain plugs. If you use any type of cover to protect your boat, plastic, canvas, whatever, be sure to allow for some movement of air through the hull. Proper ventilation will assure evaporation of any condensation that may form due to changes in temperature and humidity.

1-2 CLEANING, WAXING, AND POLISHING

An outboard boat should be washed with clear water after each use to remove surface dirt and any salt deposits from use in salt water. Regular rinsing will extend the time between waxing and polishing. It will also give you "pride of ownership", by having a sharp looking piece of equipment. Elbow grease, a mild detergent, and a brush

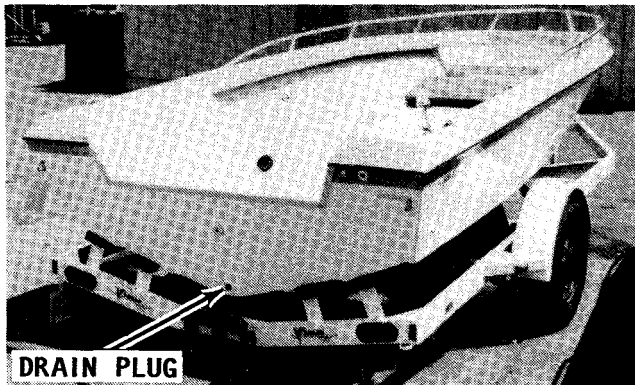


Whenever the boat is stored, for long or short periods, the bow should be slightly higher than the stern and the drain plug in the transom removed to ensure proper drainage of rain water.

will be required to remove stubborn dirt, oil, and other unsightly deposits.


Stay away from harsh abrasives or strong chemical cleaners. A white buffing compound can be used to restore the original gloss to a scratched, dull, or faded area. The finish of your boat should be thoroughly cleaned, buffed, and polished at least once each season. Take care when buffing or polishing with a marine cleaner not to overheat the surface you are working, because you will burn it.

A small outboard engine mounted on an aluminum boat should be removed from the boat and stored separately. Under all circumstances, any outboard engine must **ALWAYS** be stored with the powerhead higher than the lower unit and exhaust system. This position will prevent water trapped in the lower unit from draining back through the exhaust ports into the powerhead.

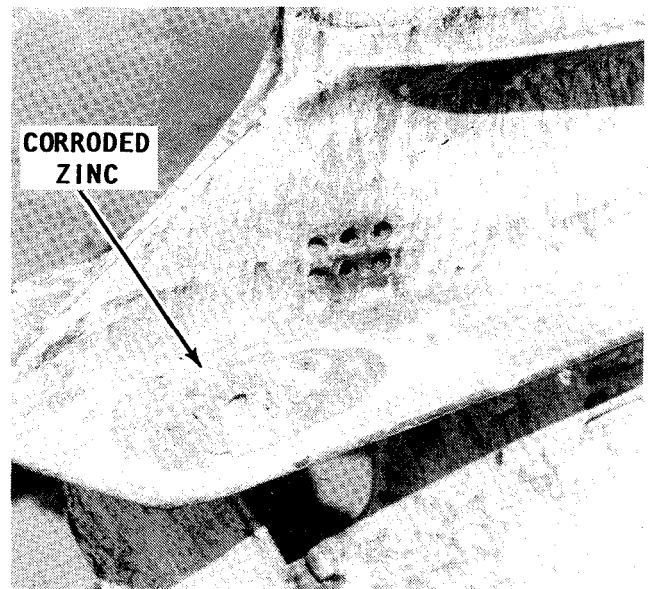

Lower unit badly corroded because the zinc was not replaced. Once the zinc is destroyed, more costly parts will be damaged. Attention to the zinc condition is extremely important during boat operation in salt water.

I-2 SAFETY

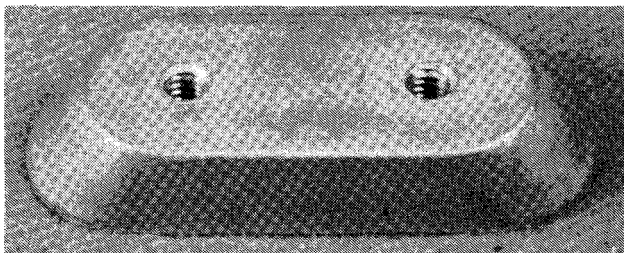

A new zinc prior to installation. This inexpensive item will save corrosion on more valuable parts.

Most outboard engines have a flat area on the back side of the powerhead. When the engine is placed with the flat area on the powerhead and the lower unit resting on the floor, the engine will be in the proper altitude with the powerhead higher than the lower unit.


1-3 CONTROLLING CORROSION

Since man first started out on the water, corrosion on his craft has been his enemy. The first form was merely rot in the wood and then it was rust, followed by other forms of destructive corrosion in the more modern materials. One defense against corrosion is to use similar metals throughout the boat. Even though this is difficult to do in designing a new boat, particularly the undersides, similar metals should be used whenever and wherever possible.

A second defense against corrosion is to insulate dissimilar metals. This can be done by using an exterior coating of Sea Skin or by insulating them with plastic or rubber gaskets.

Using Zinc

The proper amount of zinc attached to a boat is extremely important. The use of too much zinc can cause wood burning by placing the metals close together and they become "hot". On the other hand, using too

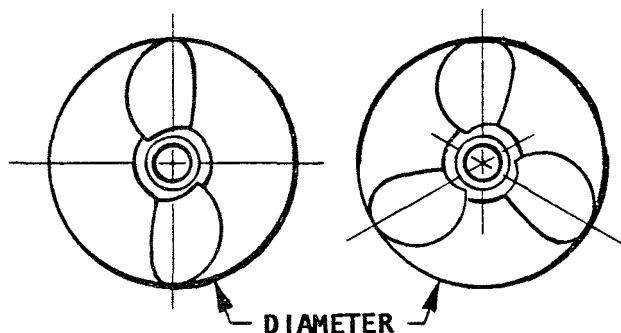

Diameter and pitch are the two basic dimensions of a propeller. The diameter is measured across the circumference of a circle scribed by the propeller blades, as shown.


small a zinc plate will cause more rapid deterioration of the metal you are trying to protect. If in doubt, consider the fact that it is far better to replace the zincs than to replace planking or other expensive metal parts from having an excess of zinc.

When installing zinc plates, there are two routes available. One is to install many different zincs on all metal parts and thus run the risk of wood burning. Another route, is to use one large zinc on the transom of the boat and then connect this zinc to every underwater metal part through internal bonding. Of the two choices, the one zinc on the transom is the better way to go.


Small outboard engines have a zinc plate attached to the cavitation plate. Therefore, the zinc remains with the engine at all times.

1-4 PROPELLERS

As you know, the propeller is actually what moves the boat through the water. This is how it is done. The propeller operates in water in much the manner as a wood screw does in wood. The propeller "bites" into the water as it rotates. Water passes between the blades and out to the rear in the shape of a cone. The propeller "biting" through the water in much the same manner as a wood auger is what propels the boat.

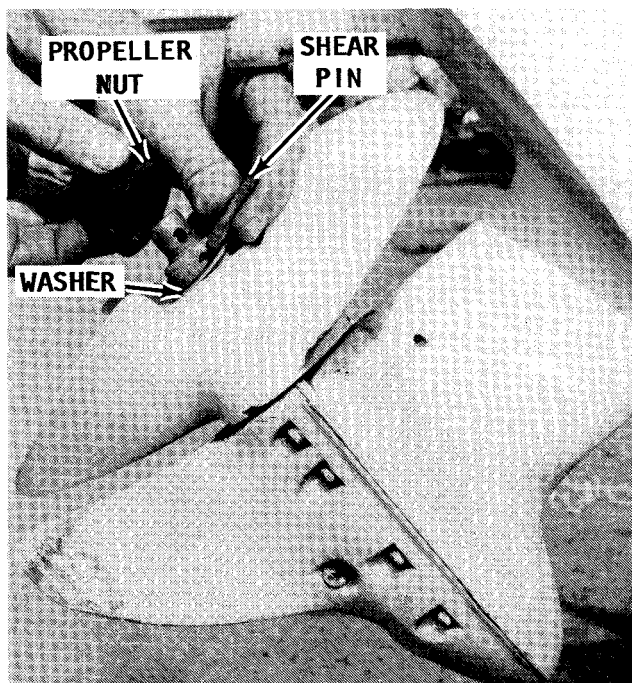

Propeller and associated parts in order, washer, shear-pin, and nut, ready for installation.

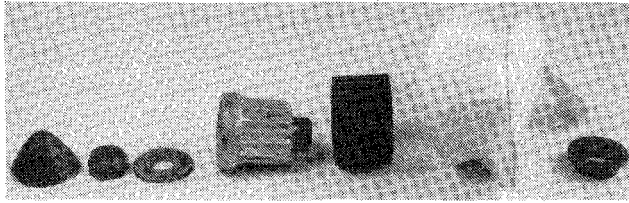

Arrangement of propeller and associated parts, in order, for a small horsepower engine.

Diameter and Pitch


Only two dimensions of the propeller are of real interest to the boat owner: the diameter and the pitch. These two dimensions are stamped on the propeller hub and always appear in the same order: the diameter first and then the pitch. For instance, the number 15-19 stamped on the hub, would mean the propeller had a diameter of 15 inches with a pitch of 19.

The diameter is the measured distance from the tip of one blade to the tip of the other as shown in the accompanying illustration.

The pitch of a propeller is the angle at which the blades are attached to the hub. This figure is expressed in inches of water travel for each revolution of the propeller. In our example of a 15-19 propeller, the propeller should travel 19 inches through the water each time it revolves. If the propeller action was perfect and there was no slippage, then the pitch multiplied by the propeller rpms would be the boat speed.

Most outboard manufacturers equip their units with a standard propeller with a diameter and pitch they consider to be best suited to the engine and the boat. Such a propeller allows the engine to run as near to the rated rpm and horsepower (at full throttle) as possible for the boat design.

The blade area of the propeller determines its load-carrying capacity. A two-blade propeller is used for high-speed running under very light loads.

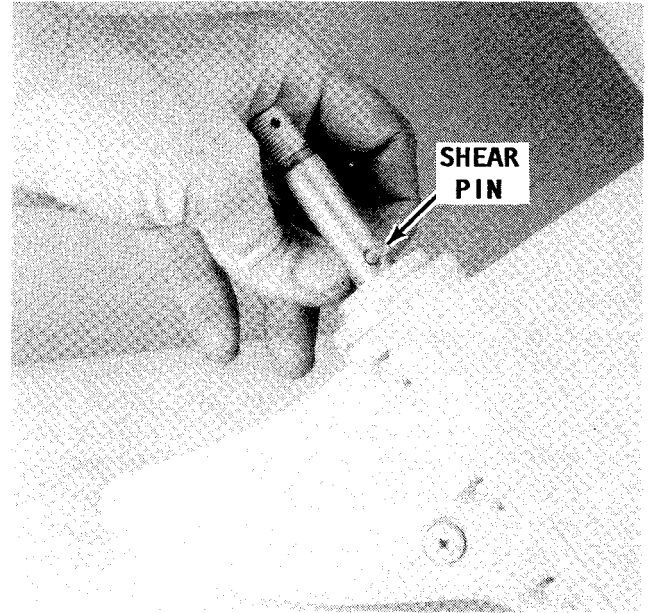

Shear-pin installed behind the propeller instead of in front of the propeller.

A four-blade propeller is installed in boats intended to operate at low speeds under very heavy loads such as tugs, barges, or large houseboats. The three-blade propeller is the happy medium covering the wide range between the high performance units and the load carrying workhorses.

Propeller Selection

There is no standard propeller that will do the proper job in very many cases. The list of sizes and weights of boats is almost endless. This fact coupled with the many boat-engine combinations makes the propeller selection for a specific purpose a difficult job. In fact, in many cases the propeller is changed after a few test runs. Proper selection is aided through the use of charts set up for various engines and boats. These charts should be studied and understood when buying a propeller. However, bear in mind, the charts are based on average boats

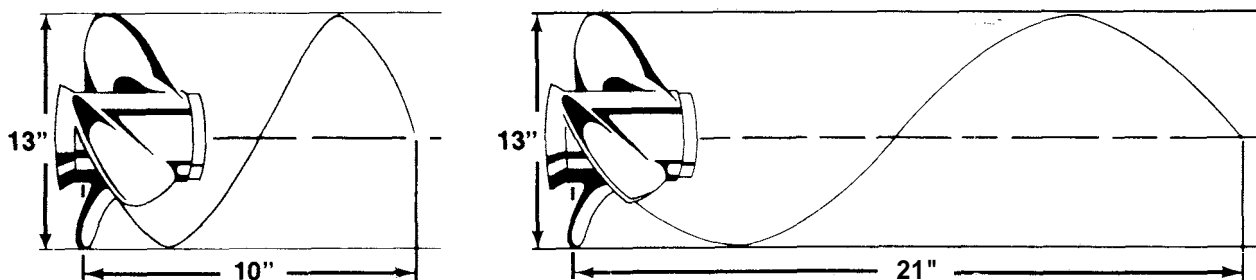


Diagram to explain the pitch dimension of a propeller. The pitch is the theoretical distance a propeller would travel through the water if there was no slippage.

1-4 SAFETY

with average loads, therefore, it may be necessary to make a change in size or pitch, in order to obtain the desired results for the hull design or load condition.

A wide range of pitch is available for each of the larger horsepower engines. The choice available for the smaller engines, up to about 25 hp, is restricted to one or two sizes. Remember, a low pitch takes a smaller bite of the water than the high pitch propeller. This means the low pitch propeller will travel less distance through the water per revolution. The low pitch will require less horsepower and will allow the engine to run faster and more efficiently.

It stands to reason, and it's true, that the high pitch propeller will require more horsepower, but will give faster boat speed if the engine is allowed to turn to its rated rpm.


If a higher-pitched propeller is installed on a boat, in an effort to get more speed, extra horsepower will be required. If the extra power is not available, the rpms will be reduced to a less efficient level and the actual boat speed will be less than if the lower-pitched propeller had been left installed.

All engine manufacturers design their units to operate with full throttle at, or slightly above, the rated rpm. If you run your engine at the rated rpm, you will increase spark plug life, receive better fuel economy, and obtain the best performance


from your boat and engine. Therefore, take time to make the proper propeller selection for the rated rpm of your engine at full throttle with what you consider to be an average load. Your boat will then be correctly balanced between engine and propeller throughout the entire speed range.

A reliable tachometer must be used to measure engine speed at full throttle to ensure the engine will achieve full horsepower and operate efficiently and safely. To test for the correct propeller, make your run in a body of smooth water with the lower unit in forward gear at full throttle. Observe the tachometer at full throttle. **NEVER** run the engine at a high rpm when a flush attachment is installed. If the reading is above the manufacturer's recommended operating range, you must try propellers of greater pitch, until you find the one that allows the engine to operate continually within the recommended full throttle range.

If the engine is unable to deliver top performance and you feel it is properly tuned, then the propeller may not be to blame. Operating conditions have a marked effect on performance. For instance, an engine will lose rpm when run in very cold water. It will also lose rpm when run in salt water as compared with fresh water. A hot, low-barometer day will also cause your engine to lose power.

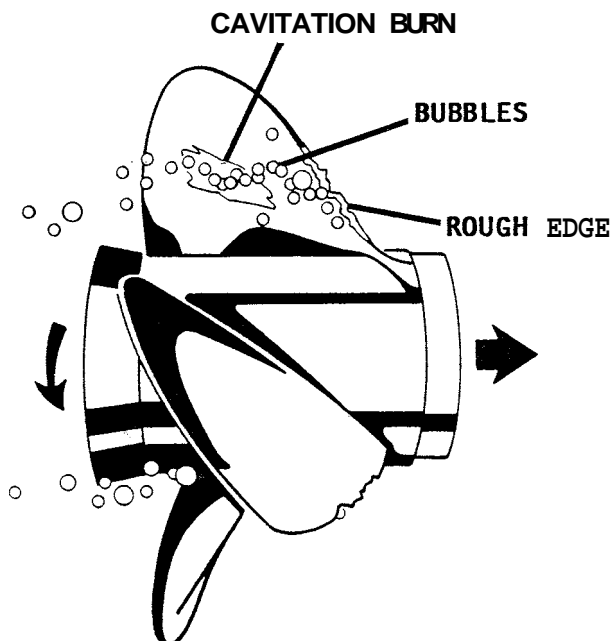

Cavitation (air bubbles) formed at the propeller. Manufacturers are constantly fighting this problem, as explained in the text.

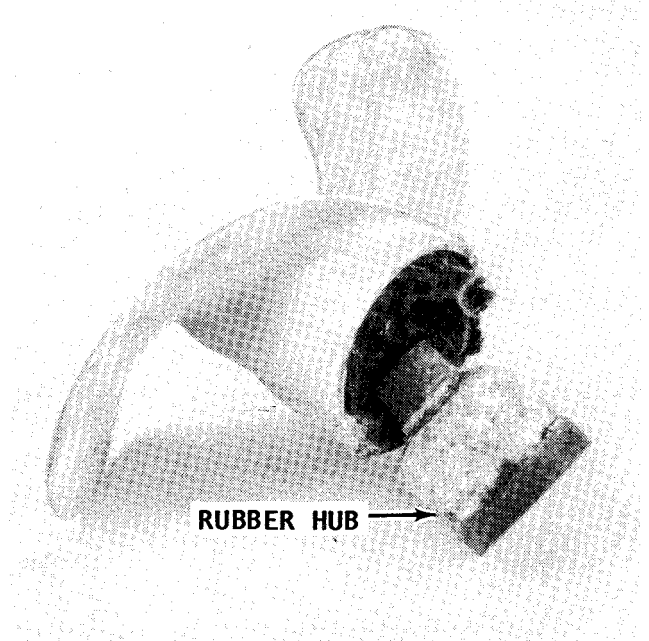

Example of a damaged propeller. This unit should have been replaced long before this amount of damage was sustained.


Ventilation

Ventilation is the forming of voids in the water just ahead of the propeller blades. Marine propulsion designers are constantly fighting the battle against the formation of these voids due to excessive blade tip speed and engine wear. The voids may be filled with air or water vapor, or they may actually be a partial vacuum. Ventilation may be caused by installing a piece of equipment too close to the lower unit, such as the knot indicator pickup, depth sounder, or bait tank pickup.

Vibration

Your propeller should be checked regularly to be sure all blades are in good condition. If any of the blades become bent or nicked, this condition will set up vibrations in the drive unit and the motor. If the vibration becomes very serious it will cause a loss of power, efficiency, and boat performance. If the vibration is allowed to continue over a period of time it can have a damaging effect on many of the operating parts.

Vibration in boats can never be completely eliminated, but it can be reduced by keeping all parts in good working condition and through proper maintenance and lubrication. Vibration can also be reduced in some cases by increasing the number of blades. For this reason, many racers use

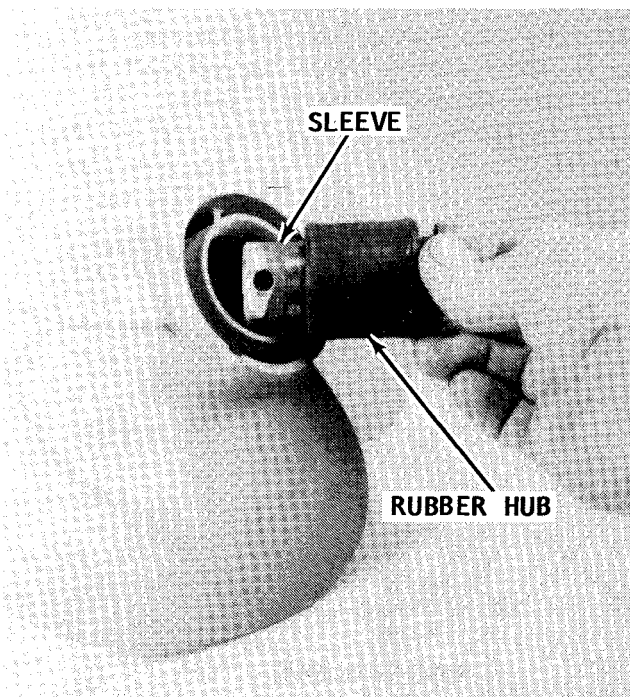

Rubber hub removed from a propeller. This hub was removed because the hub was slipping in the propeller.

two-blade props and luxury cruisers have four- and five-blade props installed.

Shock Absorbers

The shock absorber in the propeller plays a very important role in protecting the shafting, gears, and engine against the shock of a blow, should the propeller strike an underwater object. The shock absorber allows the propeller to stop rotating at the instant of impact while the power train continues turning.

How much impact the propeller is able to withstand before causing the clutch hub to slip is calculated to be more than the force needed to propel the boat, but less than the amount that could damage any part of the power train. Under normal propulsion loads of moving the boat through the water, the hub will not slip. However, it will slip if the propeller strikes an object with a force that would be great enough to stop any part of the power train.

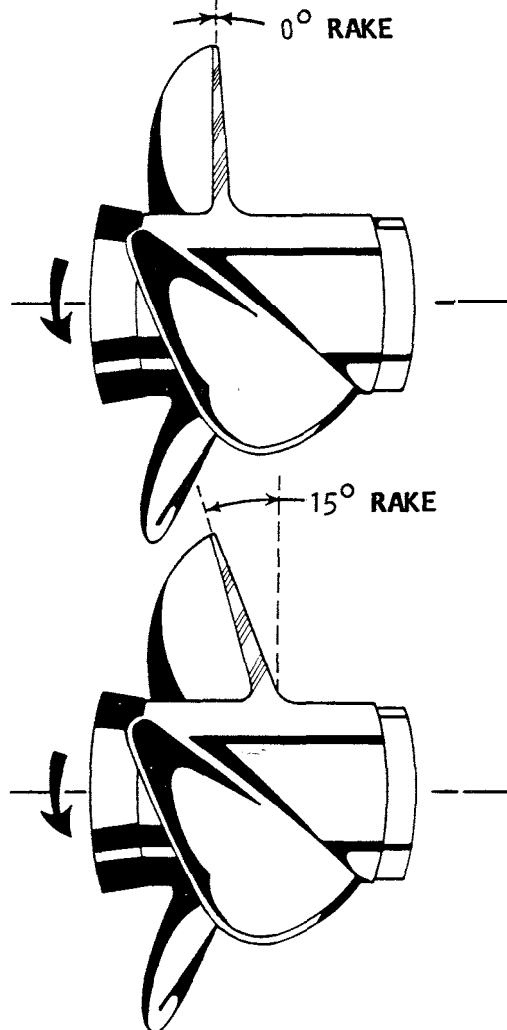


Illustration depicting the rake of a propeller, as explained in the text.

If the power train was to absorb an impact great enough to stop rotation, even for an instant, something would have to give and be damaged. If a propeller is subjected to repeated striking of underwater objects, it would eventually slip on its clutch hub under normal loads. If the propeller would start to slip, a new hub and shock absorber would have to be installed.

Propeller Rake


If a propeller blade is examined on a cut extending directly through the center of the hub, and if the blade is set vertical to the propeller hub, as shown in the accompanying illustration, the propeller is said to have a zero degree (0°) rake. As the blade slants back, the rake increases. Standard propellers have a rake angle from 0° to 15° .

A higher rake angle generally improves propeller performance in a cavitating or ventilating situation. On lighter, faster boats, higher rake often will increase performance by holding the bow of the boat higher.

Progressive Pitch

Progressive pitch is a blade design innovation that improves performance when forward and rotational speed is high and/or the propeller breaks the surface of the water.



Progressive pitch starts low at the leading edge and progressively increases to the trailing edge, as shown in the accompanying illustration. The average pitch over the entire blade is the number assigned to that propeller. In the illustration of the progressive pitch, the average pitch assigned to the propeller would be 21.

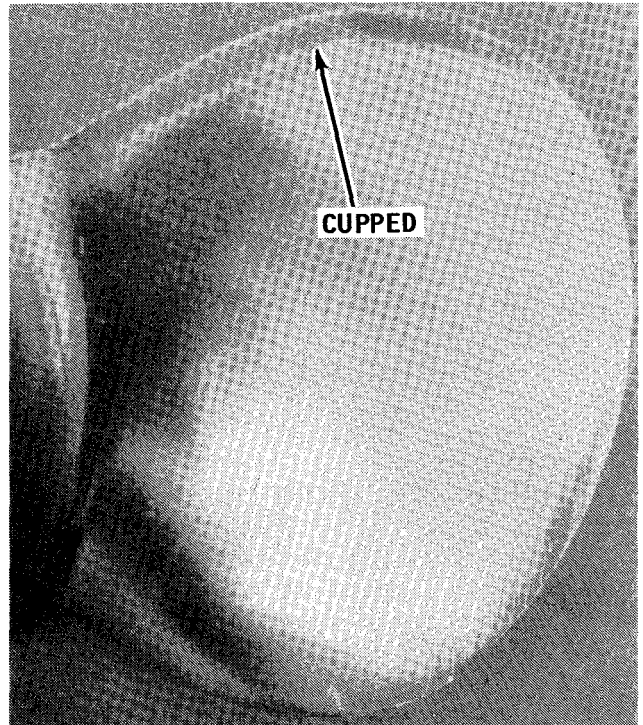

Propeller with a "cupped" leading edge. "Cupping" gives the propeller a better "hold" in the water.

Cupping

If the propeller is cast with a edge curl inward on the trailing edge, the blade is said to have a cup. In most cases, cupped blades improve performance. The cup helps the blades to "HOLD" and not break loose, when operating in a cavitating or ventilating situation. This action permits the engine to be trimmed out further, or to be mounted higher on the transom. This is especially true on high-performance boats. Either of these two adjustments will usually add to higher speed.

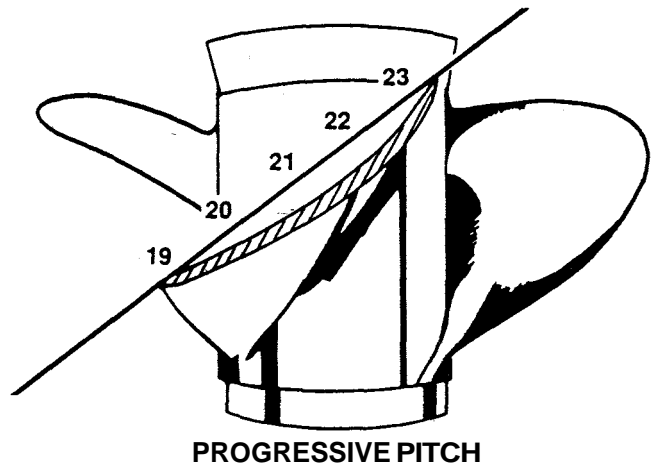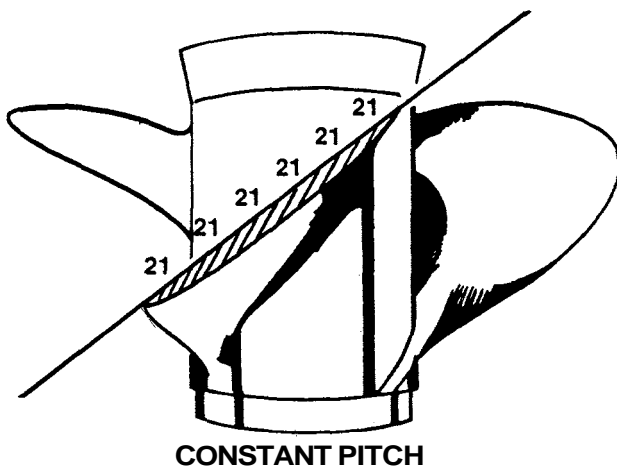

Comparison of a constant and progressive pitch propeller. Notice how the pitch of the progressive pitch propeller, right, changes to give the blade more thrust and therefore, the boat more speed.

The cup has the effect of adding to the propeller pitch. Cupping usually will reduce full-throttle engine speed about 150 to 300 rpm below the same pitch propeller without a cup to the blade. A propeller repair shop is able to increase or decrease the cup on the blades. This change, as explained, will alter engine rpm to meet specific operating demands. Cups are rapidly becoming standard on propellers.

In order for a cup to be the most effective, the cup should be completely concave (hollowed) and finished with a sharp corner. If the cup has any convex rounding, the effectiveness of the cup will be reduced.

Rotation

Propellers are manufactured as right-hand rotation (RH), and as left-hand rotation (LH). The standard propeller for outboards is RH rotation.

A right-hand propeller can easily be identified by observing it as shown in the accompanying illustration. Observe how the blade slants from the lower left toward the upper right. The left-hand propeller slants in the opposite direction, from upper left to lower right, as shown.

When the propeller is observed rotating from astern the boat, it will be rotating clockwise when the engine is in forward gear. The left-hand propeller will rotate counterclockwise.

1-5 FUEL SYSTEM

With Built-in Fuel Tank


All parts of the fuel system should be selected and installed to provide maximum

service and protection against leakage. Reinforced flexible sections should be installed in fuel lines where there is a lot of motion, such as at the engine connection. The flaring of copper tubing should be annealed after it is formed as a protection against hardening. **CAUTION:** Compression fittings should **NOT** be used because they are so easily overtightened, which places them under a strain and subjects them to fatigue. Such conditions will cause the fitting to leak after it is connected a second time.


The capacity of the fuel filter must be large enough to handle the demands of the engine as specified by the engine manufacturer.

A manually-operated valve should be installed if anti-siphon protection is not provided. This valve should be installed in the fuel line as close to the gas tank as possible. Such a valve will maintain anti-siphon protection between the tank and the engine.

Fuel tanks should be mounted in dry, well ventilated places. Ideally, the fuel tanks should be installed above the cockpit floors, where any leakage will be quickly detected. In order to obtain maximum circulation of air around fuel tanks, the tank should not come in contact with the boat hull except through the necessary supports. The supporting surfaces and hold-downs must fasten the tank firmly and they should be insulated from the tank surfaces. This insulation material should be non-abrasive and non-absorbent material. Fuel tanks installed in the forward portion of the boat should be especially well secured and protected because shock loads in this area can be as high as 20 to 25 g's.

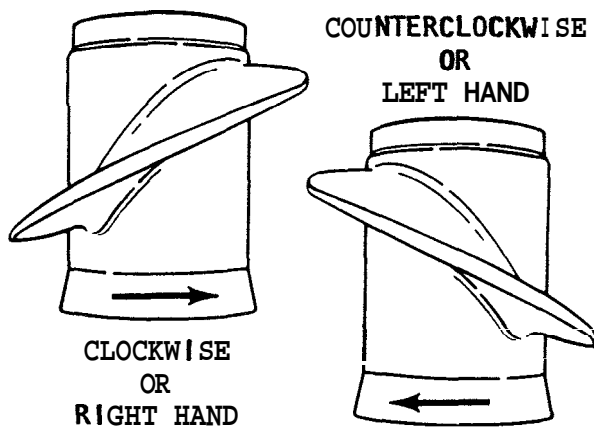

Right- and left-hand propellers showing how the angle of the blades is reversed. Right-hand propellers are by far the most popular.

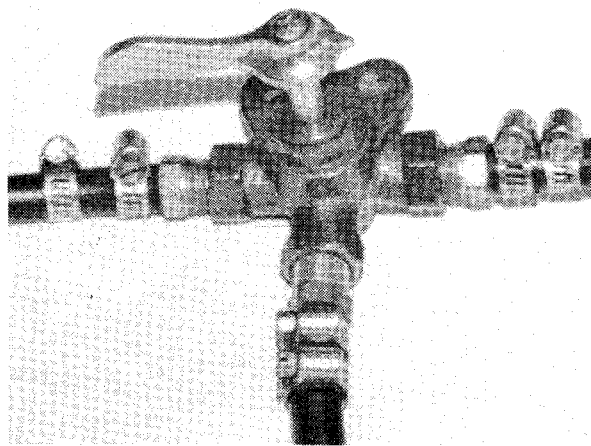

A three-position valve permits fuel to be drawn from either tank or to be shut off completely. Such an arrangement prevents accidental siphoning of fuel from the tank.

Taking On Fuel


The fuel tank of your boat should be kept full to prevent water from entering the system through condensation caused by temperature changes. Water droplets forming is one of the greatest enemies of the fuel system. By keeping the tank full, the air space in the tank is kept to an absolute minimum and there is no room for moisture to form. It is a good practice not to store fuel in the tank over an extended period, say for six months. Today, fuels contain ingredients that change into gums when stored for any length of time. These gums and varnish products will cause carburetor problems and poor spark plug performance. An additive (Sta-Bil) is available and can be used to prevent gums and varnish from forming.

Static Electricity

In very simple terms, static electricity is called frictional electricity. It is generated by two dissimilar materials moving over each other. One form is gasoline flowing through a pipe or into the air. Another form is when you brush your hair or walk across a synthetic carpet and then touch a metal object. All of these actions cause an electrical charge. In most cases, static electricity is generated during very dry weather conditions, but when you are filling the fuel tank on your boat it can happen at any time.

Fuel Tank Grounding


One area of protection against the build-up of static electricity is to have the fuel

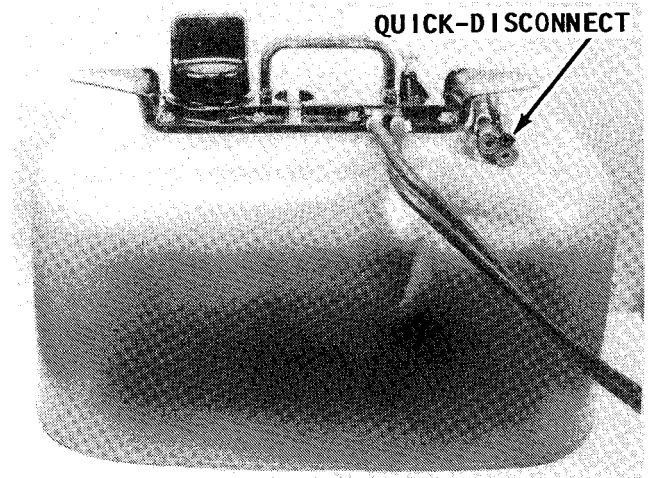


Old style pressure-type tank showing the fuel line to the engine and quick-disconnect fitting.

tank properly grounded (also known as bonding). A direct metal-to-metal contact from the fuel hose nozzle to the water in which the boat is floating. If the fill pipe is made of metal, and the fuel nozzle makes a good contact with the deck plate, then a good ground is made.

As an economy measure, some boats use rubber or plastic filler pipes because of compound bends in the pipe. Such a fill line does not give any kind of ground and if your boat has this type of installation and you do

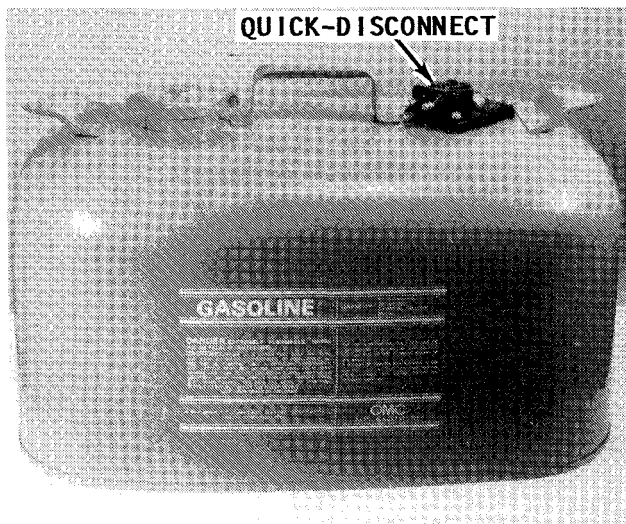

An OMC fuel tank equipped with a quick-disconnect fitting. This type of arrangement is handy when the tank must be removed from the boat to obtain fuel.

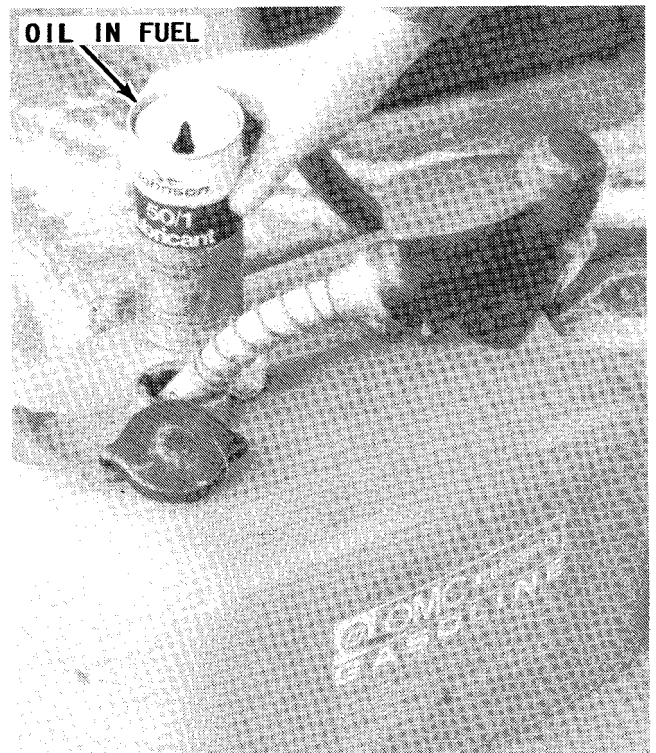

Adding fuel to a six-gallon OMC fuel tank. Some fuel must be in the tank before oil is added to prevent the oil from accumulating on the tank bottom.


not want to replace the filler pipe with a metal one, then it is possible to connect the deck fitting to the tank with a copper wire. The wire should be 8 gauge or larger.

The fuel line from the tank to the engine should provide a continuous metal-to-metal contact for proper grounding. If any part of this line is plastic or other non-metallic material, then a copper wire must be connected to bridge the non-metal material. The power train provides a ground through the engine and drive shaft, to the propeller in the water.

Fiberglass fuel tanks pose problems of their own. One method of grounding is to run a copper wire around the tank from the fill pipe to the fuel line. However, such a wire does not ground the fuel in the tank. Manufacturers should imbed a wire in the fiberglass and it should be connected to the intake and the outlet fittings. This wire would avoid corrosion which could occur if a wire passed through the fuel. CAUTION: It is not advisable **to use** a fiberglass fuel tank if a grounding wire was not **installed**.

Anything you can feel as a "shock" is enough to set off an explosion. Did you know that under certain atmospheric conditions you can cause a static explosion yourself, particularly if you are wearing synthetic clothing. It is almost a certainty you could cause a static spark if you are NOT wearing insulated rubber-soled shoes.

As soon as the deck fitting is opened, fumes are released to the air. Therefore, to be safe you should ground yourself before

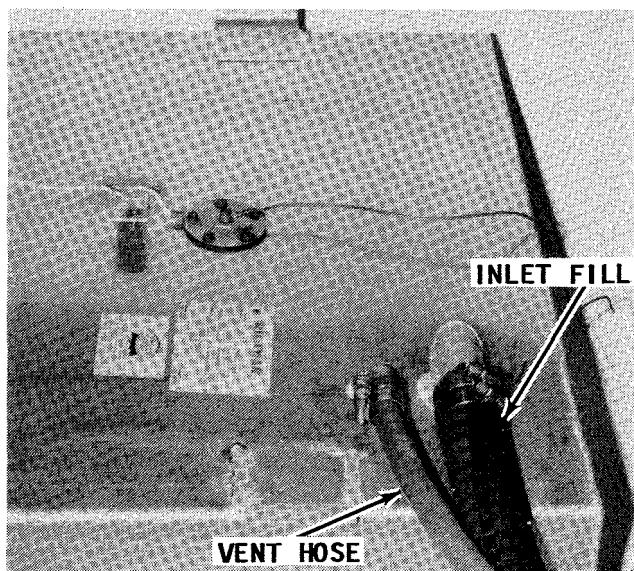


A fuel tank properly grounded to prevent static electricity. Static electricity could be extremely dangerous when taking on fuel.

opening the fill pipe deck fitting. One way to ground yourself is to dip your hand in the water overside to discharge the electricity in your body before opening the filler cap. Another method is to touch the engine block or any metal fitting on the dock which goes down into the water.

1-6 LOADING

In order to receive maximum enjoyment, with safety and performance, from your boat, take care not to exceed the load capacity given by the manufacturer. A plate attached to the hull indicates the U.S. Coast Guard capacity information in pounds for persons and gear. If the plate states the maximum person capacity to be 750 pounds and you assume each person to weigh an average of 150 lbs., then the boat could carry five persons safely. If you add another 250 lbs. for motor and gear, and the maximum weight capacity for persons and gear is 1,000 lbs. or more, then the five persons and gear would be within the limit.

Try to load the boat evenly port and starboard. If you place more weight on one side than on the other, the boat will list to the heavy side and make steering difficult. You will also get better performance by placing heavy supplies aft of the center to keep the bow light for more efficient planing.

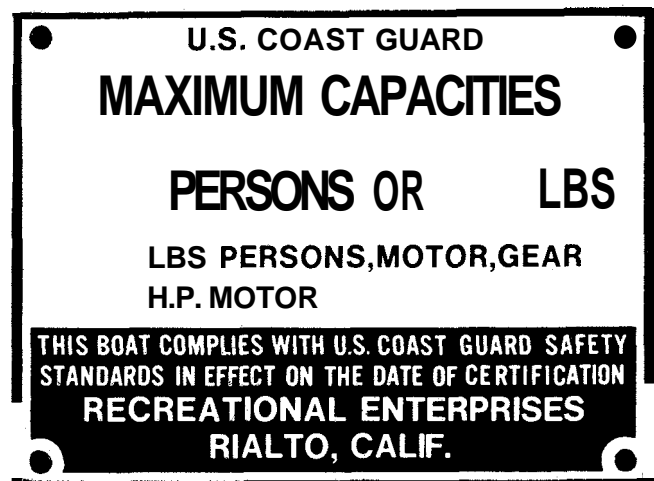

U.S. Coast Guard plate affixed to all new boats. When the blanks are filled in, the plate will indicate the Coast Guard's recommendations for persons, gear, and horsepower to ensure safe operation of the boat. These recommendations should not be exceeded, as explained in the text.

Clarification


Much confusion arises from the terms, certification, requirements, approval, regulations, etc. Perhaps the following may clarify a couple of these points.

1- The Coast Guard does not approve boats in the same manner as they "Approve" life jackets. The Coast Guard applies a formula to inform the public of what is safe for a particular craft.

2- If a boat has to meet a particular regulation, it must have a Coast Guard certification plate. The public has been led to believe this indicates approval of the Coast Guard. Not so.

3- The certification plate means a willingness of the manufacturer to meet the Coast Guard regulations for that particular craft. The manufacturer may recall a boat if it fails to meet the Coast Guard requirements.

4- The Coast Guard certification plate, see accompanying illustration, may or may not be metal. The plate is a regulation for the manufacturer. It is only a warning plate and the public does not have to adhere to the restrictions set forth on it. Again, the plate sets forth information as to the Coast Guard's opinion for safety on that particular boat.

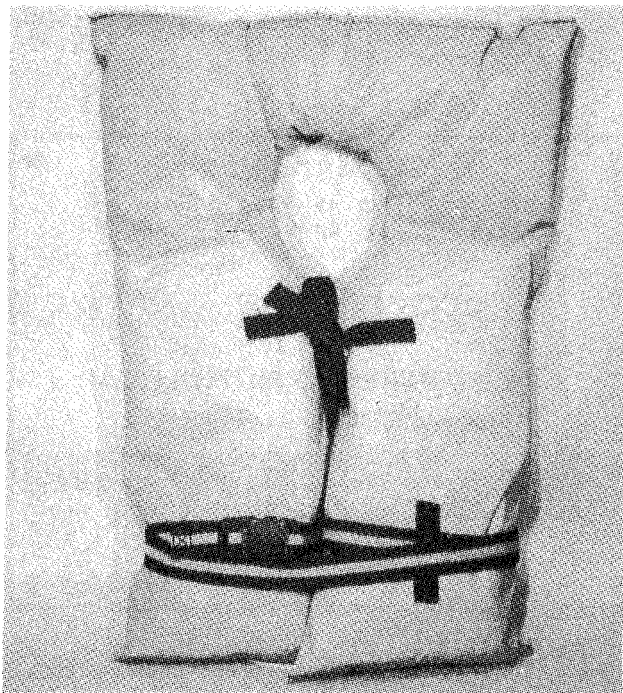

Type I PFD Coast Guard Approved life jacket. This type flotation device provides the greatest amount of buoyancy. NEVER use them for cushions or other purposes.

5- Coast Guard Approved equipment is equipment which has been approved by the Commandant of the U.S. Coast Guard and has been determined to be in compliance with Coast Guard specifications and regulations relating to the materials, construction, and performance of such equipment.

1-7 HORSEPOWER

The maximum horsepower engine for each individual boat should not be increased by any great amount without checking requirements from the Coast Guard in your area. The Coast Guard determines horsepower requirements based on the length, beam, and depth of the hull. **TAKE CARE NOT** to exceed the maximum horsepower listed on the plate or the warranty and possibly the insurance on the boat may become void.

1-8 FLOTATION

If the boat is less than 20 ft. overall, U.S. Coast Guard and the National Marine Manufacturers Association (formerly BIA) requires the craft to have adequate buoyant material built into the hull (usually foam) to keep it from sinking if the craft should become swamped.

"Kept from sinking" is defined as the ability of the flotation material to keep the boat from sinking when filled with water and with passengers in the water clinging to the hull. A serious



A Type IV PFD cushion device intended to be thrown to a person in the water. If air can be squeezed out of the cushion it is no longer fit for service as a PFD.

restriction is: the total weight of the motor, passengers, and equipment on board **MUST** not exceed the maximum load capacity listed on the plate.

Life Preservers — Personal Flotation Devices (PFDs)

The Coast Guard requires at least one Coast Guard approved life-saving device be carried on board all motorboats for each person on board. Devices approved are identified by a tag indicating Coast Guard approval. Such devices may be life preservers, buoyant vests, ring buoys, or buoyant cushions. Cushions used for seating are serviceable if air cannot be squeezed out of it. Once air is released when the cushion is squeezed, it is no longer fit as a flotation device. New foam cushions dipped in a rubberized material are almost indestructible.

Life preservers have been classified by the U.S. Coast Guard into five distinct categories. All PFD's presently acceptable on recreational boats fall into one of these five designations. All PFDs **MUST** be U.S. Coast Guard approved, in good and serviceable condition, and of an appropriate size for the persons who intend to wear them. Wearable PFDs **MUST** be readily accessible and throwable devices **MUST** be immediately available for use.

Type I PFD has the greatest required buoyancy and is designed to turn most **UNCONSCIOUS** persons in the water from a face down position to a vertical or slightly backward position. The adult size device provides a minimum buoyancy of 22 pounds and the child size provides a minimum buoyancy of 11 pounds. The Type I PFD provides the greatest protection to its wearer and is most effective for all waters and conditions.

Type II PFD is designed to turn its wearer in a vertical or slightly backward position in the water. The turning action is not as pronounced as with a Type I. The device will not turn as many different type persons under the same conditions as the Type I. An adult size device provides a minimum buoyancy of 15 pounds, the medium child size provides a minimum of 11 pounds, and the infant and small child sizes provide a minimum buoyancy of 7 pounds.


Type III PFD is designed to permit the wearer to place himself (herself) in a vertical or slightly backward position. The Type III device has the same buoyancy as the Type II PFD but it has little or no turning ability. Many of the Type III PFD are designed to be particularly useful when water skiing, sailing, hunting, fishing, or engaging in other water sports. Several of this type will also provide increased hypothermia protection.

Type IV PFD is designed to be thrown to a person in the water and grasped and held by the user until rescued. It is **NOT** designed to be worn. The most common Type IV PFD is a ring buoy or a buoyant cushion.

Type V PFD is any PFD approved for restricted use.

Coast Guard regulations state, in general terms, that on all boats less than 16 ft. overall, one Type I, II, III, or IV device shall be carried on board for each person in the boat. On boats over 26 ft., one Type I, II, or III device shall be carried on board for each person in the boat plus one Type IV device.

It is an accepted fact that most boating people own life preservers, but too few actually wear them. There is little or no excuse for not wearing one because the modern comfortable designs available today do not subtract from an individual's boating pleasure. Make a life jacket available to

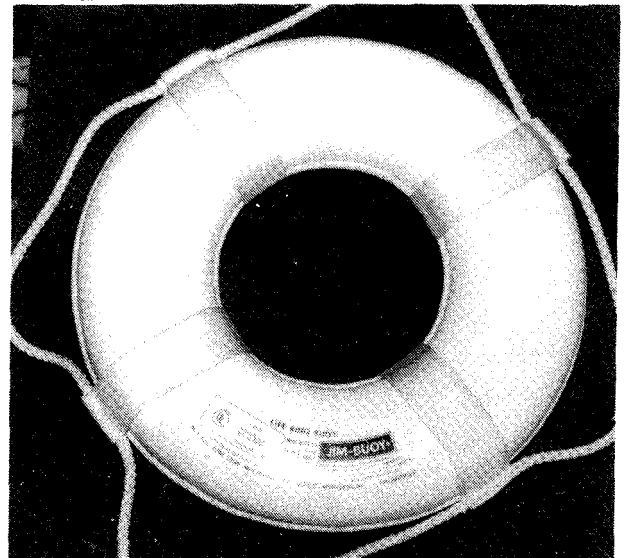


Type IV PFD ring buoy designed to be thrown. On ocean cruisers, this type device usually has a weighted pole with flag, attached to the buoy.

your crew and advise each member to wear it. If you are a crew member ask your skipper to issue you one, especially when boating in rough weather, cold water, or when running at high speed. Naturally, a life jacket should be a must for non-swimmers any time they are out on the water in a boat.

1-9 EMERGENCY EQUIPMENT

**Visual Distress Signals
The Regulation**

Since January 1, 1981, Coast Guard Regulations require all recreation boats when used on coastal waters, which includes the Great Lakes, the territorial seas and those waters directly connected to the Great Lakes and the territorial seas, up to a point where the waters are less than two miles wide, and boats owned in the United States when operating on the high seas to be equipped with visual distress signals.

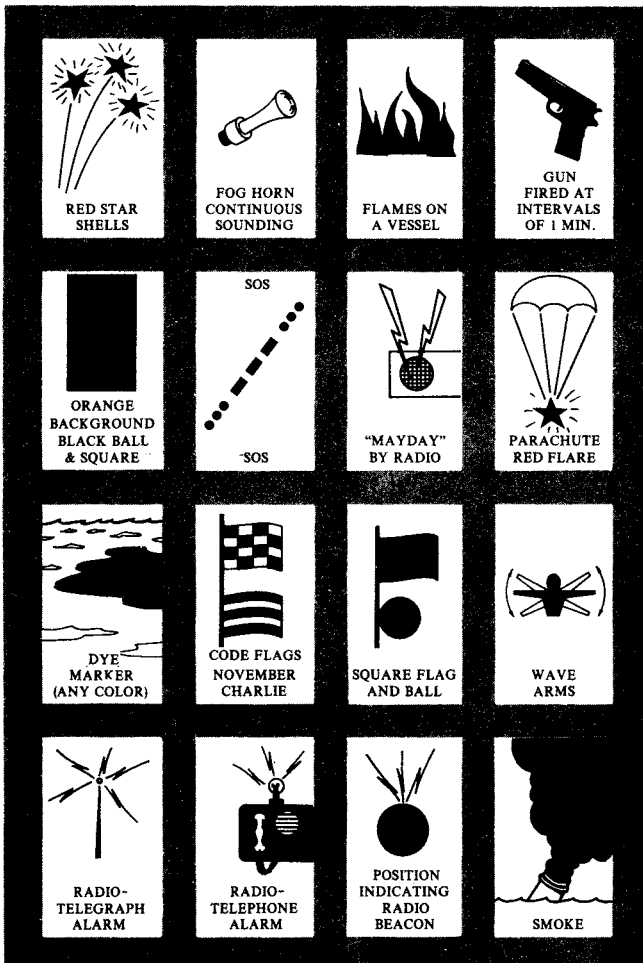

Internationally accepted distress signals.

The only exceptions are during daytime (sunrise to sunset) for:

Recreational boats less than 16 ft. (5 meters) in length.

Boats participating in organized events such as races, regattas or marine parades.

Open sailboats not equipped with propulsion machinery and less than 26 ft. (8 meters) in length.

Manually propelled boats.

The above listed boats need to carry night signals when used on these waters at night.

Pyrotechnic visual distress signaling devices **MUST** be Coast Guard Approved, in serviceable condition and stowed to be readily accessible. If they are marked with a date showing the serviceable life, this date must not have passed. Launchers, produced before Jan. 1, 1981, intended for use with approved signals are not required to be Coast Guard Approved.

USCG Approved pyrotechnic visual distress signals and associated devices include:

Pyrotechnic red flares, hand held or aerial.

Pyrotechnic orange smoke, hand held or floating.

Launchers for aerial red meteors or parachute flares.



Moisture-protected flares should be carried on board for use as a distress signal.

None-pyrotechnic visual distress signaling devices must carry the manufacturer's certification that they meet Coast Guard requirements. They must be in serviceable condition and stowed so as to be readily accessible.

This group includes:

Orange distress flag at least 3 x 3 feet with a black square and ball on an orange background.

Electric distress light -- not a flashlight but an approved electric distress light which **MUST** automatically flash the international **SOS** distress signal (. . . - - - . . .) four to six times each minute.

Types and Quantities

The following variety and combination of devices may be carried in order to meet the requirements.

1- Three hand-held red flares (day and night).

2- One electric distress light (night only).

3- One hand-held red flare and two parachute flares (day and night).

4- One hand-held orange smoke signal, two floating orange smoke signals (day) and one electric distress light (day and night).

If young children are frequently aboard your boat, careful selection and proper stowage of visual distress signals becomes especially important. If you elect to carry pyrotechnic devices, you should select those in tough packaging and not easy to ignite should the devices fall into the hands of children.

Coast Guard Approved pyrotechnic devices carry an expiration date. This date can **NOT** exceed 42 months from the date of



An adequately stocked first-aid kit should be on board for the safety of crew and guests.

manufacture and at such time the device can no longer be counted toward the minimum requirements.

SPECIAL WORDS


In some states the launchers for meteors and parachute flares may be considered a firearm. Therefore, check with your state authorities before acquiring such a launcher.

First Aid Kits

The first-aid kit is similar to an insurance policy or life jacket. You hope you don't have to use it but if needed, you want it there. It is only natural to overlook this essential item because, let's face it, who likes to think of unpleasantness when planning to have only a good time. However, the prudent skipper is prepared ahead of time, and is thus able to handle the emergency without a lot of fuss.

Good commercial first-aid kits are available such as the Johnson and Johnson "Marine First-Aid Kit". With a very modest expenditure, a well-stocked and adequate kit can be prepared at home.

Any kit should include instruments, supplies, and a set of instructions for their use. Instruments should be protected in a watertight case and should include: scissors, tweezers, tourniquet, thermometer, safety

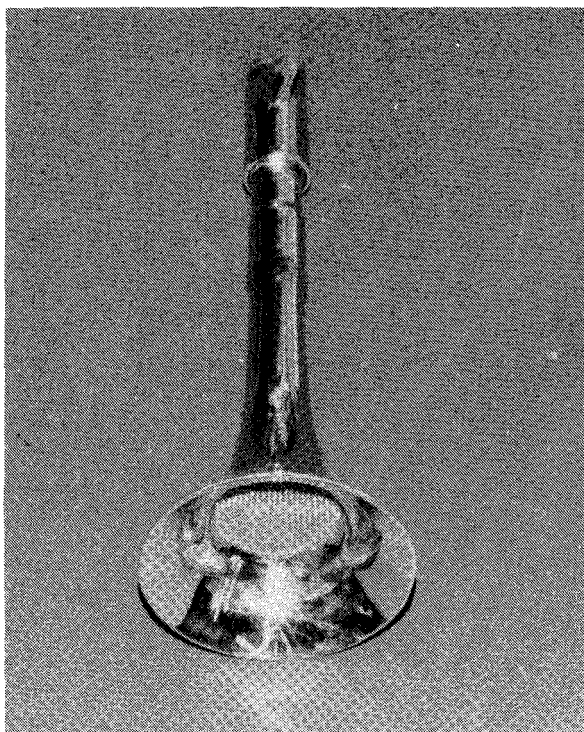

A sounding device should be mounted close to the helmsman for use in sounding an emergency alarm.

pins, eye-washing cup, and a hot water bottle. The supplies in the kit should include: assorted bandages in addition to the various sizes of "band-aids", adhesive tape, absorbent cotton, applicators, petroleum jelly, antiseptic (liquid and ointment), local ointment, aspirin, eye ointment, antihistamine, ammonia inhalant, sea-sickness pills, antacid pills, and a laxative. You may want to consult your family physician about including antibiotics. Be sure your kit contains a first-aid manual because even though you have taken the Red Cross course, you may be the patient and have to rely on an untrained crew for care.

Fire Extinguishers

All fire extinguishers must bear Underwriters Laboratory (UL) "Marine Type" approved labels. With the UL certification, the extinguisher does not have to have a Coast Guard approval number. The Coast Guard classifies fire extinguishers according to their size and type.

Type B-I or B-II Designed for extinguishing flammable liquids. This type extinguisher is required on all motorboats.

The Coast Guard considers a boat having one or more of the following conditions as a "boat of closed construction" subject to fire extinguisher regulations.



A suitable fire extinguisher should be mounted close to the helmsman for emergency use.

- 1- Inboard engine or engines.
- 2- Closed compartments under thwarts and seats wherein portable fuel tanks may be stored.
- 3- Double bottoms not sealed to the hull or which are not completely filled with flotation materials.
- 4- Closed living spaces.
- 5- Closed stowage compartments in which combustible or flammable material is stored.
- 6- Permanently installed fuel tanks.


Detailed classification of the fire extinguisher is by agent and size:

B-I contains 1-1/4 gallons foam, or 4 pounds carbon dioxide, or 2 pounds dry chemical agent, or 2-1/2 pounds Halon.

B-II contains 2-1/2 gallons foam, or 15 pounds carbon dioxide, or 10 pounds dry chemical agent, or 10 pounds Halon.

The class of motorboat dictates how many fire extinguishers are required on board. One B-II unit can be substituted for two B-I extinguishers. When the engine compartment of a motorboat is equipped with a fixed (built-in) extinguishing system, one less portable B-I unit is required.

Dry chemical fire extinguishers without

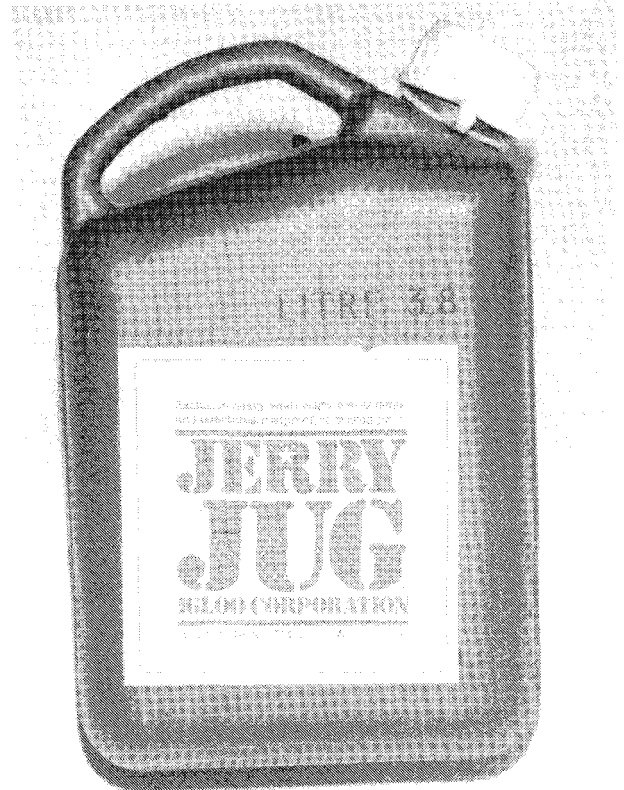

At least one gallon of emergency fuel should be kept on board in an approved container.

gauges or indicating devices must be weighed and tagged every 6 months. If the gross weight of a carbon dioxide (CO₂) fire extinguisher is reduced by more than 10% of the net weight, the extinguisher is not acceptable and must be recharged.

READ labels on fire extinguishers. If the extinguisher is U.L. listed, it is approved for marine use.

DOUBLE the number of fire extinguishers recommended by the Coast Guard, because their requirements are a bare **MINIMUM** for safe operation. Your boat, family, and crew, must certainly be worth much more than "bare minimum".

1-10 COMPASS

Selection


The safety of the boat and her crew may depend on her compass. In many areas weather conditions can change so rapidly that within minutes a skipper may find himself "socked-in" by a fog bank, a rain squall, or just poor visibility. Under these conditions, he may have no other means of keeping to his desired course except with the compass. When crossing an open body of water, his compass may be the only means of making an accurate landfall.

During thick weather when you can neither see nor hear the expected aids to navigation, attempting to run out the time on a given course can disrupt the pleasure of the cruise. The skipper gains little comfort in a chain of soundings that does not match those given on the chart for the expected area. Any stranding, even for a short time, can be an unnerving experience.

A pilot will not knowingly accept a cheap parachute. A good boater should not accept a bargain in lifejackets, fire extinguishers, or compass. Take the time and spend the few extra dollars to purchase a compass to fit your expected needs. Regardless of what the salesman may tell you, postpone buying until you have had the chance to check more than one make and model.

Lift each compass, tilt and turn it, simulating expected motions of the boat. The compass card should have a smooth and stable reaction.

The card of a good quality compass will come to rest without oscillations about the lubber's line. Reasonable movement in your hand, comparable to the rolling and pitching

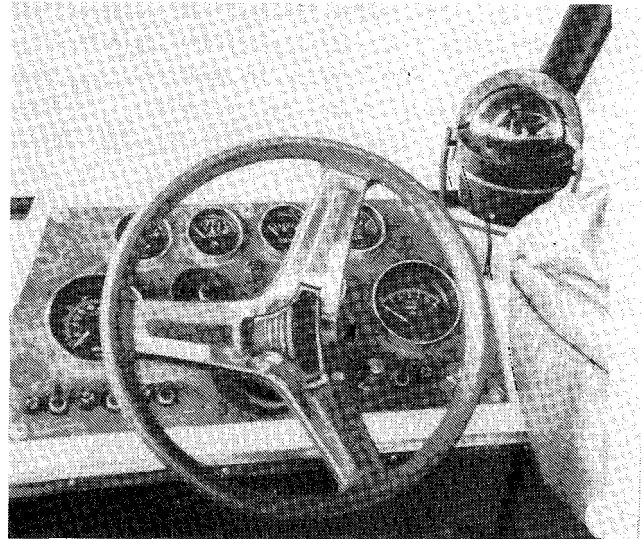


The compass is a delicate instrument and deserves respect. It should be mounted securely and in position where it can be easily observed by the helmsman.

of the boat, should not materially affect the reading.

Installation




Proper installation of the compass does not happen by accident. Make a critical check of the proposed location to be sure compass placement will permit the helmsman to use it with comfort and accuracy. First, the compass should be placed directly in front of the helmsman and in such a position that it can be viewed without body stress as he sits or stands in a posture of relaxed alertness. The compass should be in the helmsman's zone of comfort. If the compass is too far away, he may have to bend forward to watch it; too close and he must rear backward for relief.

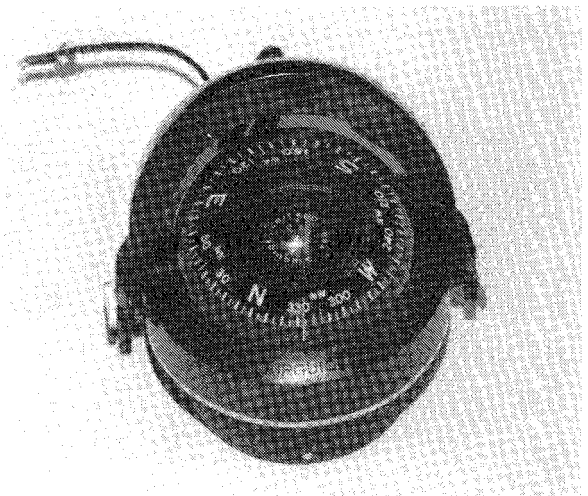

Do not hesitate to spend a few extra dollars for a good reliable compass. If in doubt, seek advice from fellow boaters.

Second, give some thought to comfort in heavy weather and poor visibility conditions during the day and night. In some cases, the compass position may be partially determined by the location of the wheel, shift lever, and throttle handle.

Third, inspect the compass site to be sure the instrument will be at least two feet from any engine indicators, bilge vapor detectors, magnetic instruments, or any steel

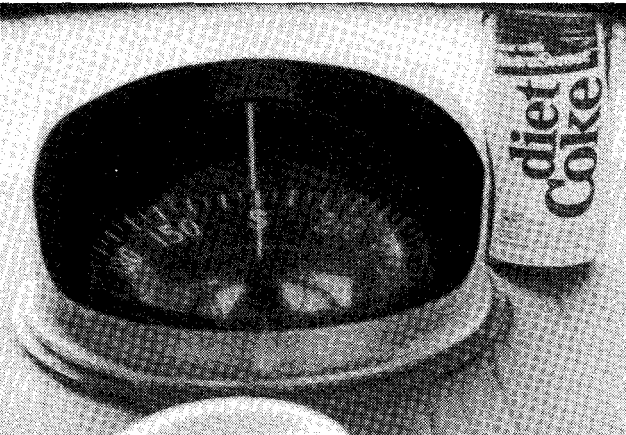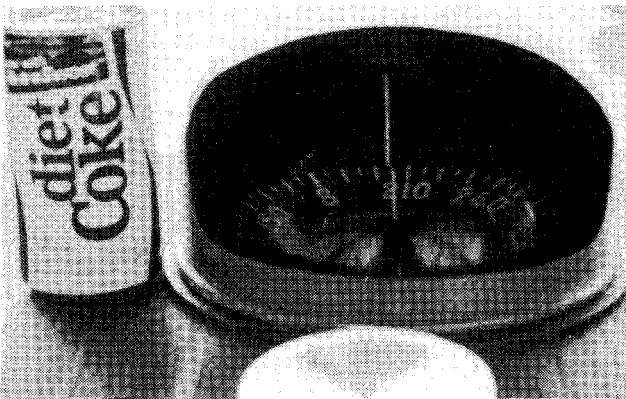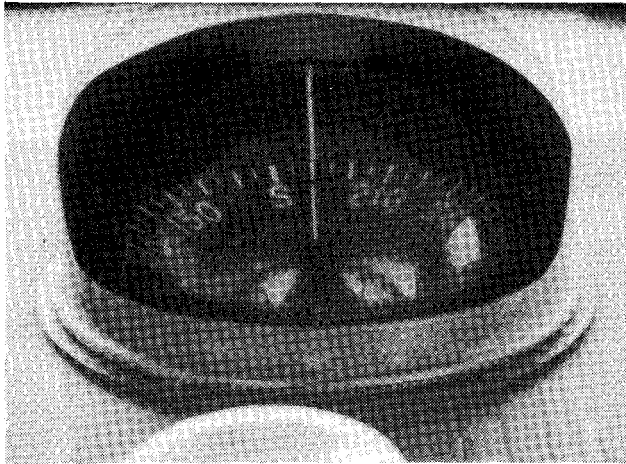

"Innocent" objects close to the compass, such as diet coke in an aluminum can, may cause serious problems and lead to disaster, as these three photos and the accompanying text illustrate.

or iron objects. If the compass cannot be placed at least two feet (six feet would be better) from one of these influences, then either the compass or the other object must be moved, if first order accuracy is to be expected.

Once the compass location appears to be satisfactory, give the compass a test before installation. Hidden influences may be concealed under the cabin top, forward of the cabin aft bulkhead, within the cockpit ceiling, or in a wood-covered stanchion.

Move the compass around in the area of the proposed location. Keep an eye on the card. A magnetic influence is the only thing that will make the card turn. You can quickly find any such influence with the compass. If the influence can not be moved away or replaced by one of non-magnetic material, test to determine whether it is merely magnetic, a small piece of iron or steel, or some magnetized steel. Bring the north pole of the compass near the object, then shift and bring the south pole near it. Both the north and south poles will be attracted if the compass is demagnetized. If the object attracts one pole and repels the other, then the compass is magnetized. If your compass needs to be demagnetized, take it to a shop equipped to do the job **PROPERLY**.

After you have moved the compass around in the proposed mounting area, hold it down or tape it in position. Test everything you feel might affect the compass and cause a deviation from a true reading. Rotate the wheel from hard over to hard over. Switch on and off all the lights, radios, radio direction finder, radio telephone, depth finder and the shipboard intercom, if one is installed. Sound the electric whistle, turn on the windshield wipers, start the engine (with water circulating through the engine), work the throttle, and move the gear shift lever. If the boat has an auxiliary generator, start it.

If the card moves during any one of these tests, the compass should be relocated. Naturally, if something like the windshield wipers cause a slight deviation, it may be necessary for you to make a different deviation table to use only when certain pieces of equipment is operating. Bear in mind, following a course that is—only off a degree or two for several hours can make considerable difference at the end, putting you on a reef, rock, or shoal.

Check to be sure the intended compass site is solid. Vibration will increase pivot wear.

Now, you are ready to mount the compass. To prevent an error on all courses, the line through the lubber line and the compass card pivot must be exactly parallel to the keel of the boat. You can establish the fore-and-aft line of the boat with a stout cord or string. Use care to transfer this line to the compass site. If necessary, shim the base of the compass until the stile-type lubber line (the one affixed to the case and not gimballed) is vertical when the boat is on an even keel. Drill the holes and mount the compass.

Magnetic Items After Installation

Many times an owner will install an expensive stereo system in the cabin of his boat. It is not uncommon for the speakers to be mounted on the aft bulkhead up against the overhead (ceiling). In almost every case, this position places one of the speakers in very close proximity to the compass, mounted above the ceiling.

As we all know, a magnet is used in the operation of the speaker. Therefore, it is very likely that the speaker, mounted almost under the compass in the cabin will have a very pronounced affect on the compass accuracy.

Consider the following test and the accompanying photographs as prove of the statements made.

First, the compass was read as 190 degrees while the boat was secure in her slip.

Next a full can of diet coke in an **aluminum** can was placed on one side and the compass read as 204 degrees, a good 14 degrees off.

Next, the full can was moved to the opposite side of the compass and again a reading was observed. This time as 189 degrees, 11 degrees off from the original reading.

Finally the contents of the can were consumed, the can placed on both sides of the compass with **NO affect** on the compass reading.

Two very important conclusions can be drawn from these tests.

1- Something must have been in the contents of the can to affect the compass so drastically.

2- Keep even "innocent" things clear of the compass to avoid any possible error in the boat's heading.


REMEMBER, a boat moving through the water at 10 knots on a compass error of just 5 degrees will be almost 1.5 miles off course in only **ONE** hour. At night, or in thick weather, this could very possibly put the boat on a reef, rock, or shoal, with disastrous results.

1-11 STEERING

USCG or BIA certification of a steering system means that all materials, equipment, and installation of the steering parts meet or exceed specific standards for strength, type, and maneuverability. Avoid sharp bends when routing the cable. Check to be sure the pulleys turn freely and all fittings are secure.

1-12 ANCHORS

One of the most important pieces of equipment in the boat next to the power plant is the ground tackle carried. The engine makes the boat go and the anchor and its line are what hold it in place when the boat is not secured to a dock or on the beach.

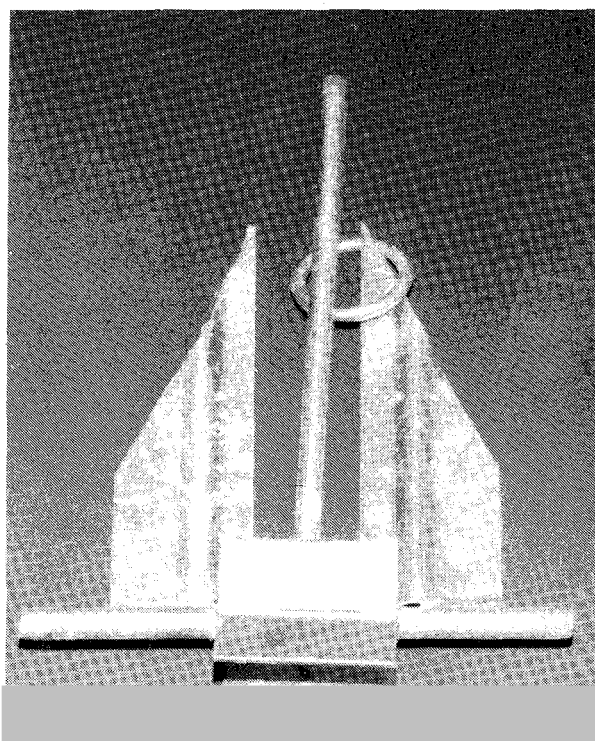

*The weight of the anchor **MUST** be adequate to secure the boat without dragging.*


1-18 SAFETY

The anchor must be of suitable size, type, and weight to give the skipper peace of mind when his boat is at anchor. Under certain conditions, a second, smaller, lighter anchor may help to keep the boat in a favorable position during a non-emergency daytime situation.

In order for the anchor to hold properly, a piece of chain must be attached to the anchor and then the nylon anchor line attached to the chain. The amount of chain should equal or exceed the length of the boat. Such a piece of chain will ensure that the anchor stock will lay in an approximate horizontal position and permit the flukes to dig into the bottom and hold.

1-13 MISCELLANEOUS EQUIPMENT

In addition to the equipment you are legally required to carry in the boat and those previously mentioned, some extra items will add to your boating pleasure and safety. Practical suggestions would include: a bailing device (bucket, pump, etc.), boat

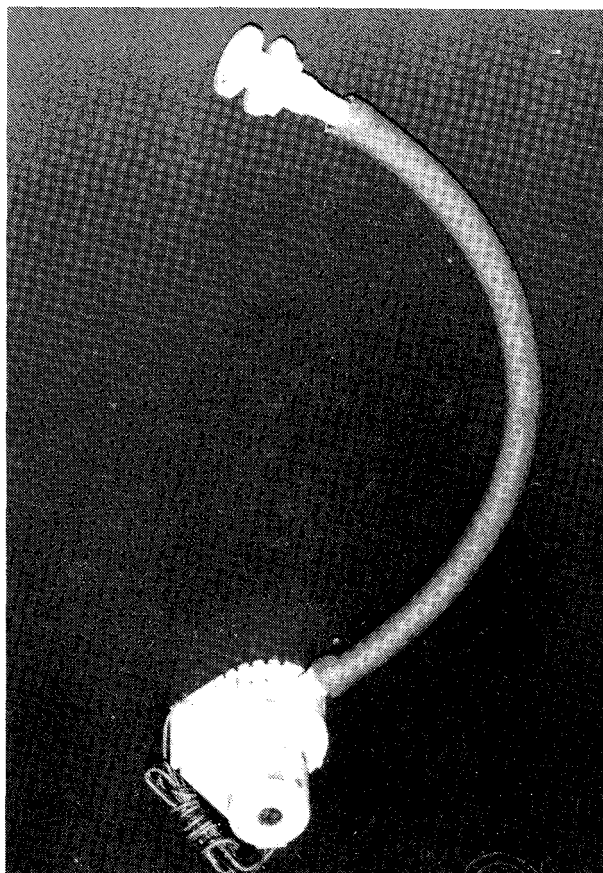

The bilge pump line must be cleaned frequently to ensure the entire bilge pump system will function properly in an emergency.

hook, fenders, spare propeller, spare engine parts, tools, an auxiliary means of propulsion (paddle or oars), spare can of gasoline, flashlight, and extra warm clothing. The area of your boating activity, weather conditions, length of stay aboard your boat, and the specific purpose will all contribute to the kind and amount of stores you put aboard. When it comes to personal gear, heed the advice of veteran boaters who say, "Decide on how little you think you can get by with, then cut it in half".

Bilge Pumps

Automatic bilge pumps should be equipped with an overriding manual switch. They should also have an indicator in the operator's position to advise the helmsman when the pump is operating. Select a pump that will stabilize its temperature within the manufacturer's specified limits when it is operated continuously. The pump motor should be a sealed or arcless type, suitable for a marine atmosphere. Place the bilge pump inlets so excess bilge water can be removed at all normal boat trims. The intakes should be properly screened to prevent the pump from sucking up debris from the bilge. Intake tubing should be of a high quality and stiff enough to resist kinking and not collapse under maximum pump suction condition if the intake becomes blocked.

To test operation of the bilge pump, operate the pump switch. If the motor does not run, disconnect the leads to the motor. Connect a voltmeter to the leads and see if voltage is indicated. If voltage is not indicated, then the problem must be in a blown fuse, defective switch, or some other area of the electrical system.

If the meter indicates voltage is present at the leads, then remove, disassemble, and inspect the bilge pump. Clean it, reassemble, connect the leads, and operate the switch again. If the motor still fails to run, the pump must be replaced.

To test the bilge pump switch, first disconnect the leads from the pump and connect them to a test light or ohmmeter. Next, hold the switch firmly against the mounting location in order to make a good ground. Now, tilt the opposite end of the switch upward until it is activated as indicated by the test light coming on or the ohmmeter showing continuity. Finally, lower the switch slowly toward the mounting

position until it is deactivated. Measure the distance between the point the switch was activated and the point it was deactivated. For proper service, the switch should deactivate between 112-inch and 114-inch from the planned mounting position. **CAUTION: The switch must never be mounted lower than the bilge pump pickup.**

1-14 BOATING ACCIDENT REPORTS

In the United States, new federal and state regulations require an accident report be filed with the nearest State boating authority within 48 hours if a person is lost, disappears, or is injured to the degree of needing medical treatment beyond first aid.

Accidents involving only property or equipment damage **MUST** be reported within 10 days if the damage is in excess of \$500.00. Some states require reporting of accidents with property damage less than \$500.00 or a total boat loss. A **\$1,000.00** PENALTY may be assessed for failure to submit the report.

WORD OF ADVICE

Take time to make a copy of the report to keep for your records or for the insurance company. Once the report is filed, the Coast Guard will not give out a copy, even to the person who filled the report.

The report must give details of the accident and include:

- 1- The date, time, and exact location of the occurrence.
- 2- The name of each person who died, was lost, or injured.
- 3- The number and name of the vessel.
- 4- The names and addresses of the owner and operator.

If the operator cannot file the report for any reason, each person on aboard **MUST** notify the authorities, or determine that the report has been filed.

1-15 NAVIGATION

Buoys

In the United States, a buoy system is used as an assist to all boaters of all size craft to navigate coastal waterways and navigable rivers in safety. When properly read and understood, these buoys and markers will permit the boater to cruise with comparative confidence they will

be able to avoid reefs, rocks, shoals, and other hazards.


Several years ago the Coast Guard began making modifications to the U.S. aids to navigation in support of an agreement sponsored by the International Association of Lighthouse Authorities (IALA) and signed by representatives from most of the maritime nations around the world. The primary purpose of the modification is to improve safety by making buoy systems around the world more alike and less confusing.

The navigational buoys shown in the accompanying illustration depict aids marking sides of channels, as seen when entering from seaward.

Lights

The following information regarding lights required on boats between sunset and sunrise or during restricted visibility is taken directly from a U.S. Coast Guard publication dated 1984.

The terms "**PORT**" and "**STARBOARD**" are used to refer to the left and right side of the boat, when looking forward. One easy way to remember this basic fundamental is to consider the words "port" and "left" both have four letters and go together.

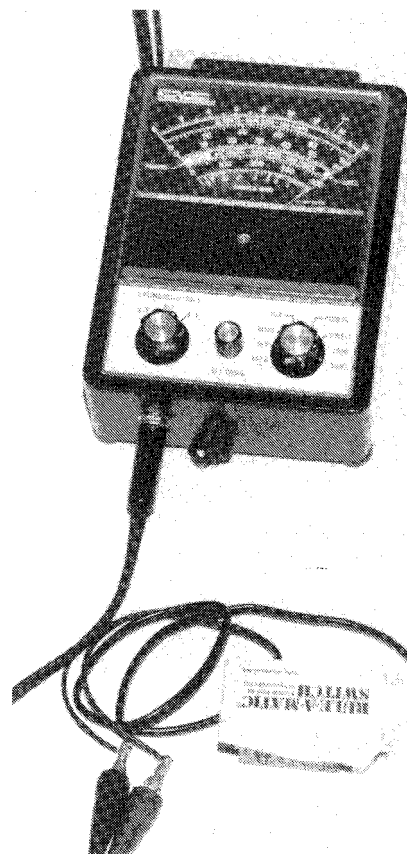

Hookup for testing an automatic bilge pump switch.

Waterway Rules

On the water, certain basic safe-operating practices must be followed. You should learn and practice them, for to know, is to be able to handle your boat with confidence and safety. Knowledge of what to do, and not do, will add a great deal to the enjoyment you will receive from your boating investment.

Rules of the Road

The best advice possible and a Coast Guard requirement for boats over 39' 4" (12 meters) since 1981, is to obtain an official copy of the "Rules of the Road", which includes Inland Waterways, Western Rivers, and the Great Lakes for study and ready reference.

The following two paragraphs give a **VERY** brief condensed and abbreviated --


almost a synopsis of the rules and should not be considered in any way as covering the entire subject.

Powered boats must yield the right-of-way to all boats without motors, except when being overtaken. When meeting another boat head-on, keep to starboard, unless you are too far to port to make this practical. When overtaking another boat, the right-of-way belongs to the boat being overtaken. If your boat is being passed, you must maintain course and speed.

When two boats approach at an angle and there is danger of collision, the boat to port must give way to the boat to starboard. Always keep to starboard in a narrow channel or canal. Boats underway must stay clear of vessels fishing with nets, lines, or trawls. (Fishing boats are not allowed to fish in channels or to obstruct navigation.)


Port Side
Odd Numbers

Starboard Side
Even Numbers

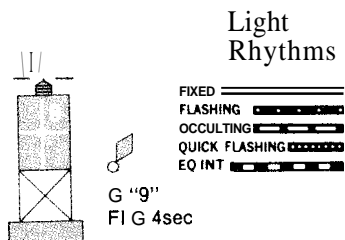


Lighted Buoy
(Green Light Only)

or

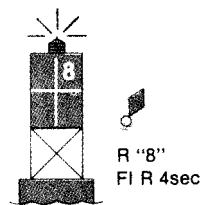


Lighted Buoy
(Red Light Only)


or

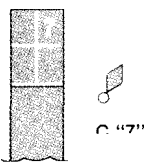


Can Buoy
(Unlighted)

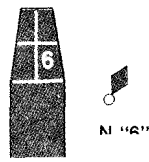

Nun Buoy
(Unlighted)

 

Daymark

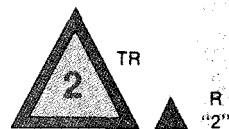


Daymark

MODIFICATIONS: Port hand aids will be green with green lights. All starboard hand aids will have red lights.


Preferred Channel
to Starboard

Preferred Channel
to Port

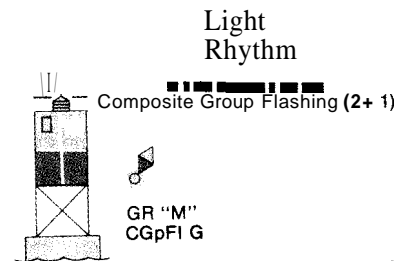


Lighted Buoy
(Green Light Only)

or

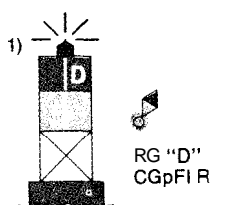


Lighted Buoy
(Red Light Only)


or

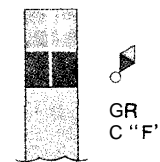

Can Buoy
(Unlighted)

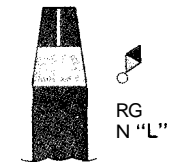

Nun Buoy
(Unlighted)

 

Daymark



Daymark

MODIFICATIONS: Green will replace black. Light rhythm will be changed to Composite **Gp Fl (2+1)**.


2

TUNING

2-1 INTRODUCTION

The efficiency, reliability, fuel economy and enjoyment available from engine performance are all directly dependent on having it tuned properly. The importance of performing service work in the sequence detailed in this chapter cannot be over emphasized. Before making any adjustments, check the Specifications in the Appendix. **NEVER** rely on memory when making critical adjustments.

Before beginning to tune any engine, check to be sure the engine has satisfactory compression. An engine with worn or broken piston rings, burned pistons, or badly scored cylinder walls, cannot be made to perform properly no matter how much time and expense is spent on the tune-up. Poor compression must be corrected or the tune-up will not give the desired results.

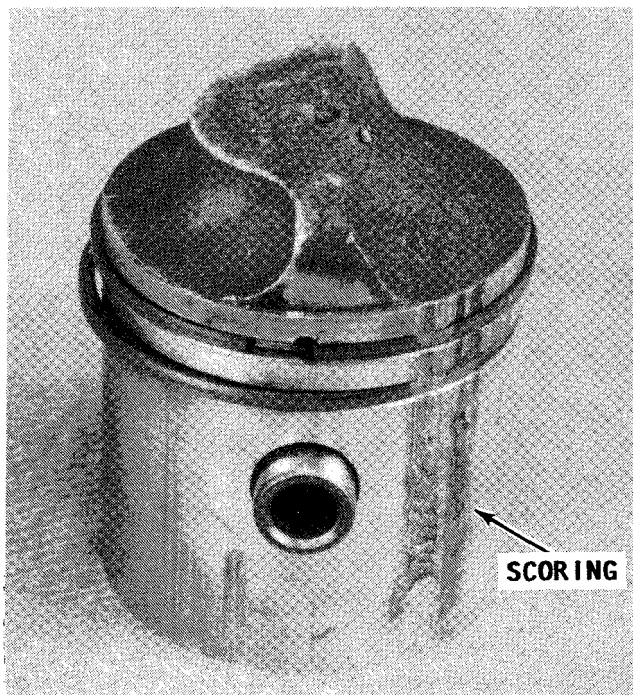


Damaged piston, probably caused by inaccurate fuel mixture, or improper point setting.

The opposite of poor compression would be to consider good compression as evidence of a satisfactory cylinder. However, this is not necessarily the case, when working on an outboard engine. As the professional mechanic has discovered, many times the compression check will indicate a satisfactory cylinder, but after the heads are pulled and an inspection made, the cylinder will require service.

A practical maintenance program that is followed throughout the year, is one of the best methods of ensuring the engine will give satisfactory performance at any time.

The extent of the engine tune-up is usually dependent on the time lapse since the last service. A complete tune-up of the entire engine would entail almost all of the work outlined in this manual. A logical sequence of steps will be presented in general terms. If additional information or

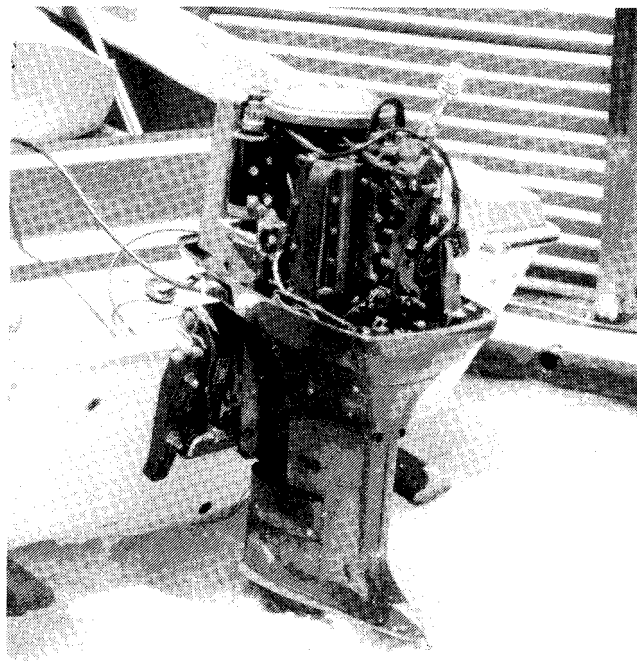

Operating the engine in a test tank with the cowling removed in preparation to making adjustments.

2-2 TUNING

detailed service work is required, the chapter containing the instructions will be referenced.


Each year higher compression ratios are built into modern outboard engines and the electrical systems become more complex, especially with electronic (capacitor discharge) units. Therefore, the need for reliable, authoritative, and detailed instructions becomes more critical. The information in this chapter and the referenced chapters fulfill that requirement.

2-2 TUNE-UP SEQUENCE

If twenty different mechanics were asked the question, "What constitutes a major and minor tune-up?", it is entirely possible twenty different answers would be given. As the terms are used in this manual and other outboard books, the following work is normally performed for a minor and major tune-up.

Minor Tune-up

- Lubricate engine.
- Drain and replace gear oil.
- Adjust points.
- Adjust carburetor.
- Clean exterior surface of engine.
- Tank test engine for fine adjustments.

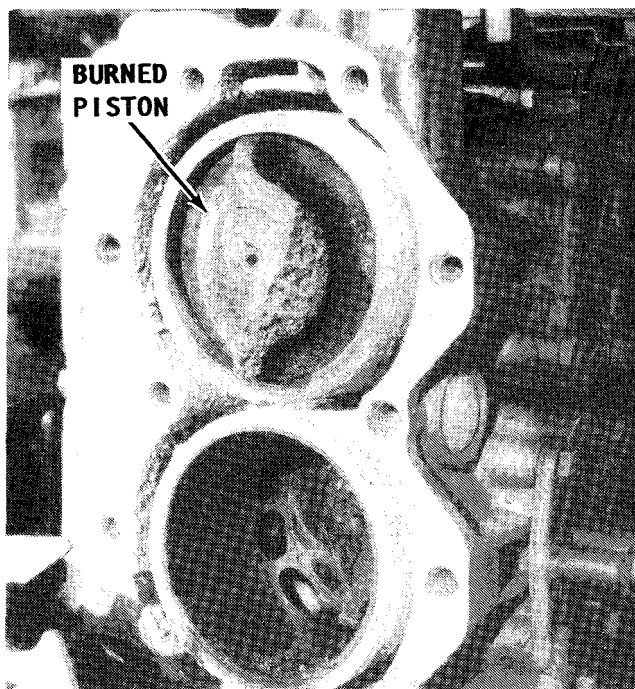

The time, effort, and expense of a tune-up will not restore an engine to satisfactory performance, if the pistons are damaged.


Major Tune-up

- Remove heads.
- Clean carbon from pistons and cylinders.
- Clean and overhaul carburetor.
- Clean and overhaul fuel pump.
- Rebuild and adjust ignition system.
- Lubricate engine.
- Drain and replace gear oil.
- Clean exterior surface of engine.
- Tank test engine for fine adjustments.

During a major tune-up, a definite sequence of service work should be followed to return the engine to the maximum performance desired. This type of work should not be confused with attempting to locate problem areas of "why" the engine is not performing satisfactorily. This work is classified as "troubleshooting". In many cases, these two areas will overlap, because many times a minor or major tune-up will correct the malfunction and return the system to normal operation.

The following list is a suggested sequence of tasks to perform during the tune-up service work. The tasks are merely listed here. Generally procedures are given in subsequent sections of this chapter. For more detailed instructions, see the referenced chapter.

- 1- Perform a compression check of each cylinder. See Chapter 3.

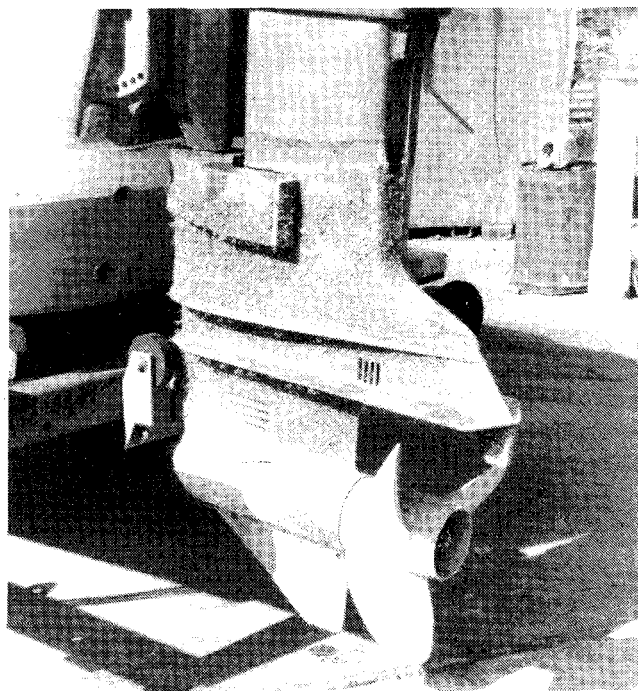


A boat and lower unit covered with marine growth. Such a condition is a serious hinderance to satisfactory performance.

- 2- Inspect the spark plugs to determine their condition. Test for adequate spark at the plug. See Chapter 5.
- 3- Start the engine in a body of water and check the water flow through the engine. See Chapter 8.
- 4- Check the gear oil in the lower unit. See Chapter 8.
- 5- Check the carburetor adjustments and the need for an overhaul. See Chapter 4.
- 6- Check the fuel pump for adequate performance and delivery. See Chapter 4.
- 7- Make a general inspection of the ignition system. See Chapter 5.
- 8- Test the starter motor and the solenoid. See Chapter 6.
- 9- Check the internal wiring.
- 10- Check the synchronization. See Chapter 5.

2-3 COMPRESSION CHECK

A compression check is extremely important, because an engine with low or uneven compression between cylinders **CAN-NOT** be tuned to operate satisfactorily. Therefore, it is essential that any compression problem be corrected before proceeding with the tune-up procedure. See Chapter 3.

If the powerhead shows any indication of overheating, such as discolored or scorched paint, especially in the area of the No. 1 cylinder (top on 3-cylinder units and top

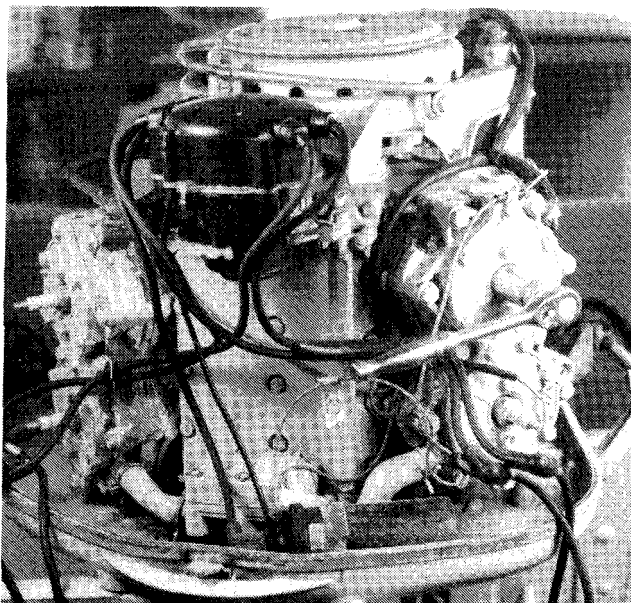

Removing the spark plugs for inspection. Worn plugs are one of the major contributing factors to poor engine performance.


starboard bank on V4's), inspect the cylinders visually thru the transfer ports for possible scoring. A more thorough inspection can be made if the heads are removed. It is possible for a cylinder with satisfactory compression to be scored slightly. Also, check the water pump. The overheating condition may be caused by a faulty water pump.

An overheating condition may also be caused by running the engine out of the water. For unknown reasons, many operators have the misconception that running an engine for a short period of time without the lower unit submerged in water, can be done without harm. **FALSE!** Such a practice will result in an overheated condition in a matter of **SECONDS**.

Water must circulate through the lower unit to the engine any time the engine is run to prevent damage to the water pump and an overheating condition. Just five seconds without water will damage the water pump and cause the engine to overheat.

Checking Compression

Remove the spark plug wires. **ALWAYS** grasp the molded cap and pull it loose with a

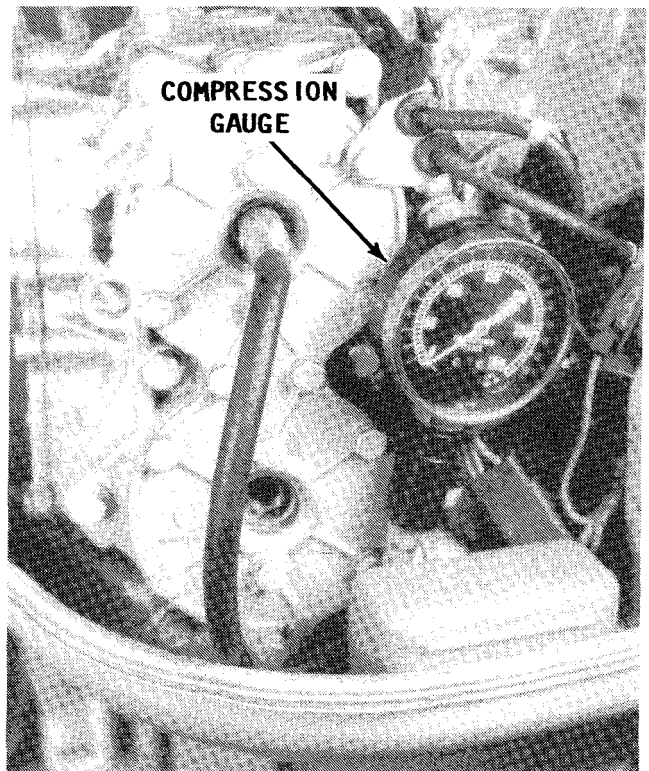

A compression check should be taken in each cylinder before spending time and money on tune-up work. Without adequate compression, efforts in other areas to regain engine performance will be wasted.



Download the full PDF manual instantly.

Our customer service e-mail:

aservicemanualpdf@yahoo.com