

General Information	1
Tools and Techniques	2
Troubleshooting	3
Lubrication, Maintenance and Tune-up	4
Engine Synchronization and Linkage Adjustments	5
Fuel System	6
Electrical System	7
Power Head	8
Gearcase	9
Automatic Rewind Starters	10
Electric Motors	11
Index	12
Wiring Diagrams	13

CONTENTS

QUICK REFERENCE DATA	IX
----------------------------	----

CHAPTER ONE GENERAL INFORMATION.....1

Manual organization	1
Notes, cautions and warnings	1
Torque specifications	2
Engine operation	2
Fasteners	2
Lubricants	8
Gasket sealant.....	10
Galvanic corrosion	11
Protection from galvanic corrosion	12
Propellers	14

CHAPTER TWO TOOLS AND TECHNIQUES.....21

Safety first.....	21
Basic hand tools	21
Test equipment	26
Service hints	28
Special tips.....	30
Mechanic's techniques.....	31

CHAPTER THREE TROUBLESHOOTING.....33

Operating requirements	34
Starting system	34
Charging system.....	42
Ignition system	44
Breaker point ignition troubleshooting.....	46
CD 2 ignition troubleshooting (except 2.5 [1987-1988], Ultra 4 and Excel 4)	48
CD 2 ignition troubleshooting (2.5 [1987-1988], Ultra 4 and Excel 4)	54
CD2UL ignition troubleshooting (1989-1990 4 Deluxe—40 hp models)	56
Ignition and neutral start switch	59
Fuel system	63
Engine temperature and overheating	64
Engine	66

CHAPTER FOUR	LUBRICATION, MAINTENANCE AND TUNE-UP	75	
Lubrication	75	Anti-corrosion maintenance	83
Storage	80	Engine flushing.....	83
Complete submersion	82	Tune-up	84
CHAPTER FIVE	ENGINE SYNCHRONIZATION AND LINKAGE ADJUSTMENTS	100	
Engine timing	100	Johnson/Evinrude 9.9 and 15 (breaker	
Synchronizing.....	101	point ignition)	112
Johnson/Evinrude 2 hp, Colt and Junior		Johnson/Evinrude 9.9 and 15 (CD 2 and	
(breaker point ignition).....	101	CD2UL ignition)	113
1973-1978 Johnson/Evinrude 4 (breaker		Johnson/Evinrude 18, 20 and 25 (breaker	
point ignition).....	103	point ignition)	115
Johnson/Evinrude 2.5, 3 hp, 4 Standard		Johnson/Evinrude 20, 25, 28 and 30	
Excel 4, Ultra 4, 4 Deluxe, 4.5 and 7.5		(CD 2 and CD2UL ignition)	116
(CD 2 and CD2UL ignition)	105	Johnson/Evinrude 35 (all ignitions).....	116
1973-1977 Johnson/Evinrude 6	106	Johnson/Evinrude 40 (breaker point ignition)	119
1978-1985 Johnson/Evinrude 5, 6 and 8		1985-1988 Johnson/Evinrude 40 hp tiller	
(CD 2 ignition)	107	models (CD 2 ignition)	120
1986-1990 Johnson/Evinrude 6 and 8 (CD 2		1985-1988 Johnson/Evinrude 40 hp remote	
and CD2UL ignition)	108	control models (CD 2 ignition)	124
Johnson/Evinrude 9.5 (breaker point		1989-1990 Johnson/Evinrude 40 hp models	
ignition).....	111	(CD2UL ignition)	127
CHAPTER SIX	FUEL SYSTEM.....	130	
Fuel pump	130	Johnson/Evinrude 20 hp, 25 hp, 28 hp, 30 hp,	
Carburetors	132	35 hp and 40 hp	146
Johnson/Evinrude 2 hp, Colt, Junior and 4 hp		Carburetor core plugs and lead shot	150
(1973-1977).....	134	Anti-siphon devices	152
Johnson/Evinrude 2.5 hp, 3 hp, 4 hp (1978-on),		Fuel tank	152
4 Deluxe, Excel 4, Ultra 4, 4.5 hp, 5 hp,		Fuel line and primer bulb	153
6 hp, 7.5 hp and 8 hp.....	136	Oil injection system	154
Johnson/Evinrude 9.5 hp	141	Autoblend™ (1986) and Accumix™	
Johnson/Evinrude 9.9 and 15 hp.....	144	(1987-on) oil injection	157
CHAPTER SEVEN	ELECTRICAL SYSTEM	160	
Battery	160	Magneto breaker point ignition service	170
Battery charging system	166	CD 2 ignition system	173
Electric starting system	167	CD2UL ignition system	177
CHAPTER EIGHT	POWER HEAD	181	
Engine serial number	183	Magneto armature plate	185
Fasteners and torque	183	CD 2 and CD2UL armature plate	185
Gaskets and sealants	183	Power head	186
Flywheel	184		
CHAPTER NINE	GEARCASE	226	
Propeller	227	Gearcase	231
Water pump.....	227	Shift lever	280

CHAPTER TEN			
AUTOMATIC REWIND STARTERS.....			284
Engine cover starter.....	285	Side-mounted pinion gear starter	291
Swing arm gear drive starter.....	288	Flywheel mounted starter.....	296
CHAPTER ELEVEN			
ELECTRIC MOTORS.....			304
Lubrication	304	1982-on 12 volt transom mount model	320
Periodic maintenance	306	1975-1981 12/24 volt bow mount model	325
Battery	306	1982-on 12/24 volt bow mount model	332
Propeller	307	1975-1976 12/24 volt transom mount model	336
1975-1981 12 volt bow mount model	307	1980-1981 12/24 volt hand control model	339
1982-on 12 volt bow mount model	312	1982-on 12/24 volt hand control model	344
1975-1976 12 volt transom mount model	317	Component replacement.....	349
INDEX			351
WIRING DIAGRAMS			353



Download the full PDF manual instantly.

Our customer service e-mail:

aservicemanualpdf@yahoo.com