


STIHL Series 4144 Components
FC, FS, KM

2008-02

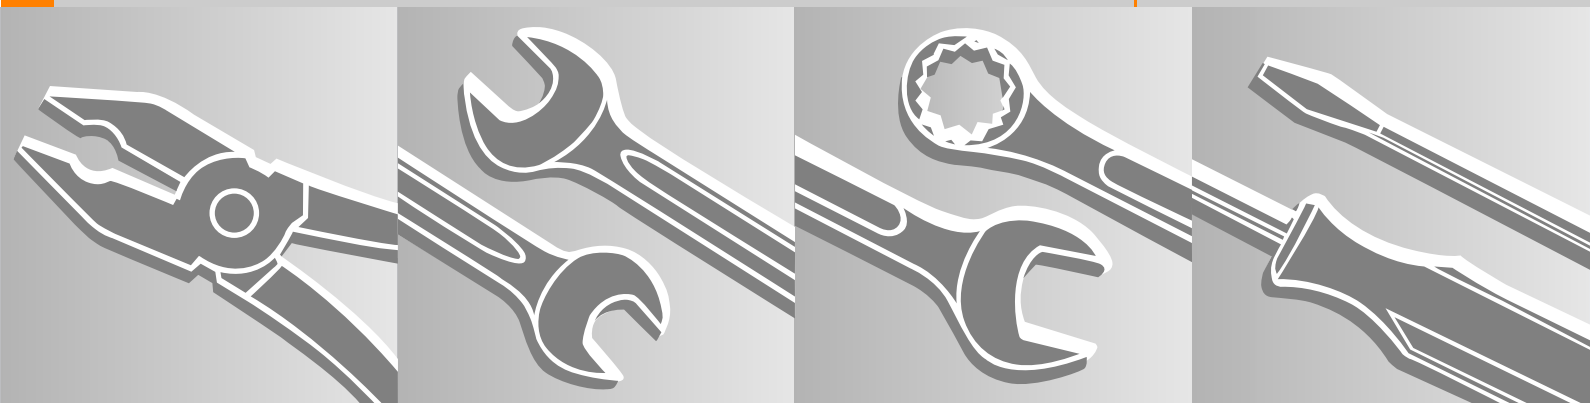

FS 40, FS 50, FS 56

FC 56

KM 56

Contents

1.	Introduction	2	6.7	Replacing the Rewind Spring	36	8.9.3	Fuel Tank Cap	63
2.	Safety Precautions	3	6.8	ErgoStart	36	8.10	Removing and Installing the Engine Housing	64
3.	Specifications	4	7.	Control Levers	37	9.	Drive Tube	65
3.1	Engine	4	7.1	Switch Shaft / Control Lever	37	9.1	Removing and Installing	65
3.2	Fuel System	4	7.2	Switch Positions	37	9.1.1	Disassembling (KM 56)	66
3.3	Ignition System	4	7.3	Interlock Lever (Loop Handle)	37	9.1.2	Disassembling (FC 56)	68
3.4	Tightening Torquese	5	7.3.1	Throttle Trigger	38	9.1.3	Disassembling (FS 56)	69
4.	Troubleshooting	7	7.4	Throttle Trigger/ Interlock Lever (Bike Handle)	40	9.1.4	Disassembling (FS 40, 50)	70
4.1	Clutch	7	7.5	Handlebar (Bike Handle)	43	9.1.5	Removing and Installing the Bearing Housing	71
4.2	Rewind Starter	8	8.	Fuel System	44	9.1.6	Loop Handle	72
4.3	Ignition System	9	8.1	Air Filter	44	9.1.7	Loop Handle with Barrier Bar	73
4.4	Carburetor	11	8.1.1	Baffle	44	9.2	Add-On Components	74
4.5	Engine	14	8.1.2	Filter housing	44	9.2.1	Deflector for Machines without Gearbox	74
5.	Engine	15	8.2	Removing and Installing the Carburetor	45	9.2.2	Deflector for Machines with Gearbox	74
5.1	Removing and Installing	15	8.3	Leakage Test	47	9.2.3	One-part Carrying Ring	75
5.2	Leakage test	16	8.4	Servicing the Carburetor	47	9.2.4	Retainer	75
5.3	Oil seals	16	8.4.1	Metering Diaphragm / Manual Fuel Pump	47	9.3	Gearbox	75
5.4	Ignition Module / Spark Plug Boot	16	8.4.2	Inlet Needle	49	10.	Special Servicing Tools	76
5.5	Clutch	16	8.4.3	Pump Diaphragm	49	11.	Servicing Aids	77
5.6	Flywheel	16	8.4.4	Throttle Lever / Rotary Knob	51			
5.7	Motor	16	8.4.5	Adjusting Screws	52			
5.8	Muffler / Spark Arresting Screen	19	8.5	Adjusting the Carburetor	54			
5.9	Short Circuit Wire	20	8.5.1	Basic Setting	54			
5.9.1	Testing	20	8.5.2	Standard Setting	55			
5.9.2	Removing and Installing (Loop Handle Version)	20	8.6	Removing and Installing Throttle Cable (Loop Handle)	56			
5.9.3	Removing and Installing (Bike Handle Version)	23	8.6.1	Removing and Installing Throttle Cable (Bike Handle)	58			
5.9.4	Ground Wire	26	8.6.2	Adjusting the Throttle Cable	58			
5.10	Ignition System Troubleshooting	27	8.7	Removing and Installing the Spacer Flange	59			
6.	Rewind Starter	30	8.8	Tank Vent	60			
6.1	General	30	8.8.1	Testing	60			
6.2	Removing and Installing	30	8.8.2	Removing and Installing	61			
6.3	Pawls	30	8.9	Fuel Intake	61			
6.3.1	Carrier	31	8.9.1	Pickup Body	61			
6.4	Rope Rotor	32	8.9.2	Fuel Hoses	62			
6.5	Starter Rope / Grip	33						
6.6	Tensioning the Rewind Spring	35						

1. Introduction

This service manual contains detailed descriptions of all the repair and servicing procedures specific to this power tool.

You should make use of the illustrated parts lists while carrying out repair work. They show the installed positions of the individual components and assemblies.

Refer to the latest edition of the relevant parts list to check the part numbers of any replacement parts.

A fault on the machine may have several causes. To help locate the fault, consult the troubleshooting charts for all assemblies and systems in this manual and the "STIHL Service Training System".

Refer to the "Technical Information" bulletins for engineering changes which have been introduced since publication of this service manual. Technical information bulletins also supplement the parts list until a revised edition is issued.

The special tools mentioned in the descriptions are listed in the chapter on "Special Servicing Tools" in this manual. Use the part numbers to identify the tools in the "STIHL Special Tools" manual. The manual lists all special servicing tools currently available from STIHL.

Symbols are included in the text and pictures for greater clarity. The meanings are as follows:

In the descriptions:

- = Action to be taken as shown in the illustration above the text
- = Action to be taken that is not shown in the illustration above the text

In the illustrations:

- ➔ Pointer
- ➡ Direction of movement
- 📖 4.2 = Reference to another chapter, i.e. chapter 4.2 in this example

Service manuals and all technical information bulletins are intended exclusively for the use of properly equipped repair shops. They must not be passed to third parties.

Always use original STIHL replacement parts. They can be identified by the STIHL part number, the **STIHL** logo and the STIHL parts symbol . This symbol may appear alone on small parts.

Storing and disposing of oils and fuels

Collect fuel or lubricating oil in a clean container and dispose of it properly in accordance with local environmental regulations.

2. Safety Precautions

If the engine is started up in the course of repairs or maintenance work, observe all local and country-specific safety regulations as well as the safety precautions and warnings in the instruction manual.

Gasoline is an extremely flammable fuel and can be explosive in certain conditions.

Always wear suitable protective gloves for operations in which components are heated for assembly or disassembly.

Improper handling may result in burns or other serious injuries.

Do not smoke or bring any fire, flame or other source of heat near the fuel. All work with fuel must be performed outdoors only. Spilled fuel must be wiped away immediately.

Always perform leakage test after working on the fuel system and the engine.

3. Specifications

3.1 Engine

	FS 40	FS 50, 56, FC 56, KM 56
Displacement:	27.2 cm ³	27.2 cm ³
Bore:	34 mm	34 mm
Stroke:	30 mm	30 mm
Engine power to ISO 8893:	0.7 kW (1.0 bhp) at 8,500 rpm	0.8 kW (1.1 bhp) at 8,500 rpm
Max. permissible speed (with cutting attachment):	10,000 rpm	10,000 rpm
Idle speed:	2,800 rpm	2,800 rpm
Clutch:	Centrifugal clutch without linings	Centrifugal clutch without linings
Clutch engages at:	4,200 rpm	4,200 rpm
Crankcase leakage test at gauge pressure:	0.5 bar	
under vacuum:	0.5 bar	

3.2 Fuel System

Carburetor leakage test at gauge pressure:	0.3 bar
Operation of tank vent at gauge pressure:	0.5 bar
Fuel:	as specified in instruction manual

3.3 Ignition System

Air gap between ignition module and fanwheel:	0.30 mm
Spark plug (suppressed):	NGK CMR6H NGK 6H Bosch WSR 6 F
Electrode gap:	0.5 mm

3.4 Tightening Torquese

DG and P (Plastoform) screws are used in polymer and light metal components. These screws form a permanent thread when they are installed for the first time. They can be removed and installed as often as necessary without impairing the strength of the screwed assembly, providing the specified tightening torque is observed.

For this reason it is **essential to use a torque wrench**.

Fastener	Thread size	For component	Torque Nm	Remarks
Screw	P 6x14	Line limiting blade/deflector	2.5	
Screw	M 5x30	Control handle/handle/nut with washer	2.0	
Screw	P 5x14	Filter cover/filter housing	3.0	
Nut	M 5	Filter housing/carburetor/spacer flange	3.5	
Screw	P 4x12	Throttle cable/engine housing	1.5	
Screw	D 6x28	Gearbox/drive tube clamp (FS 56)	12.0	
Screw	D 5x20	Shroud/cylinder	6.0	
Screw	M 6x35	Clamp/clamp block/clamp	4.5	
Screw	M 6x25	Clamp/loop handle	4.5	
Screw	P 5x20	Engine housing/shroud	4.0	
Screw	M 5x20	Engine housing/crankcase	7.0	
Screw	P 5x20	Engine housing torsion lock/drive tube	4.0	
Screw	M 5x14	Deflector/gearbox (FS 56)	4.5	
Screw	M 6x30	Deflector/drive tube/nut /FS 40,50)	5.0	
Screw	M 6x14	Clamp/drive tube/harness ring	4.5	
Screw	D 5x20	Starter cover/crankcase	6.0	
Screw	D 5x20	Starter cover/engine pan	6.0	
Screw	M 4x9	End cover/carburetor	2.0	

Remarks:

- 1) Loctite 242 or 243, medium strength
 - 2) Loctite 270, high strength
 - 3) Loctite 649, high strength
 - 4) Loctite 272, high strength up to 250°C
 - 5) Degrease crankshaft/flywheel and mount oil-free
-

Use the following procedure when refitting a DG or P screw in an existing thread:

Place the screw in the hole and rotate it counterclockwise until it drops down slightly.
Tighten the screw clockwise to the specified torque.

This procedure ensures that the screw engages properly in the existing thread and does not form a new thread and weaken the assembly.

Coat micro-encapsulated screws with medium strength Loctite 242 or 243 before reinstalling.

Power screwdriver setting for polymer: DG and P screws max. 500 rpm
Do not use an impact wrench for releasing or tightening screws.

Do not mix up screws with and without binding heads.

4. Troubleshooting

4.1 Clutch

Condition	Cause	Remedy
Cutting attachment stops under load at full throttle	Clutch shoes badly worn	Install new clutch
	Clutch drum badly worn	Install new clutch drum
Cutting attachment runs at idle speed	Engine idle speed too high	Readjust idle speed screw LA
	Clutch springs stretched or fatigued	Replace the clutch springs or install new clutch
	Clutch spring hooks broken	Replace the clutch springs
Loud noises	Clutch springs stretched or fatigued	Replace all clutch springs
	Clutch shoe retainer broken	Install new clutch
	Clutch shoes and carrier worn	Install new clutch
Condition	Cause	Remedy

4.2 Rewind Starter

Condition	Cause	Remedy
Starter rope broken	Rope pulled out too vigorously as far as stop or over edge, i.e. not vertically	Fit new starter rope
	Normal wear	Fit new starter rope
Starter rope does not rewind	Very dirty or corroded	Clean rewind spring or replace rope rotor
	Insufficient spring tension	Check rewind spring and increase tension
	Rewind spring broken	Install new rope rotor
Starter rope cannot be pulled out far enough	Spring overtensioned	Check rewind spring and reduce tension
Starter rope can be pulled out almost without resistance (crankshaft does not turn)	Guide pegs on pawls or pawls themselves are worn	Fit new pawls
	Spring clip on pawl fatigued	Fit new spring clip
Starter rope is difficult to pull or rewinds very slowly	Starter mechanism is very dirty	Thoroughly clean complete starter mechanism
	Lubricating oil on rewind spring becomes viscous at very low outside temperatures (spring windings stick together)	Coat rewind spring with a little standard solvent-based degreasant (containing no chlorinated or halogenated hydrocarbons), then pull rope carefully several times until normal action is restored



Download the full PDF manual instantly.

Our customer service e-mail:

aservicemanualpdf@yahoo.com