 


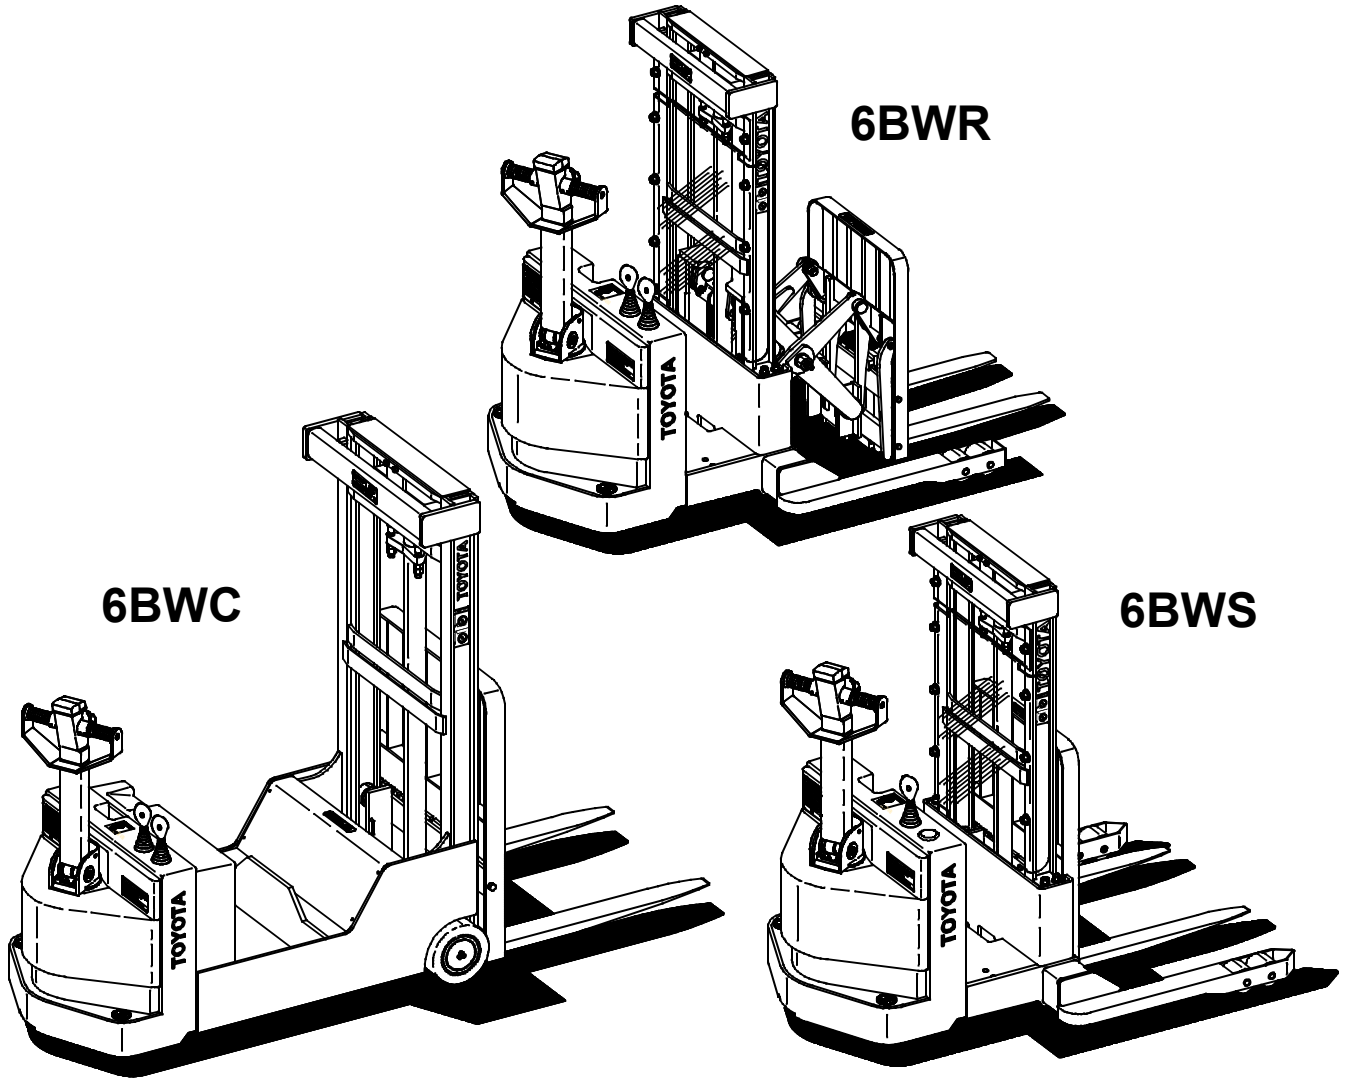

6BWC10/15/20 6BWS11/15/20 6BWR15

Electric Walkie High Lifter Trucks

Effective Serial Number 6BWC10-20001 - UP



-  **WARNING** Read and observe all warnings on this unit before operating it.
-  **WARNING DO NOT** operate this equipment unless all factory installed guards and shields are properly secured in place.

Standard Codes

- B-Code = Business area
 F-Code = Product family
 T-Code = Product type
 C-Code = Component function

Worksheet standard

- W-Code = Working code
 R-Code = Reason code
 SO-Code = Assortment

F-Code List

PS Powered Pallet Stackers

T-Code List

| No. | Model |
|------|--------------|
| 6BWC | 6BWC10/15/20 |
| 6BWS | 6BWS11/15/20 |
| 6BWR | 6BWR15 |

C-Code List

| No | Function Group | C-Code |
|----|---|--------|
| 0 | Chassis | 0000 |
| 1 | Motors | 1000 |
| 2 | Drive Gear / Transmission | 2000 |
| 3 | Brake / Wheel System | 3000 |
| 4 | Steering System | 4000 |
| 5 | Electrical System | 5000 |
| 6 | Hydraulic / Pneumatic System | 6000 |
| 7 | Operating Function-lifting Mast / Cylinders | 7000 |

F-code Section C-code

Standard Codes

Version no T-code
001

| | | |
|----|-------------------------------------|-------|
| 8 | Peripheral / Installation Equipment | 8000 |
| 9 | Optionals / Attachments | 9000 |
| 10 | Tools | 10000 |

Table of Contents

| | |
|--|-----------|
| Standard Codes | 1 |
| Warning Symbols | 13 |
| Warning Levels | 13 |
| Prohibitory Symbols | 14 |
| Ordinance Symbols | 14 |
| Safety | 15 |
| General Safety | 15 |
| Battery Safety | 19 |
| Static Safety | 24 |
| Welding Safety | 25 |
| Introduction, Service Manual | 27 |
| Contents, Section M | 29 |
| Machine Information | 29 |
| General Product Information | 31 |
| Presentation of Walkie Trucks. | 31 |
| Truck Side Views | 32 |
| Intended Truck Application | 32 |
| Prohibited Truck Application | 32 |
| Truck Data | 33 |
| 6BWC10 Dimensions | 34 |
| 6BWC15 Dimensions | 35 |
| 6BWC20 Dimensions | 36 |
| 6BWS11 Dimensions | 37 |
| 6BWS15 Dimensions | 38 |
| 6BWS20 Dimensions | 39 |
| 6BWR15 Dimensions | 40 |
| Data Plate | 41 |
| Main Components | 42 |
| Inch (SAE) and Metric Fasteners | 45 |
| Introduction | 45 |
| Nomenclature, Threads | 46 |
| Strength Identification | 47 |
| Conversion of Metric and English Units | 54 |
| Technical Service Data | 57 |
| Ordering Spare Parts | 61 |
| Contents, Section P | 63 |

Table of Contents

| | |
|---|------------|
| Planned Maintenance | 63 |
| Introduction, Maintenance | 65 |
| Jacking Truck Off The Floor | 66 |
| Elevate Rear of Truck | 66 |
| Elevate Either Side of Truck | 66 |
| Lubricants | 67 |
| Standard | 67 |
| Corrosion | 67 |
| Cold Storage | 68 |
| Service Schedule | 71 |
| Planned Maintenance Schedule | 71 |
| Planned Maintenance Procedures | 76 |
| Services Performed Daily or Every 8 Operating Hours | 76 |
| Services Performed Monthly or Every 120 Operating Hours. | 77 |
| Services Performed Every 480 or 960 Operating Hours | 80 |
| Services Performed Annually or Every 1400 Operating Hours | 81 |
| Lubrication Chart | 83 |
| Oil and Grease Specifications | 84 |
| Approved Oils and Grease | 84 |
| 6BWC Grease & Mast Adjustment Points Location | 85 |
| 6BWS Grease & Mast Adjustment Points Location | 86 |
| 6BWR Grease & Mast Adjustment Points Location | 87 |
| Contents, Section S | 89 |
| Service Instructions | 89 |
| Frame/Chassis | 91 |
| General | 93 |
| Main Components | 93 |
| Inspection Covers | 95 |
| Battery Roller (Optional) | 103 |
| Battery Cover, Optional (6BWS11 "EE" Trucks Only) | 105 |
| Inspection | 105 |
| Removal | 105 |
| Installation | 106 |
| Battery Rollers | 106 |
| Inspection | 106 |
| Replacement | 106 |
| Driver Controls, One Spool | 107 |
| Removal | 109 |
| Installation | 110 |

Table of Contents

| | |
|---|------------|
| Driver Controls, Two Spool | 111 |
| Removal | 114 |
| Installation | 115 |
| | |
| Decals | 117 |
| Decal with Protective Sheet | 117 |
| Decal without Protective Sheet | 117 |
| | |
| Motor Maintenance | |
| Schedule/Troubleshooting | 119 |
| General Information | 119 |
| Operating Conditions | 119 |
| Troubleshooting | 120 |
| | |
| Motor Repair | 127 |
| Pump Motor | 127 |
| Pump Motor Removal | 128 |
| Pump Motor Installation | 128 |
| Drive Motor | 129 |
| Brush Replacement | 133 |
| Drive Motor Removal | 133 |
| Drive Motor Installation | 134 |
| Component Repair | 136 |
| Disassembly | 136 |
| Inspection | 138 |
| Drive End head | 138 |
| Commutator End Head | 138 |
| Bearings | 138 |
| Brush and Commutator | 139 |
| Armature | 141 |
| Frame and Field Assembly | 142 |
| Assembly/Testing | 143 |
| | |
| Transmission | 145 |
| System Description | 145 |
| Troubleshooting | 145 |
| Kick Panel | 146 |
| Transmission Repair | 147 |
| Removal | 148 |
| Installation | 149 |
| Transmission Assembly | 151 |
| Disassembly | 152 |
| Assembly | 152 |
| Axle Seal | 154 |
| Removal | 154 |
| Installation | 154 |
| | |
| Parking Brake System | 157 |
| Brake Theory of Operation | 159 |

Table of Contents

| | |
|---|------------|
| Brake Adjustment | 160 |
| Brake Shoe Removal / Installation | 161 |
| Drive Wheel | 163 |
| Removal | 163 |
| Installation | 164 |
| Tire Pressing Procedure | 165 |
| Support/Swivel Wheel | 167 |
| Maintenance and Adjustments | 170 |
| Caster Adjustment | 171 |
| Troubleshooting | 172 |
| Stabilizing Caster | 172 |
| Load Wheels | 173 |
| Removal and Installation | 176 |
| Caster Assembly | 177 |
| Disassembly | 178 |
| Inspection | 179 |
| Assembly | 180 |
| Installation | 181 |
| Steering Arm/Wheel, Tiller Arm | 183 |
| Removal | 184 |
| Inspection | 185 |
| Installation | 186 |
| Steering Arm/Wheel, Head | 187 |
| Control Handle Head | 188 |
| Removal | 188 |
| Installation | 188 |
| Direction Control Switches | 189 |
| Raise, Lower, and Horn Switches | 191 |
| Potentiometer | 194 |
| Removal | 194 |
| Installation | 195 |
| Reverser Assembly Replacement | 199 |
| Electrical Functions | 201 |
| General | 201 |
| Adjustable Settings | 201 |
| References | 201 |
| Key Switch S17 in ON Position | 202 |
| Operating Arm in Drive Position, S10, Brake Switch Closed | 202 |
| Travel Request, Forks First | 202 |
| Travel Request, Forks Trailing | 202 |
| Reversing/Motor Brake Forks First to Forks Trailing Direction | 203 |
| Reversing/Motor Brake Forks Trailing to Forks First Direction | 203 |

Table of Contents

| | |
|---|------------|
| Reverser switch | 203 |
| Lifting Forks | 203 |
| Lowering Forks | 204 |
| Horn | 204 |
| Options | 204 |
| Lifting Forks (Manual Valve) | 204 |
| Tilting Forks | 204 |
| Side Shifting Forks | 204 |
| Extend/Retract Forks | 205 |
| Electrical Symbols | 207 |
| Electrical Schematics | 213 |
| Battery | 219 |
| Removal | 219 |
| Installation | 220 |
| Battery Maintenance | 221 |
| Battery Inspection and Care | 221 |
| Battery Exterior Cleaning | 222 |
| Charging | 222 |
| Storage | 223 |
| Battery History Record | 223 |
| Battery Connector | 225 |
| Location | 225 |
| Inspection | 226 |
| Installation | 226 |
| 200 Amp System Line Contactor | 229 |
| Replacement | 229 |
| Removal | 229 |
| Installation | 229 |
| 300 Amp System Line Contactor (6BWC15/20 only) | 231 |
| Maintenance | 231 |
| Removal/Replacement of Contact Tips | 232 |
| 200/300 Amp System "EE" Line Contactor | 233 |
| Maintenance | 233 |
| Removal/Replacement of Contact Tips | 234 |
| Battery Controller/Hourmeter/Lift Interrupt | 237 |
| General Information | 237 |
| Electrical | 238 |
| Voltage | 238 |
| Battery Controller (BC) | 239 |
| General Information | 239 |
| Reset | 241 |

Table of Contents

| | |
|--|------------|
| Key Switch | 241 |
| Hourmeter | 242 |
| Troubleshooting | 242 |
| Battery Discharge Indicator (BDI) | 242 |
| Hourmeter | 245 |
| Start/Stop Switches | 247 |
| General | 247 |
| Test/Inspection | 247 |
| Master Control On/Off Switch (S21) | 249 |
| Inspection | 249 |
| Removal | 249 |
| Installation | 249 |
| Light Assemblies | 251 |
| Warning Lights (Option) | 251 |
| Removal | 253 |
| Installation | 253 |
| Travel/Back-up Alarm (Option) | 254 |
| Removal | 254 |
| Installation | 254 |
| Transistor Controller | 255 |
| Basics Of Circuit Operation | 255 |
| Control Features | 257 |
| Maintenance | 258 |
| Safety | 258 |
| Cleaning | 258 |
| Motor Circuit | 259 |
| Control Circuit | 260 |
| Troubleshooting Guidelines | 261 |
| General | 263 |
| Shorts to Frame Test | 264 |
| Definitions | 268 |
| Diagnostics and Troubleshooting | 269 |
| Handset Diagnostics | 269 |
| Troubleshooting | 269 |
| Troubleshooting Chart | 271 |
| Technical Specification | 276 |
| Troubleshooting Chart Using Handset | 277 |
| Transistor Controller Troubleshooting | 279 |
| Troubleshooting Chart Index | 279 |
| Troubleshooting Charts | 280 |
| Hydraulic System | 299 |
| General | 299 |
| Description of Function | 299 |
| Main Components | 300 |

Table of Contents

| | |
|--|------------|
| Lift (Solenoid valve) | 300 |
| Lift (Mechanical Valve) | 300 |
| Lower (Solenoid Valve) | 300 |
| Lower (Mechanical Valve) | 300 |
| Relief Pressure | 300 |
| Compensating Cylinder | 301 |
| Reach (Solenoid valve) | 301 |
| Tilt (Solenoid valve) | 301 |
| Sideshift (Solenoid valve) | 301 |
| Maintenance | 302 |
| Adjustments | 303 |
| Troubleshooting | 304 |
| Primary Malfunctions | 305 |
| Definitions | 306 |
| Removal | 307 |
| Installation | 309 |
| | |
| Hydraulic Schematics | 311 |
| | |
| Hydraulic Fluid | 315 |
| Hydraulic Fluid Selection | 315 |
| Changing Hydraulic System Fluid | 315 |
| System Draining | 316 |
| Refilling System | 317 |
| Bleeding Hydraulic System | 318 |
| | |
| Hydraulic Tank | 319 |
| Removal | 320 |
| Installation | 320 |
| | |
| Hydraulic Pump Assembly | 321 |
| Disassembly | 323 |
| Inspection | 324 |
| Assembly | 325 |
| | |
| One Spool Control Valve | 327 |
| Operators Controls Removal | 328 |
| Control Valve Disassembly and Inspection | 328 |
| Operators Controls Installation | 329 |
| | |
| Two Spool Control Valve | 330 |
| Operators Controls Removal | 331 |
| Control Valve Disassembly and Inspection | 331 |
| Operators Controls Installation | 332 |
| Lift Cylinder, Two Stage Mast | 337 |
| Removal | 337 |
| Disassembly | 338 |
| Assembly | 338 |
| Installation | 338 |

Table of Contents

| | |
|---|------------|
| Two Stage Full Freelif Mast Cylinder Repair | 339 |
| Removal | 339 |
| Disassembly | 340 |
| Assembly | 340 |
| Installation | 340 |
| Two Stage Full Freelif Mast Staging Cylinder Repair | 341 |
| Removal | 341 |
| Disassembly | 342 |
| Assembly | 342 |
| Installation | 342 |
| Lift Cylinder, Three Stage Mast | 343 |
| Repair | 346 |
| Removal | 346 |
| Disassembly | 347 |
| Assembly | 347 |
| Installation | 347 |
| Reach Cylinder, 6BWR15 | 349 |
| Removal | 351 |
| Disassembly | 352 |
| Inspection | 353 |
| Assembly | 354 |
| Installation | 355 |
| Tilt Cylinder | 357 |
| Removal | 359 |
| Disassembly | 360 |
| Inspection | 361 |
| Assembly | 362 |
| Installation | 363 |
| Removal | 365 |
| Disassembly | 366 |
| Inspection | 367 |
| Assembly | 368 |
| Installation | 369 |
| Shimming Carriage with Mast on Truck. | 377 |
| Repair | 379 |
| Removal | 379 |
| Disassembly | 380 |
| Assembly | 381 |
| Installation | 383 |
| Lift Chain | 384 |
| Lift Chain Adjustment: | 384 |
| Lift Chain Maintenance | 384 |
| Lift Chain Inspection | 384 |
| Lift Chain Replacement | 391 |
| Mast, Three Stage | 393 |

Table of Contents

| | |
|---|------------|
| Shimming Carriage with Mast on Truck | 399 |
| Repair | 401 |
| Removal | 401 |
| Disassembly | 402 |
| Assembly | 403 |
| Installation | 405 |
| Lift Chain | 406 |
| Sideshifter | 407 |
| Mounting Instructions | 409 |
| Installation | 409 |
| Operation | 410 |
| Maintenance | 410 |
| Carriage Removal | 411 |
| Upper Pad Replacement | 411 |
| Lower Pad Replacement | 412 |
| Cylinder | 413 |
| Troubleshooting | 414 |
| No Sideshifting | 414 |
| Very Slow Sideshifting | 414 |
| Irregular Sideshifting | 415 |
| Single Reach, 6BWR | 417 |
| Maintenance | 419 |
| Inspection | 419 |
| Adjustment | 420 |
| Repair | 424 |
| Disassembly | 424 |
| Assembly | 426 |
| Carriage Bumpers | 428 |
| Reach Adjustment | 428 |
| Fork Carriage Pivot Pins | 430 |
| Carriage Roller Bearings | 430 |
| Removal | 430 |
| Installation | 430 |
| Removal | 432 |
| Inspection | 432 |
| Installation | 433 |
| Load Backrest | 435 |
| Removal | 436 |
| Installation | 436 |
| Handset Operation | 437 |
| Operating Modes | 440 |
| Revert to Previous Settings | 443 |
| Handset Self Test | 443 |
| Electrical Controllers (Handset) | 445 |

Table of Contents

| | |
|--|-----|
| Display Screen | 446 |
| Menu Navigation Key | 446 |
| Data Inc/Dec Key | 446 |
| Bookmark Keys | 446 |
| Operation | 447 |
| Menu Structure | 447 |
| Main Menu | 448 |
| Interface Protocols and Backward Compatibility | 449 |
| Parameter Changing | 450 |
| Real-Time Monitoring | 450 |
| Reading Faults and Diagnostic History File | 451 |
| Cloning and Restoring the Previous Programming | 451 |
| Information Displays | 452 |
| Programmer SetUp | 452 |

Warning Symbols

Always follow the warnings given in this Instruction Manual and on the truck to avoid accidents and incidents from occurring.

1. Warning Levels

Warning levels

Warning text is given in four levels and provide information on the risks, describe the consequences, and instruct how to avoid accidents.

DANGER

Warns that an accident will occur if the instructions are not followed.

The consequences are serious personal injury or possibly death, and/or extremely large material damage.

WARNING

Warns that an accident can occur if the instructions are not followed.

The consequences are serious personal injury or possibly death, and/or large material damage.

CAUTION

Warns that an accident can occur if the instructions are not followed.

The consequences are personal injury and/or material damage.

NOTE!

Marks the risk of an accident or breakdown if the instructions are not followed.

Prohibitory Symbols

Version no
001

T-code

Prohibitory Symbols



NO SMOKING

If smoking occurs in situations where a restriction against smoking is stated, a serious accident can occur.



OPEN FLAMES PROHIBITED

If open flames are used in situations where open flames are prohibited, a serious accident can occur.



GENERAL PROHIBITION

If the prohibition is ignored, a serious accident can occur.

1. Ordinance Symbols



SAFETY SHOES

When the directive for safety shoes is given, safety shoes shall always be worn to reduce personal injury.



PROTECTIVE GLASSES

When the directive for protective glasses is given, protective glasses shall always be worn to reduce personal injury.

 
Safety

1. General Safety


Do **NOT** operate or work on truck unless trained, qualified, and authorized to do so and have read the Operator's Manual.



Know the truck controls and what they do.

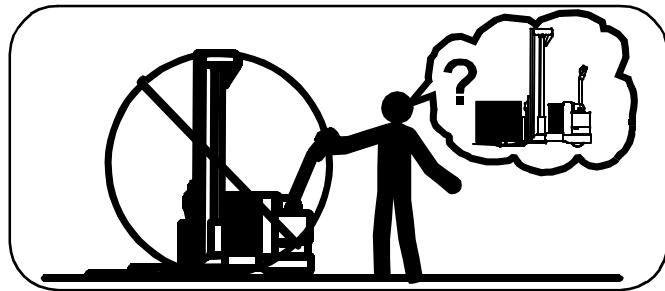

 Do **NOT** operate truck if it needs repair or if it is in any way unsafe.

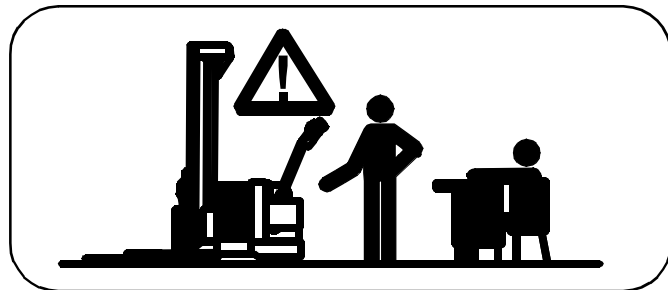


Safety


Version no
001

T-code

 
Operate truck only from the operator's position.

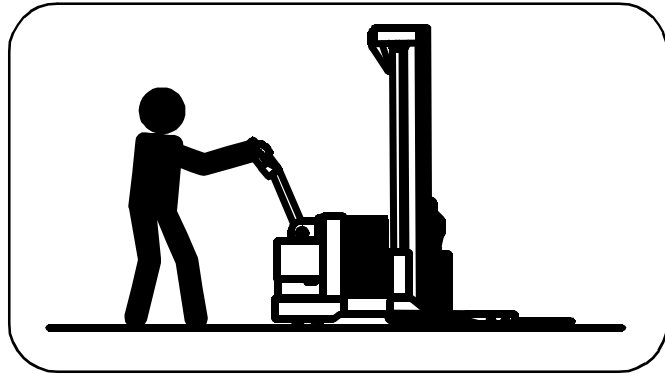

 
Before working on truck always turn key switch to **OFF** and disconnect truck's battery connector (unless this manual states otherwise).

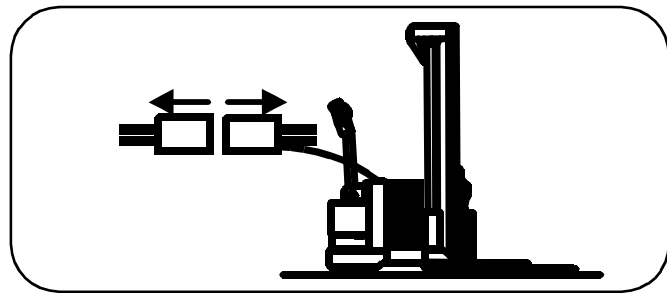

 
Do **NOT** wear watches, rings, or jewelry when working on truck.

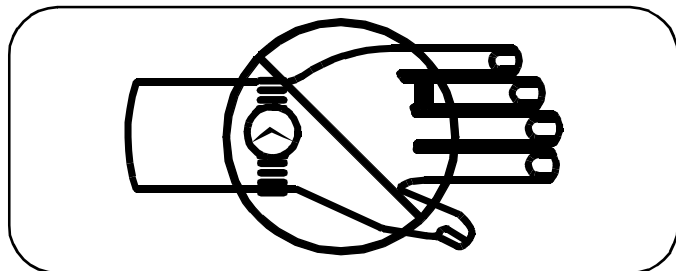

 Follow the scheduled lubrication, maintenance, and inspection steps.

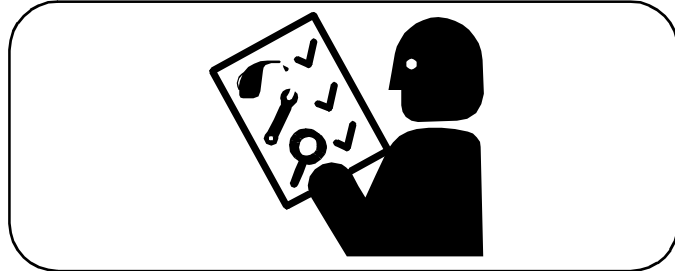

 
Follow exactly the safety and repair instructions in this manual. Do **NOT** take “shortcuts”.

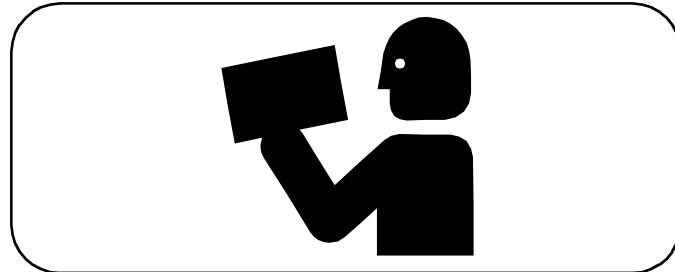

Do **NOT** Use an open flame near the truck.



 
Do **NOT** use gasoline or other flammable liquids for cleaning parts.

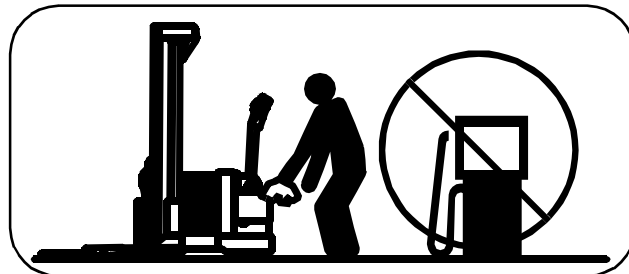


SafetyVersion no
001

T-code

 
Clean up any hydraulic fluid, oil, or grease that has leaked or spilled on the floor.

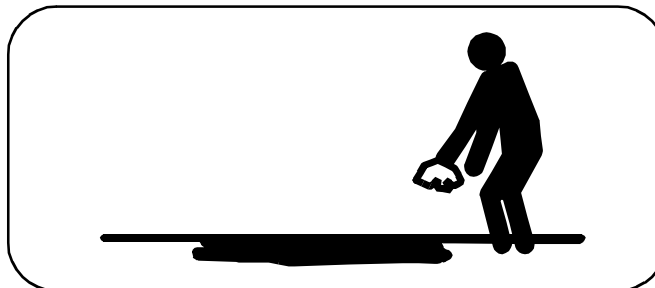


Always operate and park truck indoors.

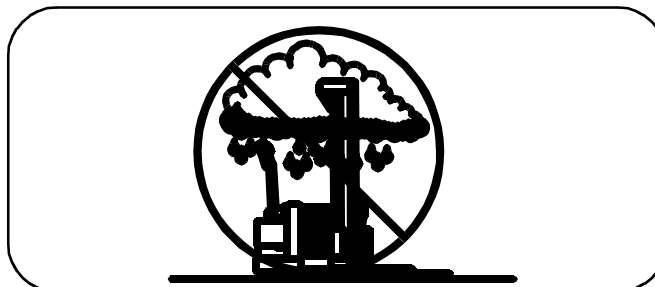 


Do **NOT** wash truck with a hose.

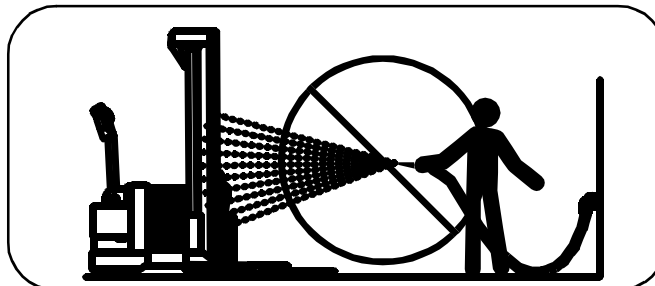 

 
Do **NOT** add to or modify truck without written approval from **Toyota**

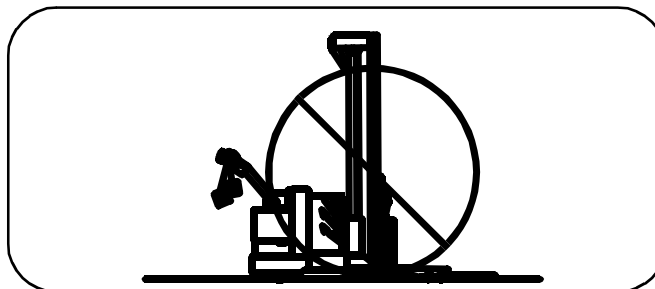


Battery Safety

 **WARNING** As a battery is being charged, an explosive gas mixture forms within and around each cell. If the area is not properly ventilated, this explosive gas can remain in or around the battery for several hours after charging. Be sure there are no open flames or sparks in the charging area. An open flame or spark can ignite this gas, resulting in serious damage or injury.

 **WARNING** Battery electrolyte is a solution of sulfuric acid and water. Battery acid causes burns. Should any electrolyte come in contact with clothing or skin, flush the area immediately with cold water. Should the solution get on the face or in the eyes, flush the area with cold water and get medical help immediately.

 Read, understand and follow procedures, recommendations and specifications in the battery and battery charger manufacturer's manuals.

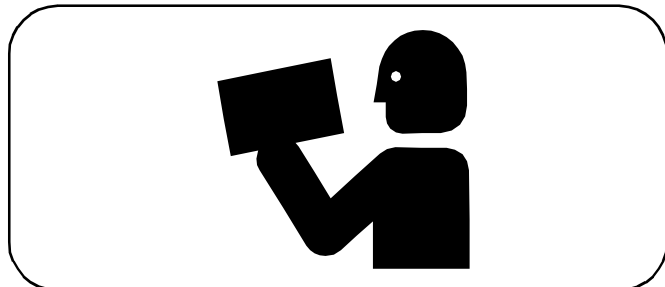


Battery Safety

Version no


T-code

001

 
Wear personal protective equipment to protect eyes, face, and skin when checking, handling, or filling batteries. This equipment includes goggles or face shield, rubber gloves (with or without arm shields) and a rubber apron.

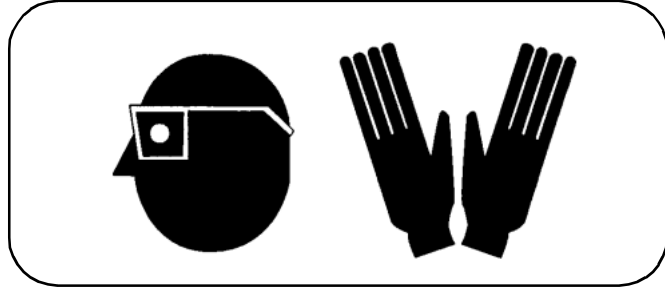

 Make sure a shower and eyewash station are nearby in case there is an accident.

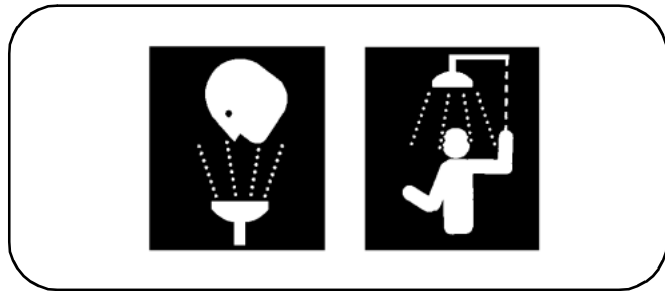


 A battery gives off explosive gases. Never smoke, use an open flame, or use anything that gives off sparks near a battery.

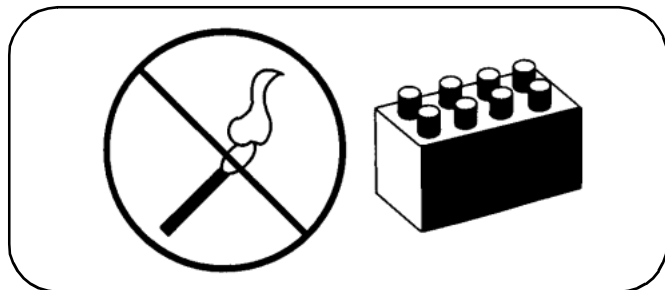


Battery Safety

 
Keep the charger area well-ventilated to avoid hydrogen gas concentration.

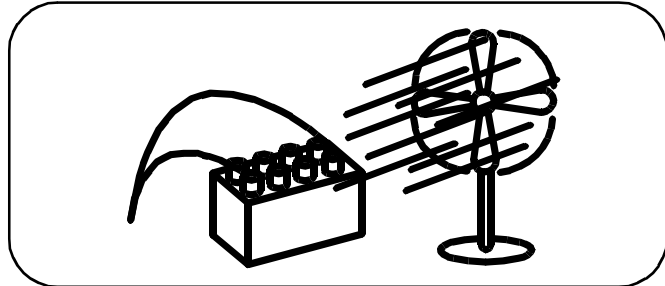

 Turn the key switch off before disconnecting the battery from the truck at the battery connector. Do **NOT** break live circuits at the battery terminals. A spark often occurs at the point where a live circuit is broken.

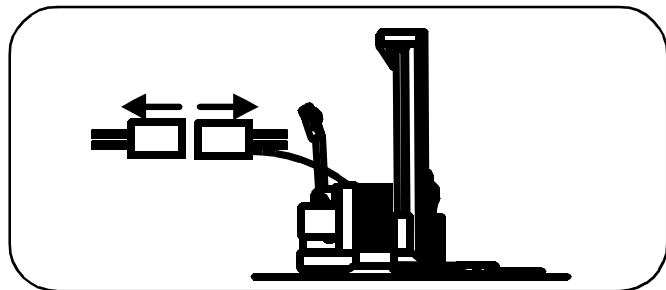

 Do **NOT** lay tools or metal objects on top of battery. A short circuit or explosion could result.

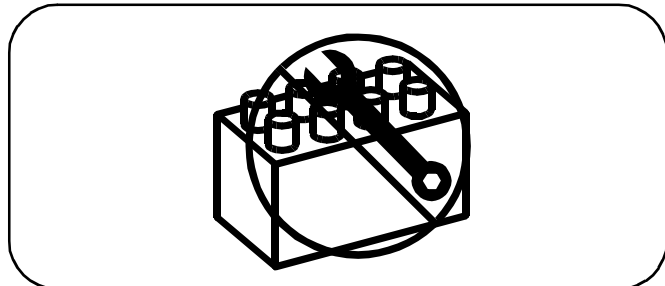


Battery Safety

Version no
001

T-code


Keep batteries clean. Corrosion causes shorts to the frame and possibly sparks.

 Keep plugs, terminals, cables, and receptacles in good condition to avoid shorts and sparks.

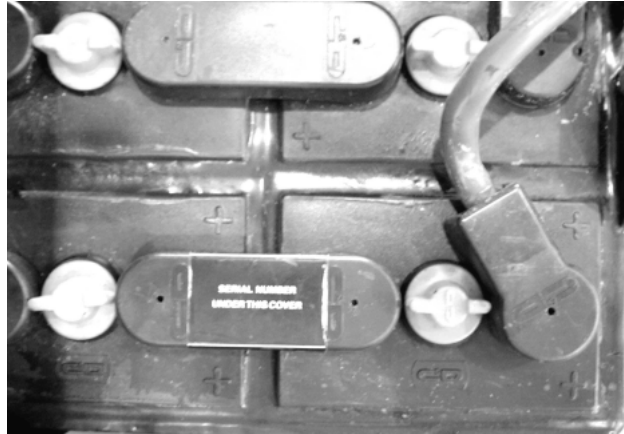

Keep filler plugs firmly in place at all times except when the electrolyte level is checked, when water is added to the cells or when the specific gravity is checked.

 Make sure vent holes in filler plugs are open to allow gas to escape from the cells.

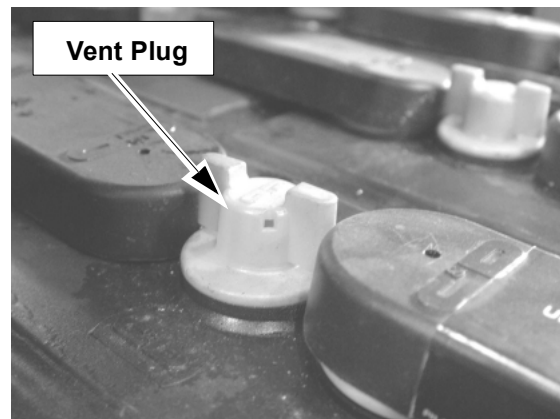



Download the full PDF manual instantly.

Our customer service e-mail:

aservicemanualpdf@yahoo.com