







 



YAMAHA

YJ50RN

SERVICE MANUAL

TABLE OF CONTENTS

GENERAL INFORMATION		GEN INFO	1
SPECIFICATIONS		SPEC	2
PERIODIC CHECKS AND ADJUSTMENTS		CHK ADJ	3
CHASSIS		CHAS	4
ENGINE		ENG	5
CARBURETION		CARB	6
ELECTRICAL SYSTEM		ELEC	7
TROUBLESHOOTING		TRBL SHTG	8

CONTENTS

CHAPTER 1 GENERAL INFORMATION

SCOOTER IDENTIFICATION	1-1
VEHICLE IDENTIFICATION NUMBER	1-1
MODEL CODE	1-1
IMPORTANT INFORMATION	1-2
PREPARATION FOR REMOVAL AND DISASSEMBLY	1-2
REPLACEMENT PARTS	1-2
GASKETS, OIL SEALS AND O-RINGS	1-2
LOCK WASHERS/PLATES AND COTTER PINS	1-2
BEARINGS AND OIL SEALS	1-3
CIRCLIPS	1-3
CHECKING THE CONNECTIONS	1-4
SPECIAL TOOLS	1-5







 
CHAPTER 2 SPECIFICATIONS

GENERAL SPECIFICATIONS	2-1
ENGINE SPECIFICATIONS	2-2
CHASSIS SPECIFICATIONS	2-6
ELECTRICAL SPECIFICATIONS	2-9
CONVERSION TABLE	2-11
GENERAL TIGHTENING TORQUE SPECIFICATIONS	2-11
TIGHTENING TORQUES	2-12
ENGINE TIGHTENING TORQUES	2-12
CHASSIS TIGHTENING TORQUES	2-13
LUBRICATION POINTS AND LUBRICANT TYPES	2-14
ENGINE	2-14
CHASSIS	2-15
CABLE ROUTING	2-16

CHAPTER 3

PERIODIC CHECKS AND ADJUSTMENTS

INTRODUCTION	3-1
PERIODIC MAINTENANCE AND LUBRICATION INTERVALS	3-1
SIDE COVERS AND FOOTREST BOARD	3-3
FRONT PANEL AND LEG SHIELD	3-5
ADJUSTING THE ENGINE IDLING SPEED	3-7
ADJUSTING THE THROTTLE CABLE FREE PLAY	3-8
BLEEDING THE AUTOLUBE PUMP	3-9
CHECKING THE SPARK PLUG	3-10
MEASURING THE COMPRESSION PRESSURE	3-11
CHECKING THE ENGINE OIL LEVEL	3-13
REPLACING THE TRANSMISSION OIL	3-14
CLEANING THE AIR FILTER ELEMENT	3-16
CHECKING THE CARBURETOR JOINT	3-17
CHECKING THE FUEL AND VACUUM HOSES	3-17
CHECKING THE CRANKCASE BREATHER HOSE	3-18
CHECKING THE EXHAUST SYSTEM	3-18
CHASSIS	3-19
ADJUSTING THE FRONT BRAKE	3-19
ADJUSTING THE REAR BRAKE	3-19
CHECKING THE BRAKE SHOES	3-20
CHECKING AND ADJUSTING THE STEERING HEAD	3-20
CHECKING THE FRONT SHOCK ABSORBER	3-22
CHECKING THE TIRES	3-22
CHECKING THE WHEELS	3-25
CHECKING AND LUBRICATING THE CABLES	3-26
LUBRICATING THE LEVERS	3-26
LUBRICATING THE CENTERSTAND	3-26
ELECTRICAL SYSTEM	3-27
CHECKING AND CHARGING THE BATTERY	3-27
CHECKING THE FUSE	3-34
REPLACING THE HEADLIGHT BULB	3-35
ADJUSTING THE HEADLIGHT BEAM	3-36

	
GEN INFO	1
	
SPEC	2
	
CHK ADJ	3
	
CHAS	4
	
ENG	5
	
CARB	6
	
ELEC	7
?	
TRBL SHTG	8

CHAPTER 4








CHASSIS

FRONT WHEEL AND BRAKE	4-1
CHECKING THE FRONT WHEEL	4-5
CHECKING THE SPEEDOMETER GEAR UNIT.....	4-6
CHECKING THE BRAKE	4-7
ASSEMBLING THE BRAKE SHOE PLATE	4-8
INSTALLING THE FRONT WHEEL	4-8
REAR WHEEL AND BRAKE	4-10
CHECKING THE REAR WHEEL.....	4-12
CHECKING THE BRAKE	4-12
INSTALLING THE BRAKE SHOE PLATE.....	4-13
INSTALLING THE BRAKE SHOES.....	4-14
INSTALLING THE REAR WHEEL.....	4-14
FRONT SHOCK ABSORBER ASSEMBLIES	4-15
CHECKING THE FRONT SHOCK ABSORBER ASSEMBLIES.....	4-16
INSTALLING THE RELAY ARM.....	4-16
HANDLEBAR	4-17
REMOVING THE HANDLEBAR	4-19
CHECKING THE HANDLEBAR.....	4-19
INSTALLING THE HANDLEBAR.....	4-20
STEERING HEAD	4-22
REMOVING THE FORK	4-24
CHECKING THE STEERING HEAD	4-24
INSTALLING THE STEERING HEAD	4-25
REAR SHOCK ABSORBER ASSEMBLY	4-26
REMOVING THE REAR SHOCK ABSORBER ASSEMBLY	4-27
CHECKING THE REAR SHOCK ABSORBER ASSEMBLY.....	4-27
INSTALLING THE REAR SHOCK ABSORBER ASSEMBLY.....	4-27

CHAPTER 5

ENGINE

ENGINE REMOVAL	5-1
INSTALLING THE ENGINE	5-3
 CYLINDER HEAD, CYLINDER AND PISTON	5-4
REMOVING THE CYLINDER AND PISTON	5-6
CHECKING THE CYLINDER HEAD	5-6
CHECKING THE CYLINDER AND PISTON.....	5-7
CHECKING THE PISTON RINGS	5-8
CHECKING THE PISTON PIN	5-9
INSTALLING THE PISTON AND CYLINDER	5-11
 KICKSTARTER	5-13
SHEAVES COVER	5-13
CHECKING THE KICKSTARTER	5-15
INSTALLING THE KICKSTARTER	5-15
 BELT DRIVE	5-16
REMOVING THE SECONDARY PULLEY AND V-BELT	5-19
REMOVING THE PRIMARY SHEAVE	5-20
DISASSEMBLING THE SECONDARY PULLEY	5-20
CHECKING THE CLUTCH SHOES	5-20
CHECKING THE SECONDARY PULLEY	5-21
CHECKING THE V-BELT	5-22
CHECKING THE PRIMARY PULLEY WEIGHTS.....	5-22
ASSEMBLING THE SECONDARY PULLEY	5-23
INSTALLING THE PRIMARY PULLEY	5-24
INSTALLING THE BELT DRIVE.....	5-25
 STARTER CLUTCH AND STARTER MOTOR	5-27
CHECKING THE STARTER CLUTCH	5-28
INSTALLING THE STARTER CLUTCH	5-28
 TRANSMISSION	5-30
CHECKING THE TRANSMISSION	5-32
 GENERATOR AND AUTOLUBE PUMP	5-33
STATOR COIL ASSEMBLY	5-33
AUTOLUBE PUMP	5-34
REMOVING THE GENERATOR	5-35
CHECKING THE AUTOLUBE PUMP	5-35
INSTALLING THE AUTOLUBE PUMP	5-35
INSTALLING THE GENERATOR	5-36


GEN INFO 1

SPEC 2

CHK ADJ 3

CHAS 4

ENG 5

CARB 6

ELEC 7
?
TRBL SHTG 8

CRANKCASE	5-37
DISASSEMBLING THE CRANKCASE	5-39
CHECKING THE CRANKCASE	5-39
CHECKING THE BEARINGS AND OIL SEALS	5-40
CHECKING THE REED VALVE	5-40
ASSEMBLING THE CRANKCASE	5-41
CRANKSHAFT	5-42
REMOVING THE CRANKSHAFT ASSEMBLY	5-43
CHECKING THE CRANKSHAFT	5-43
INSTALLING THE CRANKSHAFT	5-44

CHAPTER 6 CARBURETION

CARBURETOR	6-1
CHECKING THE CARBURETOR	6-4
ASSEMBLING THE CARBURETOR	6-5
INSTALLING THE CARBURETOR	6-6
MEASURING AND ADJUSTING THE FLOAT HEIGHT	6-7
CHECKING THE AUTOCHOKE ASSEMBLY	6-7
CHECKING THE FUEL COCK OPERATION	6-8







 

CHAPTER 7 ELECTRICAL

ELECTRICAL COMPONENTS	7-1
SWITCHES	7-2
CHECKING SWITCH CONTINUITY	7-2
CHECKING THE SWITCHES	7-3
CHECKING THE BULBS AND BULB SOCKETS	7-5
TYPES OF BULBS	7-5
CHECKING THE CONDITION OF THE BULBS	7-6
CHECKING THE CONDITION OF THE BULB SOCKETS	7-7
IGNITION SYSTEM	7-8
CIRCUIT DIAGRAM	7-8
TROUBLESHOOTING	7-9
ELECTRIC STARTING SYSTEM	7-13
CIRCUIT DIAGRAM	7-13
TROUBLESHOOTING	7-14

STARTER MOTOR	7-17
CHECKING THE STARTER MOTOR	7-19
ASSEMBLING THE STARTER MOTOR	7-20
CHARGING SYSTEM	7-21
CIRCUIT DIAGRAM	7-21
TROUBLESHOOTING	7-22
LIGHTING SYSTEM	7-24
CIRCUIT DIAGRAM	7-24
TROUBLESHOOTING	7-25
CHECKING THE LIGHTING SYSTEM	7-26
SIGNALING SYSTEM	7-29
CIRCUIT DIAGRAM	7-29
TROUBLESHOOTING	7-31
CHECKING THE SIGNALING SYSTEM	7-32
AUTO CHOKE SYSTEM	7-39
CIRCUIT DIAGRAM	7-39
TROUBLESHOOTING	7-40

CHAPTER 8 TROUBLESHOOTING

STARTING FAILURE/HARD STARTING	8-1
ENGINE	8-1
FUEL SYSTEM	8-1
ELECTRICAL SYSTEMS	8-1
INCORRECT ENGINE IDLING SPEED	8-2
ENGINE	8-2
FUEL SYSTEM	8-2
ELECTRICAL SYSTEMS	8-2
POOR MEDIUM-AND-HIGH-SPEED PERFORMANCE	8-2
ENGINE	8-2
FUEL SYSTEM	8-2
FAULTY CLUTCH	8-2
ENGINE OPERATES BUT SCOOTER WILL NOT MOVE	8-2
CLUTCH SLIPS	8-2
POOR STARTING PERFORMANCE	8-2
POOR SPEED PERFORMANCE	8-2

	1
GEN INFO	1
	2
SPEC	2
	3
CHK ADJ	3
	4
CHAS	4
	5
ENG	5
	6
CARB	6
	7
ELEC	7
	8
TRBL SHTG	8

OVERHEATING	8-3
ENGINE	8-3
FUEL SYSTEM.....	8-3
CHASSIS	8-3
ELECTRICAL SYSTEMS	8-3
POOR BRAKING PERFORMANCE	8-3
UNSTABLE HANDLING	8-3
FAULTY LIGHTING OR SIGNALING SYSTEM	8-4
HEADLIGHT DOES NOT LIGHT	8-4
HEADLIGHT BULB BURNT OUT	8-4
TAIL/BRAKE LIGHT DOES NOT LIGHT	8-4
TAIL/BRAKE LIGHT BULB BURNT OUT	8-4
TURN SIGNAL DOES NOT LIGHT	8-4
TURN SIGNAL BLINKS SLOWLY	8-4
TURN SIGNAL REMAINS LIT	8-4
TURN SIGNAL BLINKS QUICKLY	8-4
HORN DOES NOT SOUND	8-4



Download the full PDF manual instantly.

Our customer service e-mail:

aservicemanualpdf@yahoo.com