

# SHOP MANUAL



**max**  
*avance*

# WA470-3

**WHEEL LOADER**

**SERIAL NUMBERS WA470-25001 AND UP**

**⚠ WARNING**

- This shop manual may contain attachment and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- WA470-3 mount the SA6D125E engine.  
For details of the engines, see the 6D125 series Engine shop manual.

**KOMATSU (CHANGZHOU) CONSTRUCTION MACHINERY CORP.**

# CONTENTS


<b>01</b>	<b>GENERAL .....</b>	<b>01-1</b>
<b>10</b>	<b>STRUCTURE AND FUNCTION .....</b>	<b>10-1</b>
<b>20</b>	<b>TESTING AND ADJUSTING .....</b>	<b>20-1</b>
<b>30</b>	<b>DISASSEMBLY AND ASSEMBLY .....</b>	<b>30-1</b>
<b>40</b>	<b>MAINTENANCE STANDARD .....</b>	<b>40-1</b>
<b>90</b>	<b>OTHERS .....</b>	<b>90-1</b>

# SAFETY

## SAFETY NOTICE

### IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

### GENERAL PRECAUTIONS

Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully BEFORE operating the machine.

1. Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
2. When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
  - Always wear safety glasses when hitting parts with a hammer.
  - Always wear safety glasses when grinding parts with a grinder, etc.
3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, hand shield, cap and other clothes suited for welding work.
4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
5. Keep all tools in good condition and learn the correct way to use them.

6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.

### PREPARATIONS FOR WORK

7. Before adding oil or making any repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
8. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
9. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.
10. Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

**PRECAUTIONS DURING WORK**

11. When removing the oil filler cap, drain plug or hydraulic pressure measuring plugs, loosen them slowly to prevent the oil from spurting out.  
Before disconnecting or removing components of the oil, water or air circuits, first remove the pressure completely from the circuit.
12. The water and oil in the circuits are hot when the engine is stopped, so be careful not to get burned.  
Wait for the oil and water to cool before carrying out any work on the oil or water circuits.
13. Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
14. When raising heavy components, use a hoist or crane.  
Check that the wire rope, chains and hooks are free from damage.  
Always use lifting equipment which has ample capacity.  
Install the lifting equipment at the correct places. Use a hoist or crane and operate slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
15. When removing covers which are under internal pressure or under pressure from a spring, always leave two bolts in position on opposite sides. Slowly release the pressure, then slowly loosen the bolts to remove.
16. When removing components, be careful not to break or damage the wiring. Damaged wiring may cause electrical fires.
17. When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip, or can even start fires.
18. As a general rule, do not use gasoline to wash parts. In particular, use only the minimum of gasoline when washing electrical parts.
19. Be sure to assemble all parts again in their original places.  
Replace any damaged parts with new parts.
  - When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is being operated.
20. When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. Also, check that connecting parts are correctly installed.
21. When assembling or installing parts, always use the specified tightening torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
22. When aligning two holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
23. When measuring hydraulic pressure, check that the measuring tool is correctly assembled before taking any measurements.

# FOREWORD

## GENERAL

This shop manual has been prepared as an aid to improve the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every opportunity.

This shop manual mainly contains the necessary technical information for operations performed in a service workshop. For ease of understanding, the manual is divided into the following chapters; these chapters are further divided into the each main group of components.

### STRUCTURE AND FUNCTION

This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

### DISASSEMBLY AND ASSEMBLY

This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations.

### MAINTENANCE STANDARD

This section gives the judgement standards when inspecting disassembled parts.

### NOTICE

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Use the specifications given in the book with the latest date, please consult your local komatsu distributor.

**HOW TO READ THE SHOP MANUAL SYMBOLS****VOLUMES**

Shop manuals are issued as a guide to carrying out repairs. They are divided as follows:

**Engine VOLUMES**








Structure and function volume

Disassembly and assembly volume.  
Before carrying out repairs, it is necessary that above volumes available.

**DISTRIBUTION AND UPDATING**

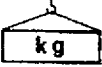
Any additions, amendments or other changes will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.

So that the shop manual can be of ample practical use, important safety and quality portions are marked with the following symbols.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing the work.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing the work.
	Weight	Weight of parts of systems. Caution necessary when selecting hoisting wire, or when working posture is important, etc.
	Tightening torque	Places that require special attention for the tightening torque during assembly.
	Coat	Places to be coated with adhesives and lubricants, etc.
	Oil, water	Places where oil, water or fuel must be added, and the capacity.
	Drain	Places where oil or water must be drained, and quantity to be drained.

# HOISTING INSTRUCTIONS

## HOISTING

Heavy parts (25 kg or more) must be lifted with a hoist, etc. In the **DISASSEMBLY AND ASSEMBLY** section, every part weighing 25 kg or more is indicated clearly with the symbol 

- If a part cannot be smoothly removed from the machine by hoisting, the following checks should be made:
  - 1) Check for removal of all bolts fastening the part to the relative parts.
  - 2) Check for existence of another part causing interference with the part to be removed.

### WIRE ROPES


- 1) Use adequate ropes depending on the weight of parts to be hoisted, referring to the table below:

Wire ropes (Standard "Z" or "S" twist ropes without galvanizing)		
Rope diameter	Allowable load	
	mm	kN      tons
10	9.8	1.0
11.2	13.7	1.4
12.5	15.7	1.6
14	21.6	2.2
16	27.5	2.8
18	35.3	3.6
20	43.1	4.4
22.4	54.9	5.6
30	98.1	10.0
40	176.5	18.0
50	274.6	28.0
60	392.2	40.0

★ The allowable load value is estimated to be one-sixth or one-seventh of the breaking strength of the rope used.


- 2) Sling wire ropes from the middle portion of the hook.

Slings near the edge of the hook may cause the rope to slip off the hook during hoisting, and a serious accident can result. Hooks have maximum strength at the middle portion.

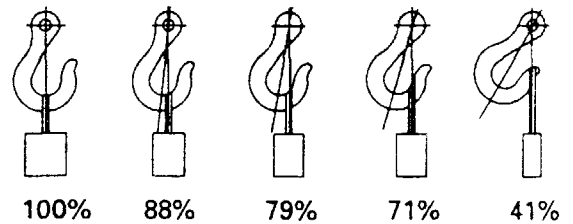


SAD00479

- 3) Do not sling a heavy load with one rope alone, but sling with two or more ropes symmetrically wound onto the load.

 Slings with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 4) Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with two or more ropes, the force subjected to each rope will increase with the hanging angles. The table below shows the variation of allowable load kN {kg} when hoisting is made with two ropes, each of which is allowed to sling up to 9.8 kN {1000 kg} vertically, at various hanging angles.

When two ropes sling a load vertically, up to 19.6 kN {2000 kg} of total weight can be suspended. This weight becomes 9.8 kN {1000 kg} when two ropes make a 120° hanging angle. On the other hand, two ropes are subjected to an excessive force as large as 39.2 kN {4000 kg} if they sling a 19.6 kN {2000 kg} load at a lifting angle of 150°.

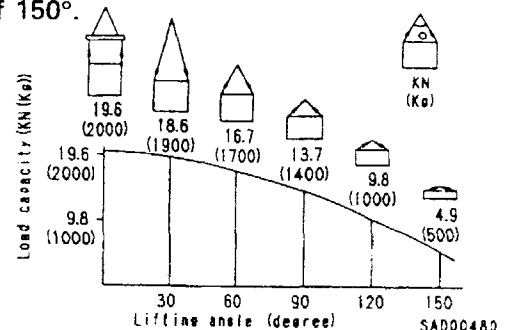

## COATING MATERIALS

★ For coating materials not listed below, use the equivalent of products shown in this list.

Category	Komatsu code	Part No.	Q'ty	Container	Main applications, features
Adhesives	LT-1A	790-129-9030	150 g	Tube	<ul style="list-style-type: none"> <li>Used to prevent rubber gaskets, rubber cushions, and cock plug from coming out.</li> </ul>
	LT-1B	790-129-9050	20 g (2 pes.)	Polyethylene container	<ul style="list-style-type: none"> <li>Used in places requiring an immediately effective, strong adhesive. Used for plastics (except polyethylene, polypropylene, tetrafluoroethylene and vinyl chloride), rubber, metal and non-metal.</li> </ul>
	LT-2	09940-00030	50 g	Polyethylene container	<ul style="list-style-type: none"> <li>Features: Resistance to heat and chemicals</li> <li>Used for anti-loosening and sealant purpose for bolts and plugs.</li> </ul>
	LT-3	790-129-9060 (Set of adhesive and hardening agent)	Adhesive: 1 kg Hardening agent: 50 g	Can	<ul style="list-style-type: none"> <li>Used as adhesive or sealant for metal, glass and plastic.</li> </ul>
	LT-4	790-129-9040	250 g	Polyethylene container	<ul style="list-style-type: none"> <li>Used as sealant for machined holes.</li> </ul>
	Loctite 648-50	79A-129-9110	50 cc	Polyethylene container	<ul style="list-style-type: none"> <li>Features: Resistance to heat, chemicals</li> <li>Used at joint portions subject to high temperatures.</li> </ul>
Gasket sealant	LG-1	790-129-9010	200 g	Tube	<ul style="list-style-type: none"> <li>Used as adhesive or sealant for gaskets and packing of power train case, etc.</li> </ul>
	LG-3	790-129-9070	1 kg	Can	<ul style="list-style-type: none"> <li>Features: Resistance to heat</li> <li>Used as sealant for flange surfaces and bolts at high temperature locations, used to prevent seizure.</li> <li>Used as sealant for heat resistance gasket for high temperature locations such as engine precombustion chamber, exhaust pipe, etc.</li> </ul>




Category	Komatsu code	Part No.	Q'ty	Container	Main applications, features
Gasket sealant	LG-4	790-129-9020	200 g	Tube	<ul style="list-style-type: none"> <li>• Features: Resistance to water, oil</li> <li>• Used as sealant for flange surface, thread.</li> <li>• Also possible to use as sealant for flanges with large clearance.</li> <li>• Used as sealant for mating surfaces of final drive case, transmission case.</li> </ul>
	LG-5	790-129-9080	1 kg	Polyethylene container	<ul style="list-style-type: none"> <li>• Used as sealant for various threads, pipe joints, flanges.</li> <li>• Used as sealant for tapered plugs, elbows, nipples of hydraulic piping.</li> </ul>
	LG-6	09940-00011	250 g	Tube	<ul style="list-style-type: none"> <li>• Features: Silicon based, resistance to heat, cold</li> <li>• Used as sealant for flange surface, tread.</li> <li>• Used as sealant for oil pan, final drive case, etc.</li> </ul>
	LG-7	09920-00150	150 g	Tube	<ul style="list-style-type: none"> <li>• Features: Silicon based, quick hardening type</li> <li>• Used as sealant for flywheel housing, intake manifold, oilpan, thermostat housing, etc.</li> </ul>
Molybdenum disulphide lubricant	LM-G	09940-00051	60 g	Can	<ul style="list-style-type: none"> <li>• Used as lubricant for sliding portion (to prevent from squeaking).</li> </ul>
	LM-P	09940-00040	200 g	Tube	<ul style="list-style-type: none"> <li>• Used to prevent seizure or scuffing of the thread when press fitting or shrink fitting.</li> <li>• Used as lubricant for linkage, bearings, etc.</li> </ul>
Grease	G2-LI	SYG2-400LI SYG2-350LI SYG2-400LI-A SYG2-160LI SYGA-160CNLI	Various	Various	<ul style="list-style-type: none"> <li>• General purpose type</li> </ul>
	G2-CA	SYG2-400CA SYG2-350CA SYG2-400CA-A SYG2-160CA SYGA-160CNCA	Various	Various	<ul style="list-style-type: none"> <li>• Used for normal temperature, light load bearing at places in contact with water or steam.</li> </ul>
	Molybdenum disulphide lubricant	SYG2-400M	400 g	Belows type	<ul style="list-style-type: none"> <li>• Used for places with heavy load</li> </ul>

## STANDARD TIGHTENING TORQUE

## STANDARD TIGHTENING TORQUES OF BOLTS AND NUTS

The following table give stand tightening torques of bolts and nuts,except the tightening torques which are give in disassembly and assembly volumes.

1kgm=9.8.6Nm


Thread diameter of bolt	Width across flats					
		Nm			kgm	
6	10	13.2 ± 1.4			1.35 ± 0.15	
8	13	31 ± 3			3.2 ± 0.3	
10	17	66 ± 7			6.7 ± 0.7	
12	19	113 ± 10			11.5 ± 1	
14	22	177 ± 19			18 ± 2	
16	24	279 ± 30			28.5 ± 3	
18	27	382 ± 39			39 ± 4	
20	30	549 ± 59			56 ± 6	
22	32	745 ± 83			76 ± 8.5	
24	36	927 ± 103			94.5 ± 10.5	
27	41	1320 ± 140			135 ± 15	
30	46	1720 ± 190			175 ± 20	
33	50	2210 ± 240			225 ± 25	
36	55	2750 ± 290			280 ± 30	
39	60	3290 ± 340			335 ± 35	

★ This torque table is not suit for the bolts which have nylon cushion or other metal bushing, or bolts which have other specified tightening bolts.

**TIGHTENING TORQUE OF SPLIT FLANGE BOLTS**

Use these torques for split flange bolts.

Thread diameter	Width across flat	Tightening torque	
		Nm	kgm
10	14	65.7 ± 6.8	6.7 ± 0.7
12	17	112 ± 9.8	11.5 ± 1
16	22	279 ± 29	28.5 ± 3

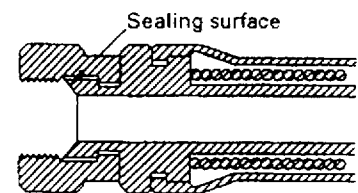

SAD00483

**TIGHTENING TORQUE OF HOSE NUTS**

Use these torques for hose nuts.

Nominal No.	Thread diameter	Width across flat	Tightening torque	
	mm	mm	Nm	kgm
02	14	19	24.5 ± 4.9	2.5 ± 0.5
03	18	24	49 ± 19.6	5 ± 2
04	22	27	78.5 ± 19.6	8 ± 2
05	24	32	137.3 ± 29.4	14 ± 3
06	30	36	176.5 ± 29.4	18 ± 3
10	33	41	196.1 ± 49	20 ± 5
12	36	46	245.2 ± 49	25 ± 5
14	42	55	294.2 ± 49	30 ± 5

## ELECTRIC WIRE CODE

In the wiring diagrams, various colors and symbols are employed to indicate the thickness of wires. This wire code table will help you understand WIRING DIAGRAMS.

Example: 5WB indicates a cable having a nominal number 5 and white coating with black stripe.

### CLASSIFICATION BY THICKNESS

Nominal number	Copper wire			Cable O.D. (mm)	Current rating (A)	Applicable circuit
	Number of strands	Dia. of strands (mm)	Cross section (mm <sup>2</sup> )			
0.85	11	0.32	0.88	2.4	12	Starting, lighting, signal etc.
2	26	0.32	2.09	3.1	20	Lighting, signal etc.
5	65	0.32	5.23	4.6	37	Charging and signal
15	84	0.45	13.36	7.0	59	Starting (Glow plug)
40	85	0.80	42.73	11.4	135	Starting
60	127	0.80	63.84	13.6	178	Starting
100	217	0.80	109.1	17.6	230	Starting

### CLASSIFICATION BY COLOR AND CODE

Priority	Circuits		Charging	Ground	Starting	Lighting	Instrument	Signal	Other
	Classification								
1	Primary	Code	W	B	B	R	Y	G	L
		Color	White	Black	Black	Red	Yellow	Green	Blue
2	Auxiliary	Code	WR	—	BW	RW	YR	GW	LW
		Color	White & Red	—	Black & White	Red & White	Yellow & Red	Green & White	Blue & White
3		Code	WB	—	BY	RB	YB	GR	LR
		Color	White & Black	—	Black & Yellow	Red & Black	Yellow & Black	Green & Red	Blue & Red
4		Code	WL	—	BR	RY	YG	GY	LY
		Color	White & Blue	—	Black & Red	Red & Yellow	Yellow & Green	Green & Yellow	Blue & Yellow
5		Code	WG	—	—	RG	YL	GB	LB
		Color	White & Green	—	—	Red & Green	Yellow & Blue	Green & Black	Blue & Black
6		Code	—	—	—	RL	YW	GL	—
		Color	—	—	—	Red & Blue	Yellow & White	Green & Blue	—

## CONVERSION TABLE

### METHOD OF USING THE CONVERSION TABLE

The Conversion Table in this section is provided to enable simple conversion of figures. For details of the method of using the Conversion Table, see the example given below.

#### EXAMPLE

- Method of using the Conversion Table to convert from millimeters to inches
1. Convert 55 mm into inches.
    - (1) Locate the number 50 in the vertical column at the left side, take this as (A), then draw a horizontal line from (A).
    - (2) Locate the number 5 in the row across the top, take this as (B), then draw a perpendicular line down from (B).
    - (3) Take the point where the two lines cross as (C). This point (C) gives the value when converting from millimeters to inches. Therefore, 55 mm = 2.165 inches.
  2. Convert 550 mm into inches.
    - (1) The number 550 does not appear in the table, so divide by 10 (move the decimal point one place to the left) to convert it to 55 mm.
    - (2) Carry out the same procedure as above to convert 55 mm to 2.165 inches.
    - (3) The original value (550 mm) was divided by 10, so multiply 2.165 inches by 10 (move the decimal point one place to the right) to return to the original value. This gives 550 mm = 21.65 inches.

#### Millimeters to inches

1 mm = 0.03937 in

	0	1	2	3	4	5	6	7	8	9
0	0	0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898


---

# **01 GENERAL**

---

General assembly drawing .....	01-2
Specifications .....	01-3
Weight table .....	01-6
List of lubricant and water .....	01-7

GENERAL ASSEMBLY DRAWING

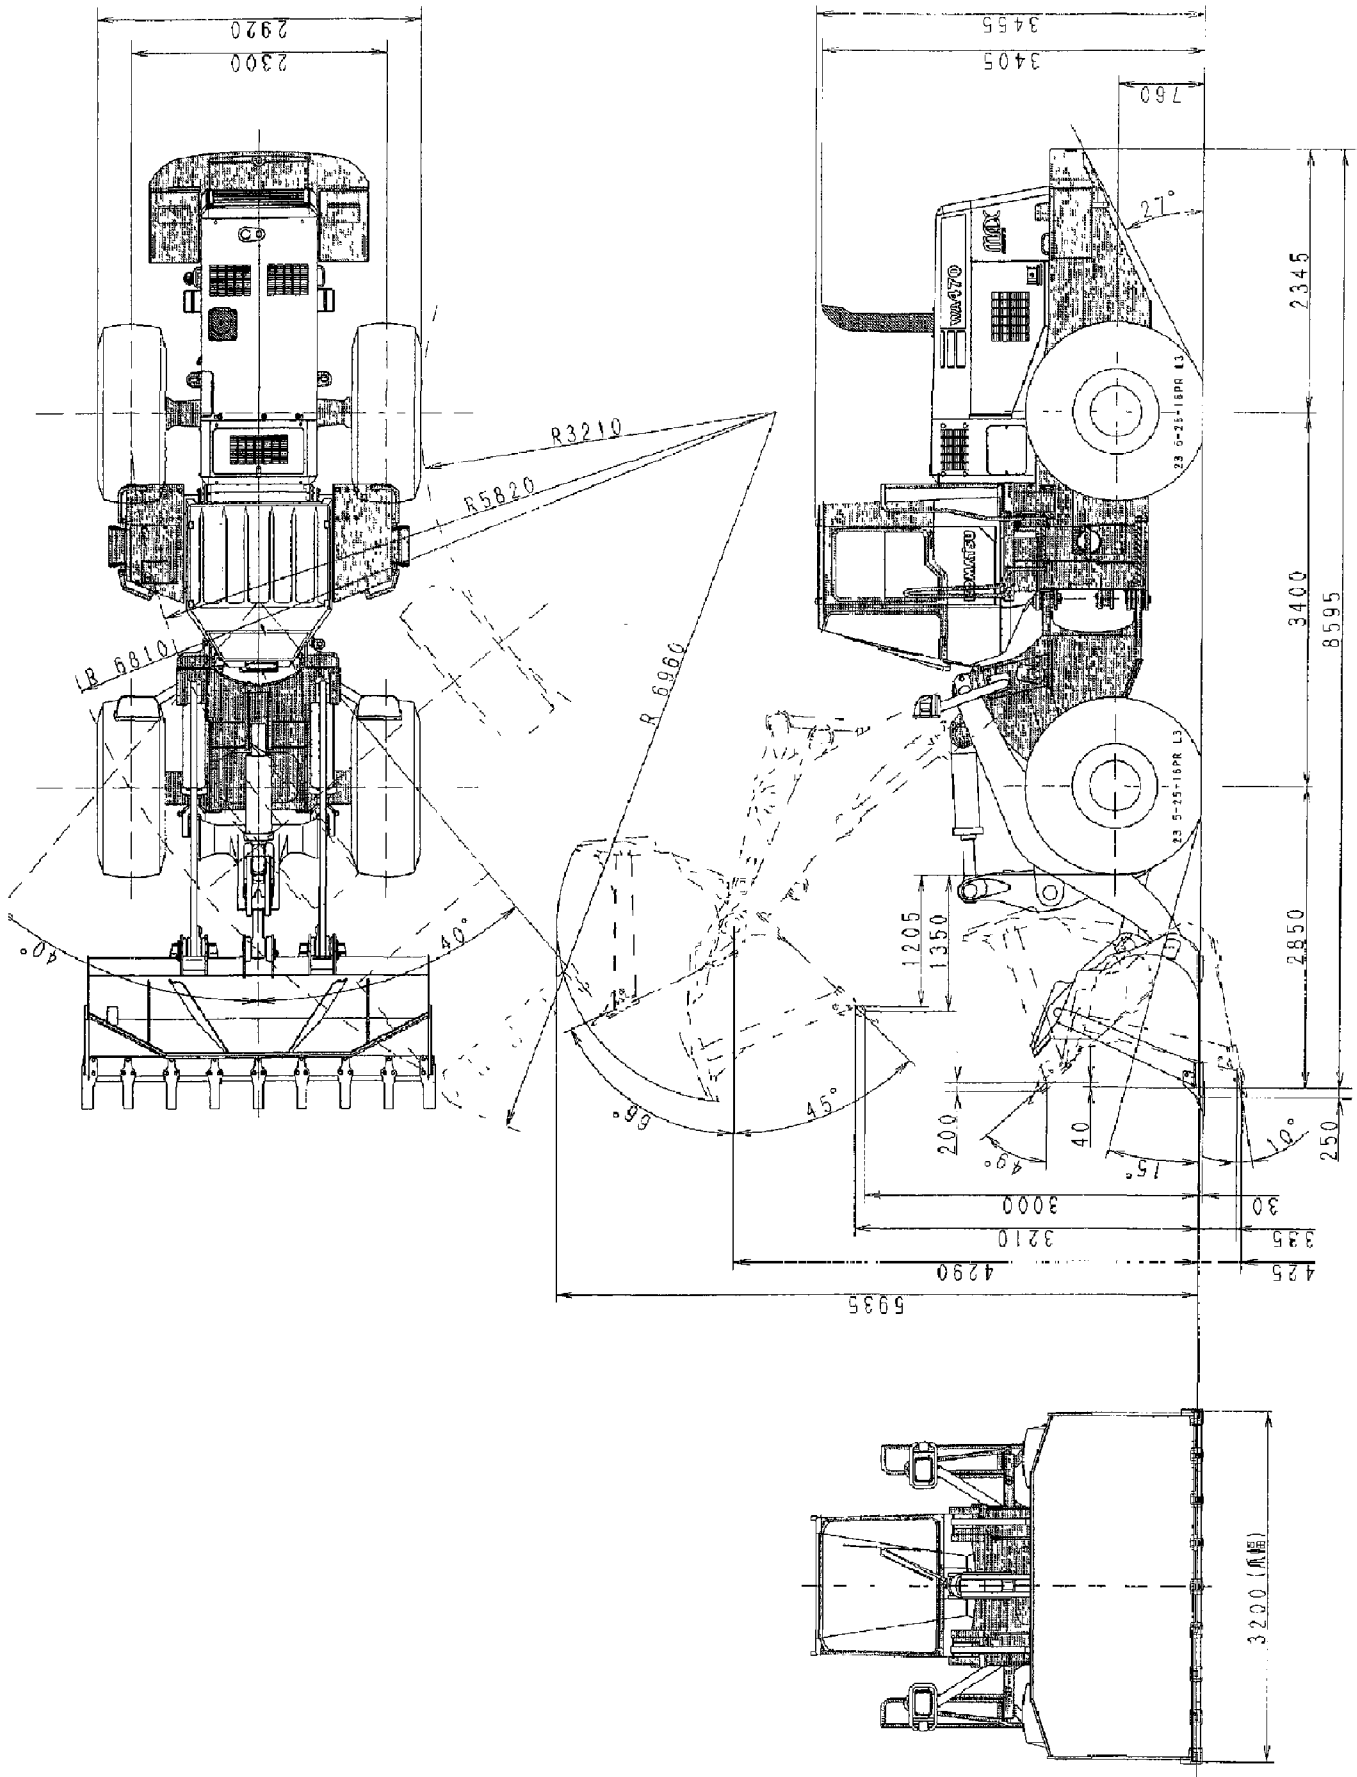

## SPECIFICATIONS

Machine model			WA470-3
Serial No.			25001 and up
Weight	Operating weight	kg	21,690
	Distribution (front)	kg	10800
	Distribution (rear)	kg	10840
Performance	Bucket capacity (piled)	m <sup>3</sup>	3.9
	Rated load	kN (kg)	7,000
	Travel speed		
	FORWARD 1st	km/h	7.0
	FORWARD 2nd	km/h	12.5
	FORWARD 3rd	km/h	22.2
	FORWARD 4th	km/h	35.3
	REVERSE 1st	km/h	7.2
	REVERSE 2nd	km/h	13.2
	REVERSE 3rd	km/h	23.1
	REVERSE 4th	km/h	36.6
Max. rimpull	kN (kg)	190320(19420)	
Gradeability	deg	25.0	
Min. turning radius	Center of outside wheel	mm	5,820
	Outside portion of chassis	mm	6,810
Dimensions	Overall length	mm	8,845
	Overall width (chassis)	mm	3,010
	Bucket width (with BOC)	mm	3,170
	Overall height (top of cab)	mm	3,520
	(Bucket raised)	mm	6,000
	Wheelbase	mm	3,400
	Min. ground clearance	mm	525
	Height of bucket hinge pin	mm	4,355
	Dumping clearance	mm	1,280
	Dumping reach (tip of Tooth)	mm	1,210
	Bucket dump angle	deg	45
	Bucket tilt angle (travel posture)	deg	49
Digging depth (10° dump)	mm	425	



Machine model		WA470-3	
Serial No.		25001 and up	
Engine	Model		Komatsu SA6D125E-2
	Type		4-cycle, water-cooled, in-line, 6-cylinder, direct injection, with turbocharger
	No. of cylinders – bore x stroke	mm	6 – 125 mm x 150 mm
	Piston displacement	ℓ (cc)	11.04 {11,040}
	Flywheel horsepower	kW (HP)/rpm	194(263)/2200
	Maximum torque	Nm (kgm)/rpm	1,050 {107}/1,400
	Fuel consumption ratio	g/kWh (g/HPh)	167
	High idling speed	rpm	2400
	Low idling speed	rpm	700
	Starting motor		24 V 7.5 kW
Alternator		24 V 50 A	
Battery		12 V 150 Ah x 2	
Power train	Torque converter		3-element, 1-stage, single-phase (Komatsu TCAA38-42)
	Transmission		Spur gear, constant-mesh multiple-disc, hydraulically actuated, modulation type
	Reduction gear		Spiral bevel gear, splash lubrication
	Differential		Straight bevel gear, torque proportioning
	Final drive		Planetary gear single stage, splash lubrication
Axle, wheel	Drive type		Front-, rear-wheel drive
	Front wheel		Fixed frame, full-floating type
	Rear wheel		Center pin support full-floating type
	Tire		26.5-25-20PR(L-3)
	Wheel rim		22.00x25 WT
	Inflation pressure	Front tire Rear tire	kPa (kg/cm <sup>2</sup> ) kPa (kg/cm <sup>2</sup> )
Brakes	Service brake		Front-, rear-wheel independent system control, sealed multiple-disc wet-type disc brake With hydraulic booster
	Parking brake		Drive shaft, wet type multiple-disc brake Hydraulically released spring type

Machine model		WA470-3	
Serial No.		25001 and up	
Steering system	Type	Articulated steering	
	Structure	Fully hydraulic power steering	
Hydraulic system	Hydraulic pump type		Gear pump
	Delivery	Hydraulic pump	302
		Switch pump	122
		Steering pump	168
		PPC pump	62
Control valve	Set pressure for work equipment	MPa (kg/cm <sup>2</sup> )	2-spool type 20.58 (210)
	Set pressure for steering	MPa (kg/cm <sup>2</sup> )	Spool type 20.58 (210)
Cylinder	Boom cylinder No. - bore x stroke	mm	Reciprocating piston 2 - 180 x 764
	Bucket cylinder No. - bore x stroke	mm	Reciprocating piston 1 - 200 x 550
	Steering cylinder No. - bore x stroke	mm	Reciprocating piston 2 - 100 x 440
Work equipment	Link type	Single link	
	Bucket edge type	Tooth	

**WEIGHT TABLE**

**!** This weight table is a guide for use when transporting or handling components.

Unit: kg

Machine model	WA470-3	
Serial No.	25001 and up	
Engine	1145	
Radiator	220	
Transmission (including torque converter)	1,000	
Center drive shaft	36	
Front drive shaft	40	
Rear drive shaft	19	
Front axle	1,455	
Rear axle	1,466	
Front differential	235	
Rear differential	244	
Planetary carrier (each)	525	
Axle pivot (rear axle)	148	
Wheel (each)	429	
Tire (each)	240	
Steering valve	24	
Steering cylinder (each)	38	
Brake valve (R.H.)	8.5	
Hydraulic tank	231	
Hydraulic, PPC pump (tandem pump)	27	
Steering, switch pump (tandem pump)	20	
PPC valve	3	
Main control valve	90	
Lift cylinder (each)	192	
Bucket cylinder	222	
Engine hood	204	
Front frame	1,834	
Rear frame	1,510	
Bucket link	89	
Bellcrank	415	
Lift arm (including bushing)	1,440	
Bucket (with BOC)	1,928	

Unit: kg

Machine model	WA470-3	
Serial No.	25001 and up	
Counterweight	1,600	
Fuel tank	236	
Battery (each)	49	
Cab	310	
Air conditioner unit	30	

**GENERAL**

**LIST OF LUBRICANT AND WATER**

**LIST OF LUBRICANT AND WATER**

RESERVOIR	KIND OF FLUID	AMBIENT TEMPERATURE									CAPACITY	
		-22	-4	14	32	50	68	86	104	122°F	Specified	Refill
		-30	-20	-10	-0	10	20	30	40	50°C		
Engine oil pan	Engine oil	API CF-4 及以上									47L	38L
		SAE 30										
		SAE 10W-30										
	SAE 15W-40											
Transmission		SAE 10W									65L	60L
Hydraulic system		SAE 10W 30									280L	192L
		SAE 10W-30										
		SAE 15W-40										
		H046-HM(※)										
Axle (with standard differential) (Front or rear)		AX080 or SAE30 API CD gread									65L	65L
Pins	Grease	NLGI No.2									—	—
Pins (with utogreasing system)		★ NLGI No.2									—	—
Fule tank	Diesel fule	ASTM D975 No.2									391L	391L
		*										
Cooling system	Water/Antifreeze (AF-NAC)	Add antifreeze by prorate									68L	68L

※ For H046-HM, Please use the oil KOMATSU commended.

\* ASTM D975 No.1

★ For normally use, Please consult KOMATSU or KOMATSU distributor.

In order to ensure the quality of lubricants, Please by KOMATSU Genuine lubricants from KOMATSU or KOMATSU distributor.

## REMARK

- When fuel sulphur content is less than 0.5%, change oil in the oil pan every periodic maintenance hours described in this manual.  
Change oil according to the following table if fuel sulphur content is above 0.5%.

Fuel sulphur content	Change interval of oil in engine oil pan
0.5 to 1.0%	1/2 of regular interval
Above 1.0%	1/4 of regular interval

- When starting the engine in an atmospheric temperature of lower than 0°C, be sure to use engine oil of SAE10W, SAE10W-30 and SAE15W-40, even though an atmospheric temperature goes up to 10°C more or less in the day time.
- Use API classification CF4 as engine oil.
- There is no problem if single grade oil is mixed with multigrade oil (SAE10W-30, 15W-40), but be sure to add single grade oil that matches the temperature in the table.
- We recommend Komatsu genuine oil which has been specifically formulated and approved for use in engine and hydraulic work equipment applications.

Specified capacity: Total amount of oil including oil for components and oil in piping.

Refill capacity: Amount of oil needed to refill system during normal inspection and maintenance.

ASTM: American Society of Testing and Material

SAE: Society of Automotive Engineers

API: American Petroleum Institute

---

# 10 STRUCTURE AND FUNCTION

---

Power train .....	10- 3		
Power train system .....	10- 4		
Torque converter, transmission piping ..	10- 6		
Transmission hydraulic system diagram .....	10- 8		
Transmission hydraulic circuit diagram .....	10- 9		
Torque converter .....	10- 10		
Torque converter oil filter .....	10- 13		
Transmission .....	10- 14		
Transmission control valve .....	10- 25		
Transmission solenoid valve .....	10- 47		
Pilot oil filter .....	10- 48		
Drive shaft .....	10- 49		
Axle .....	10- 50		
Differential .....	10- 52		
Final drive .....	10- 56		
Axle mount, center hinge pin .....	10- 57		
Steering piping .....	10- 58		
Steering column .....	10- 59		
Steering valve .....	10- 60		
Orbit-roll valve .....	10- 74		
Stop valve .....	10- 78		
Brake piping .....	10- 79		
Brake circuit diagram .....	10- 81		
Brake valve .....	10- 82		
Charge valve .....	10- 86		
Accumulator (for brake) .....	10- 90		
Slack adjuster .....	10- 91		
Brake .....	10- 94		
Parking brake control .....	10- 96		
Parking brake .....	10- 97		
Parking brake solenoid valve .....	10- 98		
Parking brake valve .....	10- 99		
		Hydraulic piping .....	10-100
		Work equipment hydraulic system diagram .....	10-101
		Work equipment hydraulic circuit diagram .....	10-103
		Work equipment lever linkage .....	10-105
		Hydraulic tank .....	10-106
		PPC valve .....	10-108
		PPC relief valve .....	10-113
		Accumulator (for PPC valve) .....	10-114
		Main control valve .....	10-115
		Work equipment linkage .....	10-127
		Bucket .....	10-129
		Bucket positioner and boom kick-out .....	10-130
		Cab .....	10-136
		Air conditioner .....	10-137
		Sensors .....	10-138
		Engine starting circuit .....	10-142
		Engine stop circuit .....	10-143
		Perheating circuit .....	10-144
		Electric transmission control .....	10-145
		Kick-clown switch .....	10-148
		Transmission cut-off fuction .....	10-153



**Download the full PDF manual instantly.**

**Our customer service e-mail:**

**[aservicemanualpdf@yahoo.com](mailto:aservicemanualpdf@yahoo.com)**