

Product: BACKHOE LOADER

Model: 442D BACKHOE LOADER BRG

Configuration: 442D Backhoe Loader BRG00828-01122 (MACHINE) POWERED BY 3054 Engine

Disassembly and Assembly

416D, 420D, 424D, 428D, 430D, 432D, 438D and 442D Backhoe Loaders Power Train

Media Number -REN3578-12

Publication Date -01/04/2010

Date Updated -13/04/2010

i01380368

Transmission (Direct Drive) - Disassemble

SMCS - 3030-015-DD; 3066-015

Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1U-5750	Engine Stand	1
B	6V-2157	Link Bracket	1
C	9S-9152	Puller Assembly	1
C	5F-7465	Puller	1
C		3/8inch x 6inch Bolt	2
D	4C-3652	Spring Compressor	1
E	1U-6405	Puller	1
F	4C-3802	Puller	1
G	8H-0663	Puller	1
G	5F-7465	Puller	1
H	8B-7551	Puller	1
H	6V-3010	Puller	1
I	137-8102	Spring Compressor	1
J	4C-3089	Puller	1

Start By:

- A. Remove the transmission. Refer to Disassembly and Assembly, "Transmission (Direct Drive) - Remove".

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Caterpillar Tools and Shop Products Guide" for tools and supplies suitable to collect and contain fluids on Caterpillar products.

Dispose of all fluids according to local regulations and mandates.

Note: Cleanliness is an important factor. Before the disassembly procedure, the exterior of the component should be thoroughly cleaned. This will help to prevent dirt from entering the internal mechanism.

Note: The transmission will be disassembled in major components. The major components will then be disassembled.

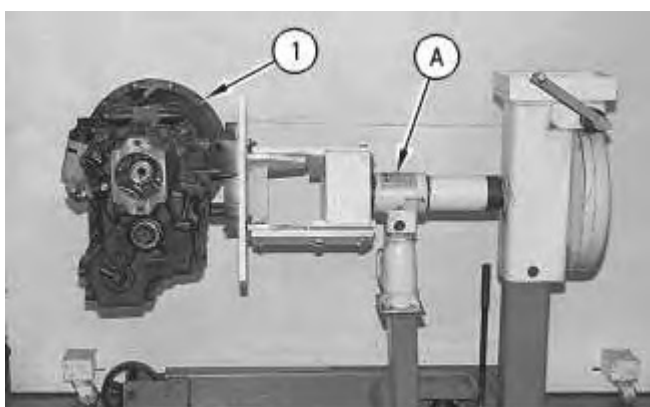


Illustration 1

g00728888

1. Install transmission (1) on tooling (A) .
-

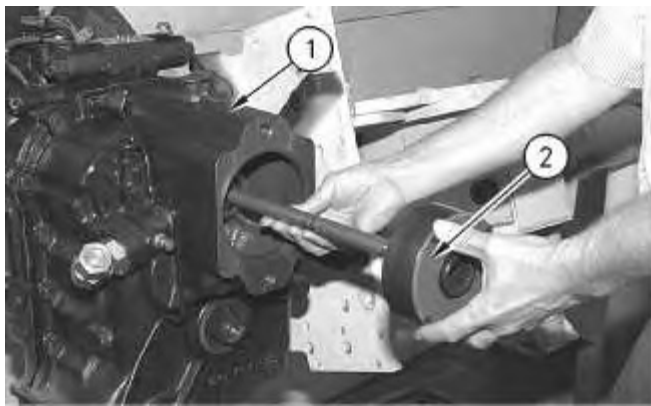


Illustration 2

g00728895

2. Remove Implement pump drive shaft (2) from transmission (1) .

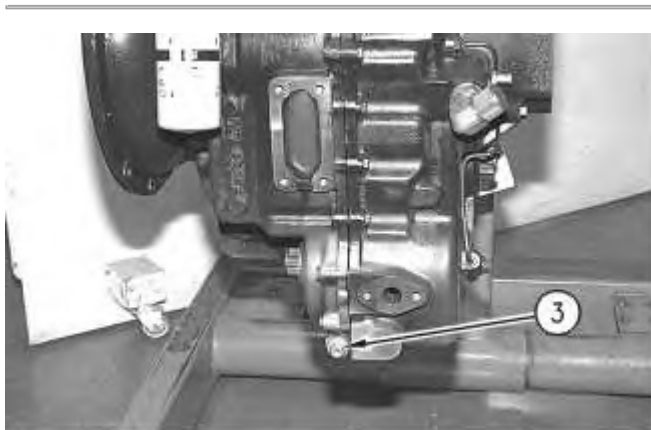


Illustration 3

g00728902

3. Remove plug (3). Drain the transmission oil into a suitable container. The capacity of the transmission is 11.3 L (3 US gal).

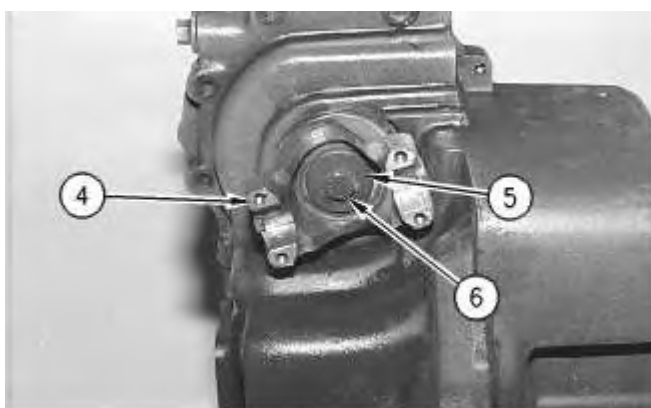


Illustration 4

g00728906

4. Remove bolt (6), washer (5), and yoke (4) .

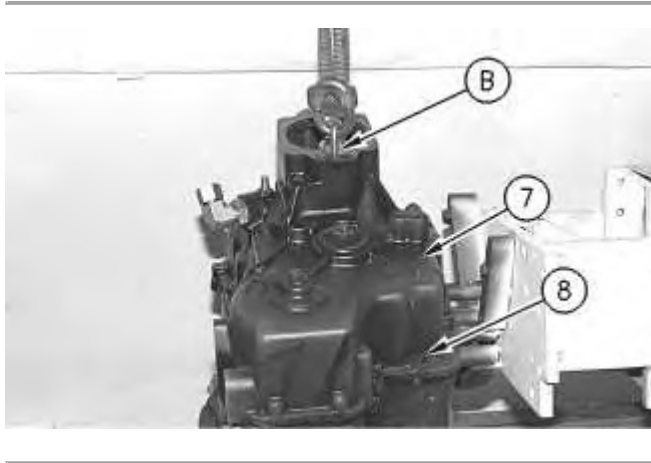


Illustration 5

g00728913

5. Attach tooling (B) to case (7). Attach a suitable lifting device to tooling (B). Remove fourteen bolts (8). Remove case (7) from the transmission. The weight of case (7) is 42 kg (94 lb).

(Direct Drive) Output Shaft (Front)

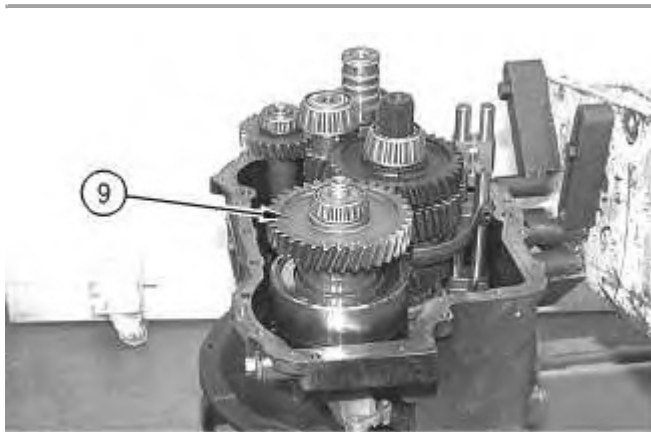


Illustration 6

g00728940

1. Remove front output shaft (9) .
-

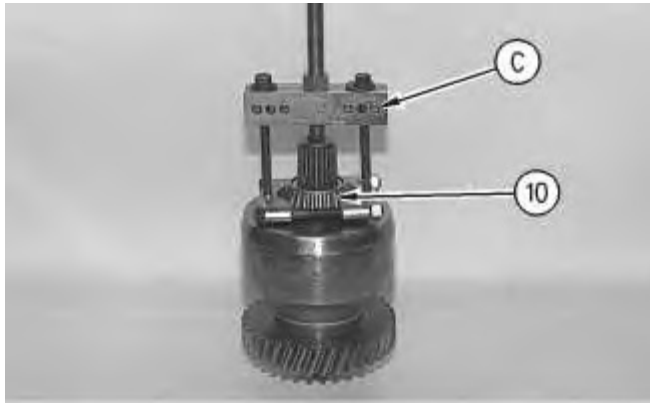


Illustration 7

g00728943

2. Use tooling (C) in order to remove bearing cone (10) .

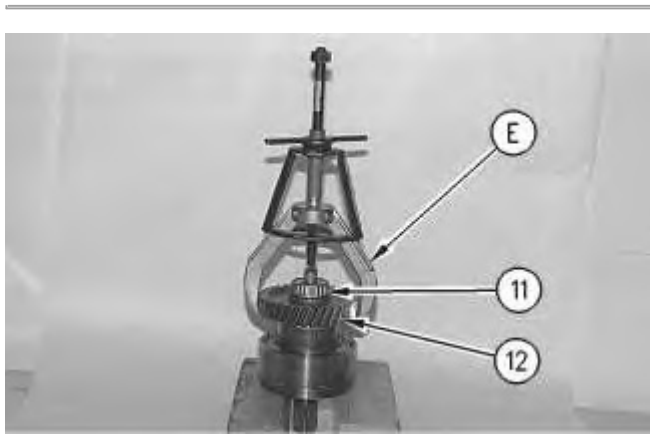


Illustration 8

g00728944

3. Use tooling (E) in order to remove bearing cone (11) and gear (12) .

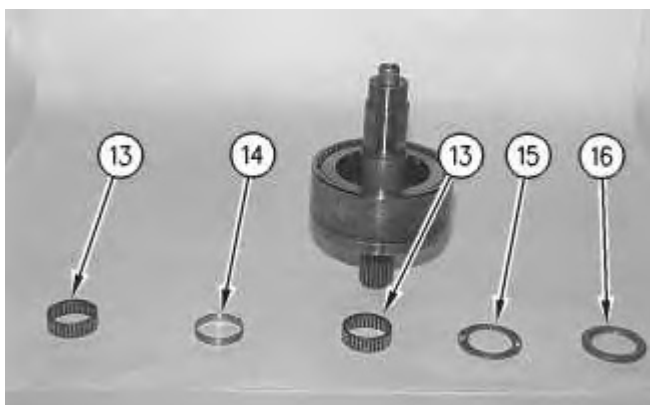


Illustration 9

g00728945

4. Remove two roller bearings (13), spacer (14), needle bearing (15), and thrust washer (16) .

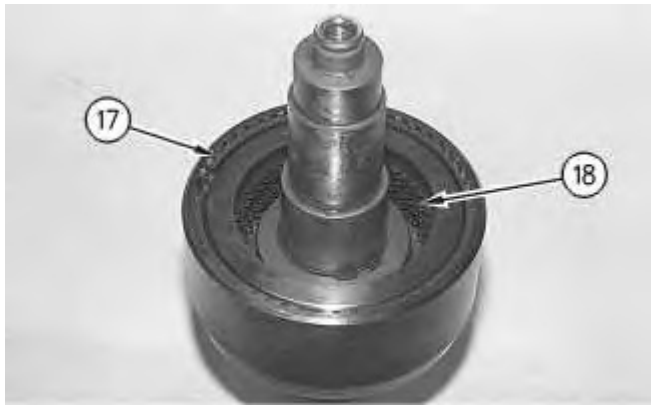


Illustration 10

g00728948

5. Remove retainer (17) and clutch pack (18) .


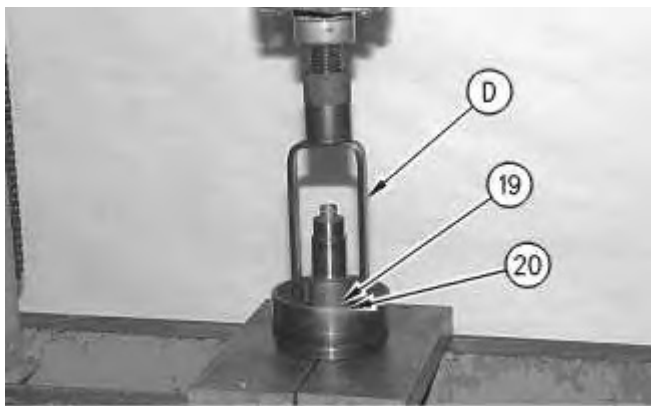


Illustration 11

g00728950

6. Use a suitable press and tooling (D) in order to compress spring (19). Use tooling (K) in order to remove snap ring (20) .

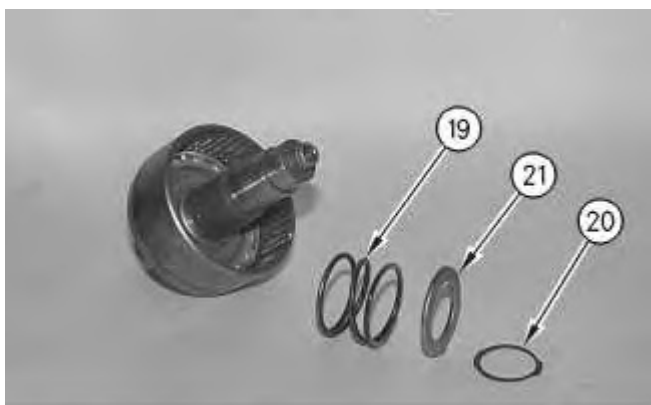

7. Remove snap ring (20), retainer (21), and spring (19) .



Illustration 13

8. Release piston (22) by blowing shop air into the lube passage, as shown.



Illustration 14

9. Use a seal pick in order to remove the seals from piston (22) .

(Direct Drive) Output Shaft (Rear)

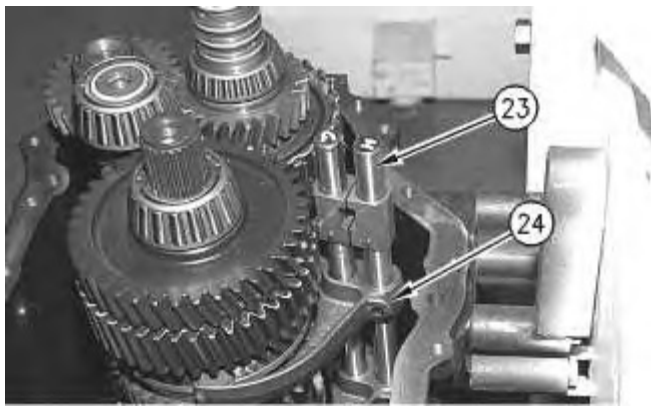


Illustration 15

g00729062

1. Remove screws (24) from each of the gearshift rods (23) .



Illustration 16

g00729064

2. Remove plug (25) .

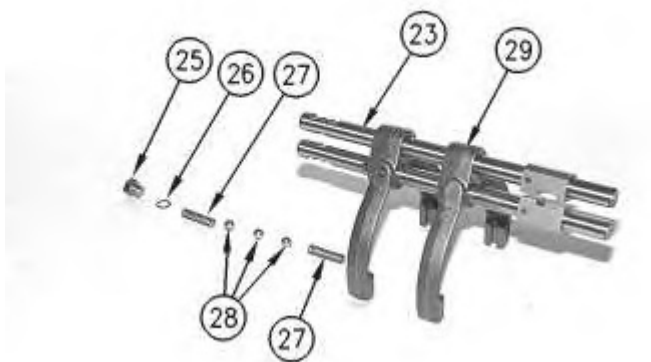


Illustration 17

g00729196



Download the full PDF manual instantly.

Our customer service e-mail:

aservicemanualpdf@yahoo.com