

# SHOP MANUAL

# KOMATSU WA450-3<sub>LL</sub> LOG LOADER

MACHINE MODEL

**WA450-3<sub>LL</sub>**

SERIAL NUMBER

**50305 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- WA450-3LL mount the S6D125 engine.  
For details of the engine, see the 125 Series Engine Shop Manual.

# CONTENTS

	No. of page
<b>01 GENERAL .....</b>	<b>01-1</b>
<b>10 STRUCTURE AND FUNCTION .....</b>	<b>10-1</b>
<b>20 TESTING AND ADJUSTING .....</b>	<b>20-1</b>
<b>30 DISASSEMBLY AND ASSEMBLY .....</b>	<b>30-1</b>
<b>40 MAINTENANCE STANDARD .....</b>	<b>40-1</b>
<b>90 OTHERS .....</b>	<b>90-1</b>


U42103

# SAFETY

## SAFETY NOTICE

### IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

### GENERAL PRECAUTIONS

Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully BEFORE operating the machine.

1. Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
2. When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
  - Always wear safety glasses when hitting parts with a hammer.
  - Always wear safety glasses when grinding parts with a grinder, etc.
3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, hand shield, cap and other clothes suited for welding work.
4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
5. Keep all tools in good condition and learn the correct way to use them.

6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.

### PREPARATIONS FOR WORK

7. Before adding oil or making any repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
8. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
9. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.
10. Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

**PRECAUTIONS DURING WORK**

11. When removing the oil filler cap, drain plug or hydraulic pressure measuring plugs, loosen them slowly to prevent the oil from spurting out. Before disconnecting or removing components of the oil, water or air circuits, first remove the pressure completely from the circuit.
12. The water and oil in the circuits are hot when the engine is stopped, so be careful not to get burned.  
Wait for the oil and water to cool before carrying out any work on the oil or water circuits.
13. Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
14. When raising heavy components, use a hoist or crane.  
Check that the wire rope, chains and hooks are free from damage.  
Always use lifting equipment which has ample capacity.  
Install the lifting equipment at the correct places.  
Use a hoist or crane and operate slowly to prevent the component from hitting any other part.  
Do not work with any part still raised by the hoist or crane.
15. When removing covers which are under internal pressure or under pressure from a spring, always leave two bolts in position on opposite sides. Slowly release the pressure, then slowly loosen the bolts to remove.
16. When removing components, be careful not to break or damage the wiring. Damaged wiring may cause electrical fires.
17. When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip, or can even start fires.
18. As a general rule, do not use gasoline to wash parts. In particular, use only the minimum of gasoline when washing electrical parts.
19. Be sure to assemble all parts again in their original places.  
Replace any damaged parts with new parts.
  - When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is being operated.
20. When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. Also, check that connecting parts are correctly installed.
21. When assembling or installing parts, always use the specified tightening torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
22. When aligning two holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
23. When measuring hydraulic pressure, check that the measuring tool is correctly assembled before taking any measurements.
24. Take care when removing or installing the tracks of track-type machines.  
When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.

# FOREWORD

## GENERAL

This shop manual has been prepared as an aid to improve the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgments. Make sure you understand the contents of this manual and use it to full effect at every opportunity.

This shop manual mainly contains the necessary technical information for operations performed in a service workshop. For ease of understanding, the manual is divided into the following chapters; these chapters are further divided into the each main group of components.

### STRUCTURE AND FUNCTION

This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

In addition, this section may contain hydraulic circuit diagrams, electric circuit diagrams, and maintenance standards.

### TESTING AND ADJUSTING

This section explains checks to be made before and after performing repairs, as well as adjustments to be made at completion of the checks and repairs.

Troubleshooting charts correlating "Problems" with "Causes" are also included in this section.

### DISASSEMBLY AND ASSEMBLY

This section explains the procedures for removing, installing, disassembling and assembling each component, as well as precautions for them.

### MAINTENANCE STANDARD

This section gives the judgment standards for inspection of disassembled parts.

The contents of this section may be described in STRUCTURE AND FUNCTION.

### OTHERS

This section mainly gives hydraulic circuit diagrams and electric circuit diagrams.

In addition, this section may give the specifications of attachments and options together.

### NOTICE

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Use the specifications given in the book with the latest date.

**HOW TO READ THE SHOP MANUAL**

**VOLUMES**

Shop manuals are issued as a guide to carrying out repairs. They are divided as follows:

- Chassis volume:** Issued for every machine model
- Engine volume:** Issued for each engine series
- Electrical volume:** } Each issued as one
- Attachments volume:** } volume to cover all models


These various volumes are designed to avoid duplicating the same information. Therefore, to deal with all repairs for any model, it is necessary that chassis, engine, electrical and attachment volumes be available.

**DISTRIBUTION AND UPDATING**


Any additions, amendments or other changes will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.

**FILING METHOD**


1. See the page number on the bottom of the page. File the pages in correct order.
2. Following examples show how to read the page number.  
Example 1 (Chassis volume):

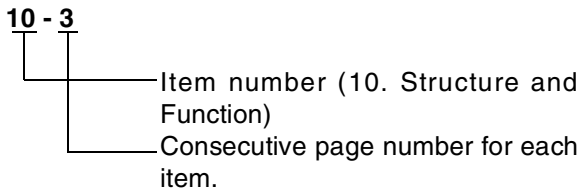

Example 2 (Engine volume):

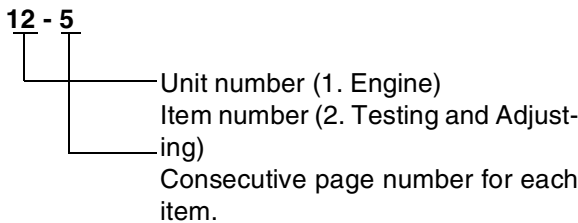

3. Additional pages: Additional pages are indicated by a hyphen (-) and number after the page number. File as in the example.

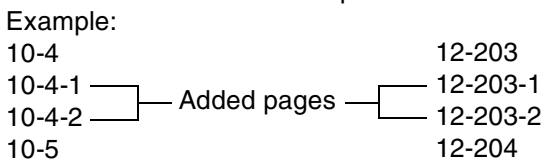

**REVISED EDITION MARK**

When a manual is revised, an edition mark (①②③....) is recorded on the bottom of the pages.

**REVISIONS**

Revised pages are shown in the LIST OF REVISED PAGES next to the CONTENTS page.


**SYMBOLS**

So that the shop manual can be of ample practical use, important safety and quality portions are marked with the following symbols.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing the work.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing the work.
	Weight	Weight of parts of systems. Caution necessary when selecting hoisting wire, or when working posture is important, etc.
	Tightening torque	Places that require special attention for the tightening torque during assembly.
	Coat	Places to be coated with adhesives and lubricants, etc.
	Oil, water	Places where oil, water or fuel must be added, and the capacity.
	Drain	Places where oil or water must be drained, and quantity to be drained.

HOISTING INSTRUCTIONS

HOISTING

**!** Heavy parts (25 kg or more) must be lifted with a hoist, etc. In the **DISASSEMBLY AND ASSEMBLY** section, every part weighing 25 kg or more is indicated clearly with the symbol 

- If a part cannot be smoothly removed from the machine by hoisting, the following checks should be made:
  - 1) Check for removal of all bolts fastening the part to the relative parts.
  - 2) Check for existence of another part causing interference with the part to be removed.

WIRE ROPES


- 1) Use adequate ropes depending on the weight of parts to be hoisted, referring to the table below:

Wire ropes  
(Standard "Z" or "S" twist ropes  
without galvanizing)

Rope diameter	Allowable load	
	kN	tons
mm		
10	9.8	1.0
11.5	13.7	1.4
12.5	15.7	1.6
14	21.6	2.2
16	27.5	2.8
18	35.3	3.6
20	43.1	4.4
22.4	54.9	5.6
30	98.1	10.0
40	176.5	18.0
50	274.6	28.0
60	392.2	40.0

- ★ The allowable load value is estimated to be one-sixth or one-seventh of the breaking strength of the rope used.
- 2) Sling wire ropes from the middle portion of the hook.

Slinging near the edge of the hook may cause the rope to slip off the hook during hoisting, and a serious accident can result. Hooks have maximum strength at the middle portion.

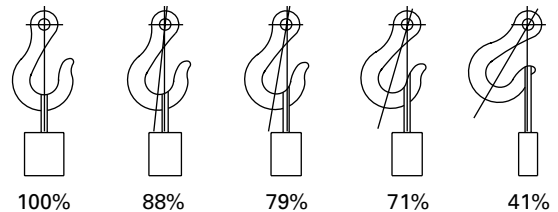


SAD00479

- 3) Do not sling a heavy load with one rope alone, but sling with two or more ropes symmetrically wound onto the load.

**!** Slinging with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 4) Do not sling a heavy load with ropes forming a wide hanging angle from the hook.

When hoisting a load with two or more ropes, the force subjected to each rope will increase with the hanging angles. The table below shows the variation of allowable load kN {kg} when hoisting is made with two ropes, each of which is allowed to sling up to 9.8 kN {1000 kg} vertically, at various hanging angles. When two ropes sling a load vertically, up to 19.6 kN {2000 kg} of total weight can be suspended. This weight becomes 9.8 kN {1000 kg} when two ropes make a 120° hanging angle. On the other hand, two ropes are subjected to an excessive force as large as 39.2 kN {4000 kg} if they sling a 19.6 kN {2000 kg} load at a lifting angle of 150°.

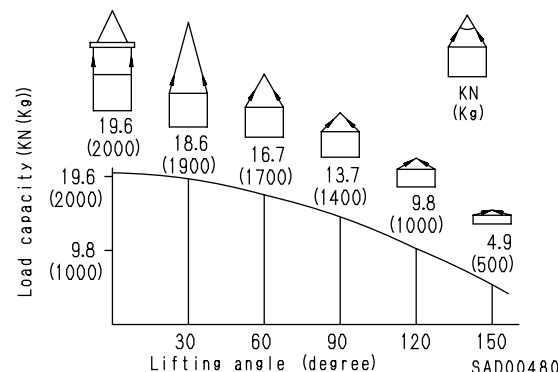

SAD00480

## METHOD OF DISASSEMBLING, CONNECTING PUSH-PULL TYPE COUPLER

**!** Before carrying out the following work, release the residual pressure from the hydraulic tank. For details, see TESTING AND ADJUSTING, Releasing residual pressure from hydraulic tank.

**!** Even if the residual pressure is released from the hydraulic tank, some hydraulic oil flows out when the hose is disconnected. Accordingly, prepare an oil receiving container.


**Disconnection**

- 1) Release the residual pressure from the hydraulic tank. For details, see TESTING AND ADJUSTING, Releasing residual pressure from hydraulic tank.
- 2) Hold adapter (1) and push hose joint (2) into mating adapter (3). (See Fig. 1)
  - ★ The adapter can be pushed in about 3.5 mm.
  - ★ Do not hold rubber cap portion (4).
- 3) After hose joint (2) is pushed into adapter (3), press rubber cap portion (4) against (3) until it clicks. (See Fig. 2)
- 4) Hold hose adapter (1) or hose (5) and pull it out. (See Fig. 3)
  - ★ Since some hydraulic oil flows out, prepare an oil receiving container.









**Connection**

- 1) Hold hose adapter (1) or hose (5) and insert it in mating adapter (3), aligning them with each other. (See Fig. 4)
  - ★ Do not hold rubber cap portion (4).
- 2) After inserting the hose in the mating adapter perfectly, pull it back to check its connecting condition. (See Fig. 5)
  - ★ When the hose is pulled back, the rubber cap portion moves toward the hose about 3.5 mm. This does not indicate abnormality, however.

Type 1

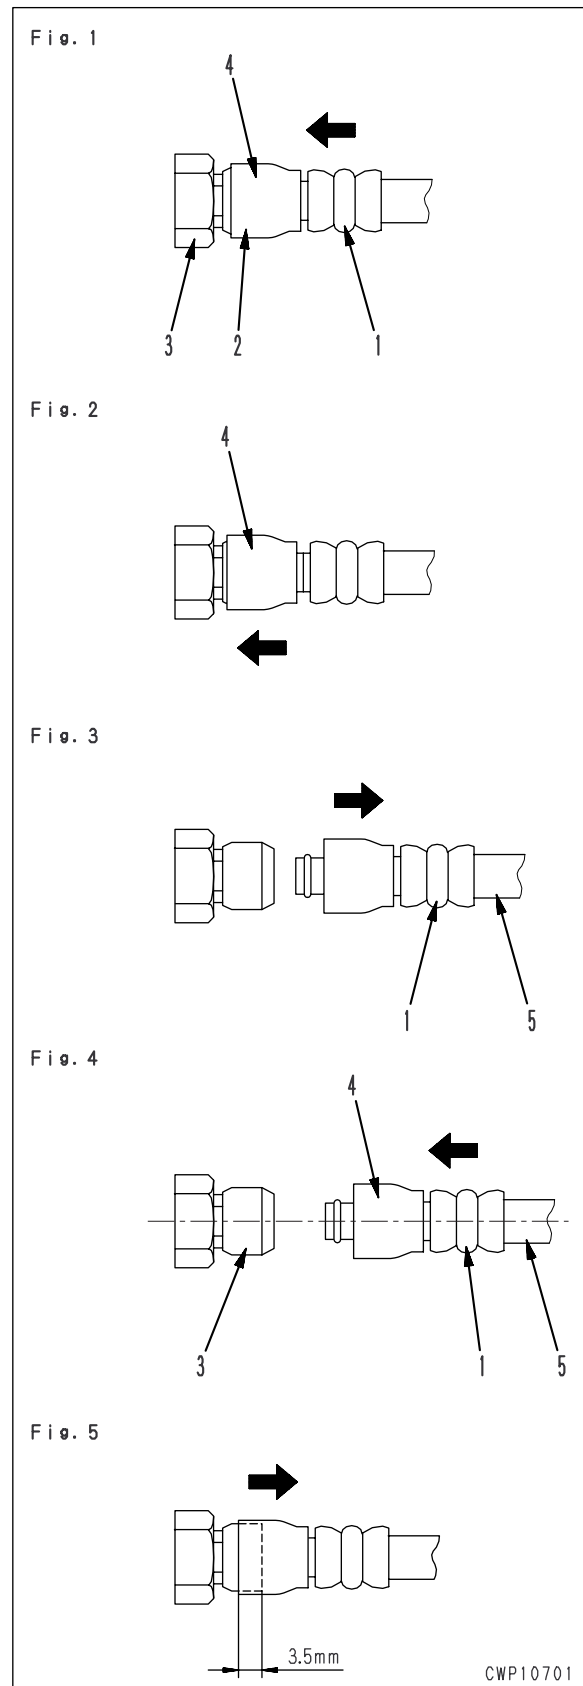

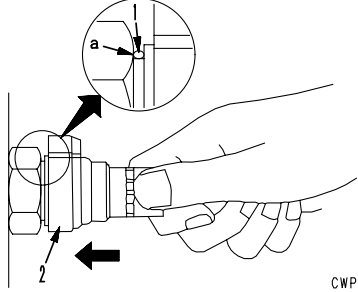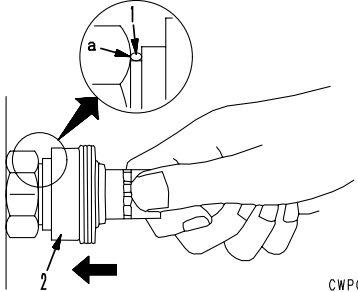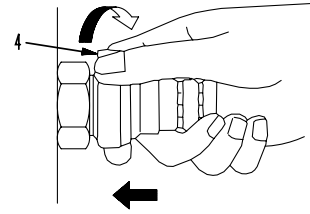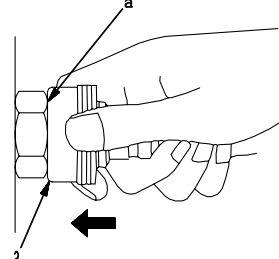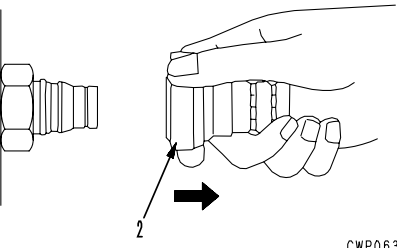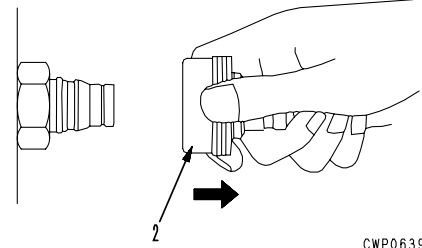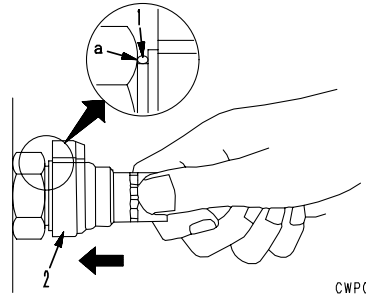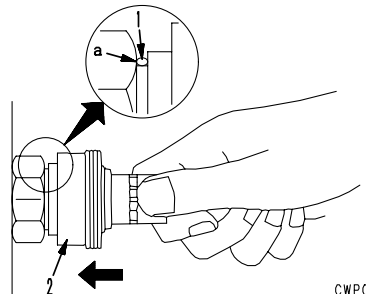

	Type 2	Type 3
Disassembly	<p>1) Hold the mouthpiece of the tightening portion and push body (2) in straight until sliding prevention ring (1) contacts contact surface a of the hexagonal portion at the male end.</p>  <p style="text-align: right;">CWP06392</p>	<p>1) Hold the mouthpiece of the tightening portion and push body (2) in straight until sliding prevention ring (1) contacts contact surface a of the hexagonal portion at the male end.</p>  <p style="text-align: right;">CWP06391</p>
	<p>2) Hold in the condition in Step 1), and turn lever (4) to the right (clockwise).</p>  <p style="text-align: right;">CWP06394</p>	<p>2) Hold in the condition in Step 1), and push until cover (3) contacts contact surface a of the hexagonal portion at the male end.</p>  <p style="text-align: right;">CWP06393</p>
	<p>3) Hold in the condition in Steps 1) and 2), and pull out whole body (2) to disconnect it.</p>  <p style="text-align: right;">CWP06396</p>	<p>3) Hold in the condition in Steps 1) and 2), and pull out whole body (2) to disconnect it.</p>  <p style="text-align: right;">CWP06395</p>
Connection	<ul style="list-style-type: none"> <li>Hold the mouthpiece of the tightening portion and push body (2) in straight until sliding prevention ring (1) contacts contact surface a of the hexagonal portion at the male end to connect it.</li> </ul>  <p style="text-align: right;">CWP06392</p>	<ul style="list-style-type: none"> <li>Hold the mouthpiece of the tightening portion and push body (2) in straight until sliding prevention ring (1) contacts contact surface a of the hexagonal portion at the male end to connect it.</li> </ul>  <p style="text-align: right;">CWP06391</p>

## COATING MATERIALS

- ★ The recommended coating materials such as adhesives, gasket sealants and greases used for disassembly and assembly are listed below.
- ★ For coating materials not listed below, use the equivalent of products shown in this list.






Category	Komatsu code	Part No.	Q'ty	Container	Main applications, features
Adhesives	LT-1A	790-129-9030	150 g	Tube	<ul style="list-style-type: none"> <li>• Used to prevent rubber gaskets, rubber cushions, and cock plug from coming out.</li> </ul>
	LT-1B	790-129-9050	20 g (2 pcs.)	Polyethylene container	<ul style="list-style-type: none"> <li>• Used in places requiring an immediately effective, strong adhesive. Used for plastics (except polyethylene, polypropylene, tetrafluoroethylene and vinyl chloride), rubber, metal and non-metal.</li> </ul>
	LT-2	09940-00030	50 g	Polyethylene container	<ul style="list-style-type: none"> <li>• Features: Resistance to heat and chemicals</li> <li>• Used for anti-loosening and sealant purpose for bolts and plugs.</li> </ul>
	LT-3	790-129-9060 (Set of adhesive and hardening agent)	Adhesive: 1 kg Hardening agent: 500 g	Can	<ul style="list-style-type: none"> <li>• Used as adhesive or sealant for metal, glass and plastic.</li> </ul>
	LT-4	790-129-9040	250 g	Polyethylene container	<ul style="list-style-type: none"> <li>• Used as sealant for machined holes.</li> </ul>
	Holtz MH 705	790-126-9120	75 g	Tube	<ul style="list-style-type: none"> <li>• Used as heat-resisting sealant for repairing engine.</li> </ul>
	Three bond 1735	790-129-9140	50 g	Polyethylene container	<ul style="list-style-type: none"> <li>• Quick hardening type adhesive</li> <li>• Cure time: within 5 sec. to 3 min.</li> <li>• Used mainly for adhesion of metals, rubbers, plastics and woods.</li> </ul>
	Aron-alpha 201	790-129-9130	2 g	Polyethylene container	<ul style="list-style-type: none"> <li>• Quick hardening type adhesive</li> <li>• Quick cure type (max. strength after 30 minutes)</li> <li>• Used mainly for adhesion of rubbers, plastics and metals.</li> </ul>
	Loctite 648-50	79A-129-9110	50 cc	Polyethylene container	<ul style="list-style-type: none"> <li>• Resistance to heat, chemicals</li> <li>• Used at joint portions subject to high temperatures.</li> </ul>
Gasket sealant	LG-1	790-129-9010	200 g	Tube	<ul style="list-style-type: none"> <li>• Used as adhesive or sealant for gaskets and packing of power train case, etc.</li> </ul>
	LG-5	790-129-9070	1 kg	Can	<ul style="list-style-type: none"> <li>• Used as sealant for various threads, pipe joints, flanges.</li> <li>• Used as sealant for tapered plugs, elbows, nipples of hydraulic piping.</li> </ul>
	LG-6	790-129-9020	200 g	Tube	<ul style="list-style-type: none"> <li>• Features: Silicon based, resistance to heat, cold</li> <li>• Used as sealant for flange surface, tread.</li> <li>• Used as sealant for oil pan, final drive case, etc.</li> </ul>

Category	Komatsu code	Part No.	Q'ty	Container	Main applications, featuresr
Adhesives	LG-7	790-129-9070	1 g	Tube	<ul style="list-style-type: none"> <li>• Ftures: Silicon based, quick hardening type</li> <li>• Used as sealant for flywheel housing, intake manifold, oil an, thermostat housing, etc.</li> </ul>
	Three bond 1211	790-129-9090	100 g	Tube	<ul style="list-style-type: none"> <li>• Used as heat-resisting sealant for repairing engine.</li> </ul>
Molybdenum disulphide lubricant	LM-G	09940-00051	60 g	Can	<ul style="list-style-type: none"> <li>• Used as lubricant for sliding portion (to prevent from squeaking).</li> </ul>
	LM-P	09940-00040	200 g	Tube	<ul style="list-style-type: none"> <li>• Used to prevent seizure or scuffing of the thread when press fitting or shrink fitting.</li> <li>• Used as lubricant for linkage, bearings, etc.</li> </ul>
Grease	G2-LI	SYG2-400LI SYG2-350LI SYG2-400LI-A SYG2-160LI SYGA-160CNLI	Various	Various	<ul style="list-style-type: none"> <li>• General purpose type</li> </ul>
	G2-CA	SYG2-400CA SYG2-350CA SYG2-400CA-A SYG2-160CA SYGA-160CNCA	Various	Various	<ul style="list-style-type: none"> <li>• Used for normal temperature, light load bearing at places in contact with water or steam.</li> </ul>
	Molybdenum disulphide lubricant	SYG2-400M	400 g (10 per case)	Belows type	<ul style="list-style-type: none"> <li>• Used for places with heavy load</li> </ul>


## STANDARD TIGHTENING TORQUE

### STANDARD TIGHTENING TORQUE TABLE (WHEN USING TORQUE WRENCH)

★ In the case of metric nuts and bolts for which there is no special instruction, tighten to the torque given in the table below.

Thread diameter of bolt	Width across flats					
mm	mm	Nm		kgm		
6	10	13.2 ± 1.4		1.35 ± 0.15		
8	13	31 ± 3		3.2 ± 0.3		
10	17	66 ± 7		6.7 ± 0.7		
12	19	113 ± 10		11.5 ± 1		
14	22	177 ± 19		18 ± 2		
16	24	279 ± 30		28.5 ± 3		
18	27	382 ± 39		39 ± 4		
20	30	549 ± 59		56 ± 6		
22	32	745 ± 83		76 ± 8.5		
24	36	927 ± 103		94.5 ± 10.5		
27	41	1320 ± 140		135 ± 15		
30	46	1720 ± 190		175 ± 20		
33	50	2210 ± 240		225 ± 25		
36	55	2750 ± 290		280 ± 30		
39	60	3290 ± 340		335 ± 35		


CDL00372

Thread diameter of bolt	Width across flats	
mm	mm	Nm
6	10	7.85 ± 1.95
8	13	18.6 ± 4.9
10	14	40.2 ± 5.9
12	27	82.35 ± 7.85

CDL00373

### TABLE OF TIGHTENING TORQUES FOR FLARED NUTS

★ In the case of flared nuts for which there is no special instruction, tighten to the torque given in the table below.

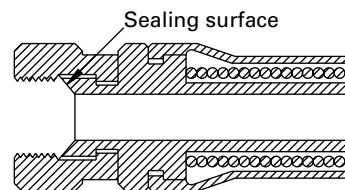

SAD00483

Thread diameter	Width across flat	Tightening torque	
mm	mm	Nm	kgm
14	19	24.5 ± 4.9	2.5 ± 0.5
18	24	49 ± 19.6	5 ± 2
22	27	78.5 ± 19.6	8 ± 2
24	32	137.3 ± 29.4	14 ± 3
30	36	176.5 ± 29.4	18 ± 3
33	41	196.1 ± 49	20 ± 5
36	46	245.2 ± 49	25 ± 5
42	55	294.2 ± 49	30 ± 5

**TABLE OF TIGHTENING TORQUES FOR SPLIT FLANGE BOLTS**

★ In the case of split flange bolts for which there is no special instruction, tighten to the torque given in the table below.

Thread diameter	Width across flat	Tightening torque	
		Nm	kgm
mm	mm		
10	14	$65.7 \pm 6.8$	$6.7 \pm 0.7$
12	17	$112 \pm 9.8$	$11.5 \pm 1$
16	22	$279 \pm 29$	$28.5 \pm 3$

**TABLE OF TIGHTENING TORQUES FOR O-RING BOSS PIPING JOINTS**

★ Unless there are special instructions, tighten the O-ring boss piping joints to the torque below.

Nominal No.	Thread diameter	Width across flat	Tightening torque	
	mm	mm	Nm	kgm
02	14	Varies depending on type of connector.	$34.3 \pm 4.9$	$3.5 \pm 0.5$
03, 04	20		$93.1 \pm 9.8$	$9.5 \pm 1$
05, 06	24		$142.1 \pm 19.6$	$14.5 \pm 2$
10, 12	33		$421.4 \pm 58.8$	$43 \pm 6$
14	42		$877.1 \pm 132.3$	$89.5 \pm 13.5$

**TABLE OF TIGHTENING TORQUES FOR O-RING BOSS PLUGS**

★ Unless there are special instructions, tighten the O-ring boss plugs to the torque below.

Nominal No.	Thread diameter	Width across flat	Tightening torque	
	mm	mm	Nm	kgm
08	08	14	$7.35 \pm 1.47$	$0.75 \pm 0.15$
10	10	17	$11.27 \pm 1.47$	$1.15 \pm 0.15$
12	12	19	$17.64 \pm 1.96$	$1.8 \pm 0.2$
14	14	22	$22.54 \pm 1.96$	$2.3 \pm 0.2$
16	16	24	$29.4 \pm 4.9$	$3 \pm 0.5$
18	18	27	$39.2 \pm 4.9$	$4 \pm 0.5$
20	20	30	$49 \pm 4.9$	$5 \pm 0.5$
24	24	32	$68.6 \pm 9.8$	$7 \pm 1$
30	30	32	$107.8 \pm 14.7$	$11 \pm 1.5$
33	33	n	$127.4 \pm 19.6$	$13 \pm 2$
36	36	36	$151.9 \pm 24.5$	$15.5 \pm 2.5$
42	42	n	$210.7 \pm 29.4$	$21.5 \pm 3$
52	52	n	$323.4 \pm 44.1$	$33 \pm 4.5$

**TIGHTENING TORQUE FOR 102 ENGINE SERIES****1) BOLT AND NUTS**

Use these torques for bolts and nuts (unit: mm) of Cummins Engine.

Thread diameter	Tightening torque	
	mm	Nm
6	10 ± 2	1.02 ± 0.20
8	24 ± 4	2.45 ± 0.41
10	43 ± 6	4.38 ± 0.61
12	77 ± 12	7.85 ± 1.22

**2) EYE JOINTS**

Use these torques for eye joints (unit: mm) of Cummins Engine.

Thread diameter	Tightening torque	
	mm	Nm
6	8 ± 2	0.81 ± 0.20
8	10 ± 2	1.02 ± 0.20
10	12 ± 2	1.22 ± 0.20
12	24 ± 4	2.45 ± 0.41
14	36 ± 5	3.67 ± 0.51

**3) TAPERED SCREWS**

Use these torques for tapered screws (unit: inch) of Cummins Engine.

Thread diameter	Tightening torque	
	inch	Nm
1 / 16	3 ± 1	0.31 ± 0.10
1 / 8	8 ± 2	0.81 ± 0.20
1 / 4	12 ± 2	1.22 ± 0.20
3 / 8	15 ± 2	1.53 ± 0.41
1 / 2	24 ± 4	2.45 ± 0.41
3 / 4	36 ± 5	3.67 ± 0.51
1	60 ± 9	6.12 ± 0.92

**TIGHTENING TORQUE TABLE FOR HOSES (TAPER SEAL TYPE AND FACE SEAL TYPE)**

- ★ Tighten the hoses (taper seal type and face seal type) to the following torque, unless otherwise specified.
- ★ Apply the following torque when the threads are coated (wet) with engine oil.

Nominal size of hose	Width across flats	Tightening torque (Nm {kgm})		Taper seal type Thread size (mm)	Face seal type	
		Range	Target		Nominal thread size - Threads per inch, Thread series	Root diameter (mm) (Reference)
02	19	35 - 63 {3.5 - 6.5}	44 {4.5}	14	$\frac{9}{16}$ - 18UNF	14.3
03	22	54 - 93 {5.5 - 9.5}	74 {4.5}	-	$\frac{11}{16}$ - 16UN	17.5
	24	59 - 98 {6.0 - 10.0}	78 {8.0}	18	-	-
04	27	84 - 132 {8.5 - 13.5}	103 {10.5}	22	$\frac{13}{16}$ - 16UN	20.7
05	32	128 - 186 {13.0 - 19.0}	157 {16.0}	24	1 - 14UNS	25.4
06	36	177 - 245 {18.0 - 25.0}	216 {22.0}	30	$1\frac{3}{16}$ - 12UNF	30.3
(10)	41	177 - 245 {18.0 - 25.0}	216 {22.0}	33	-	-
(12)	46	197 - 294 {20.0 - 30.0}	245 {25.0}	36	-	-
(14)	55	246 - 343 {25.0 - 35.0}	294 {30.0}	42	-	-

**ELECTRIC WIRE CODE**

In the wiring diagrams, various colors and symbols are employed to indicate the thickness of wires. This wire code table will help you understand WIRING DIAGRAMS.

Example: 5WB indicates a cable having a nominal number 5 and white coating with black stripe.

**CLASSIFICATION BY THICKNESS**

Nominal number	Copper wire			Cable O.D. (mm)	Current rating (A)	Applicable circuit
	Number of strands	Dia. of strands (mm <sup>2</sup> )	Cross section (mm <sup>2</sup> )			
0.85	11	0.32	0.88	2.4	12	Starting, lighting, signal etc.
2	26	0.32	2.09	3.1	20	Lighting, signal etc.
5	65	0.32	5.23	4.6	37	Charging and signal
15	84	0.45	13.36	7.0	59	Starting (Glow plug)
40	85	0.80	42.73	11.4	135	Starting
60	127	0.80	63.84	13.6	178	Starting
100	217	0.80	109.1	17.6	230	Starting

**CLASSIFICATION BY COLOR AND CODE**

Priority	Classification	Circuits							
		Charging	Ground	Starting	Lighting	Instrument	Signal	Other	
1	Primary	Code	W	B	B	R	Y	G	L
		Color	White	Black	Black	Red	Yellow	Green	Blue
2	Auxiliary	Code	WR	—	BW	RW	YR	GW	LW
		Color	White & Red	—	White & Black	Red & White	Yellow & Red	Green & White	Blue & White
3		Code	WB	—	BY	RB	YB	GR	LR
		Color	White & Black	—	Black & Yellow	Red & Black	Yellow & Black	Green & Red	Blue & Yellow
4		Code	WL	—	BR	RY	YG	GY	LY
		Color	White & Blue	—	Black & Red	Red & Yellow	Yellow & Green	Green & Yellow	Blue & Yellow
5		Code	WG	—	—	RG	YL	GB	LB
		Color	White & Green	—	—	Red & Green	Yellow & Blue	Green & Black	Blue & Black
6		Code	—	—	—	RL	YW	GL	—
		Color	—	—	—	Red & Blue	Yellow & White	Green & Blue	—

## CONVERSION TABLE

### METHOD OF USING THE CONVERSION TABLE

The Conversion Table in this section is provided to enable simple conversion of figures. For details of the method of using the Conversion Table, see the example given below.

### EXAMPLE

- Method of using the Conversion Table to convert from millimeters to inches
1. Convert 55 mm into inches.
    - (1) Locate the number 50 in the vertical column at the left side, take this as (A), then draw a horizontal line from (A).
    - (2) Locate the number 5 in the row across the top, take this as (B), then draw a perpendicular line down from (B).
    - (3) Take the point where the two lines cross as (C). This point (C) gives the value when converting from millimeters to inches. Therefore, 55 mm = 2.165 inches.
  2. Convert 550 mm into inches.
    - (1) The number 550 does not appear in the table, so divide by 10 (move the decimal point one place to the left) to convert it to 55 mm.
    - (2) Carry out the same procedure as above to convert 55 mm to 2.165 inches.
    - (3) The original value (550 mm) was divided by 10, so multiply 2.165 inches by 10 (move the decimal point one place to the right) to return to the original value. This gives 550 mm = 21.65 inches.

### Millimeters to inches

1 mm = 0.03937 in

	0	1	2	3	4	5	6	7	8	9
0	0	0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
(A) 50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898



---

# 01 GENERAL


---

General assembly drawing .....	01-2
Specifications .....	01-4
Weight table .....	01-7
List of lubricant and water .....	01-9

U42103

# GENERAL ASSEMBLY DRAWING

Serial No.: 50305 – 52999

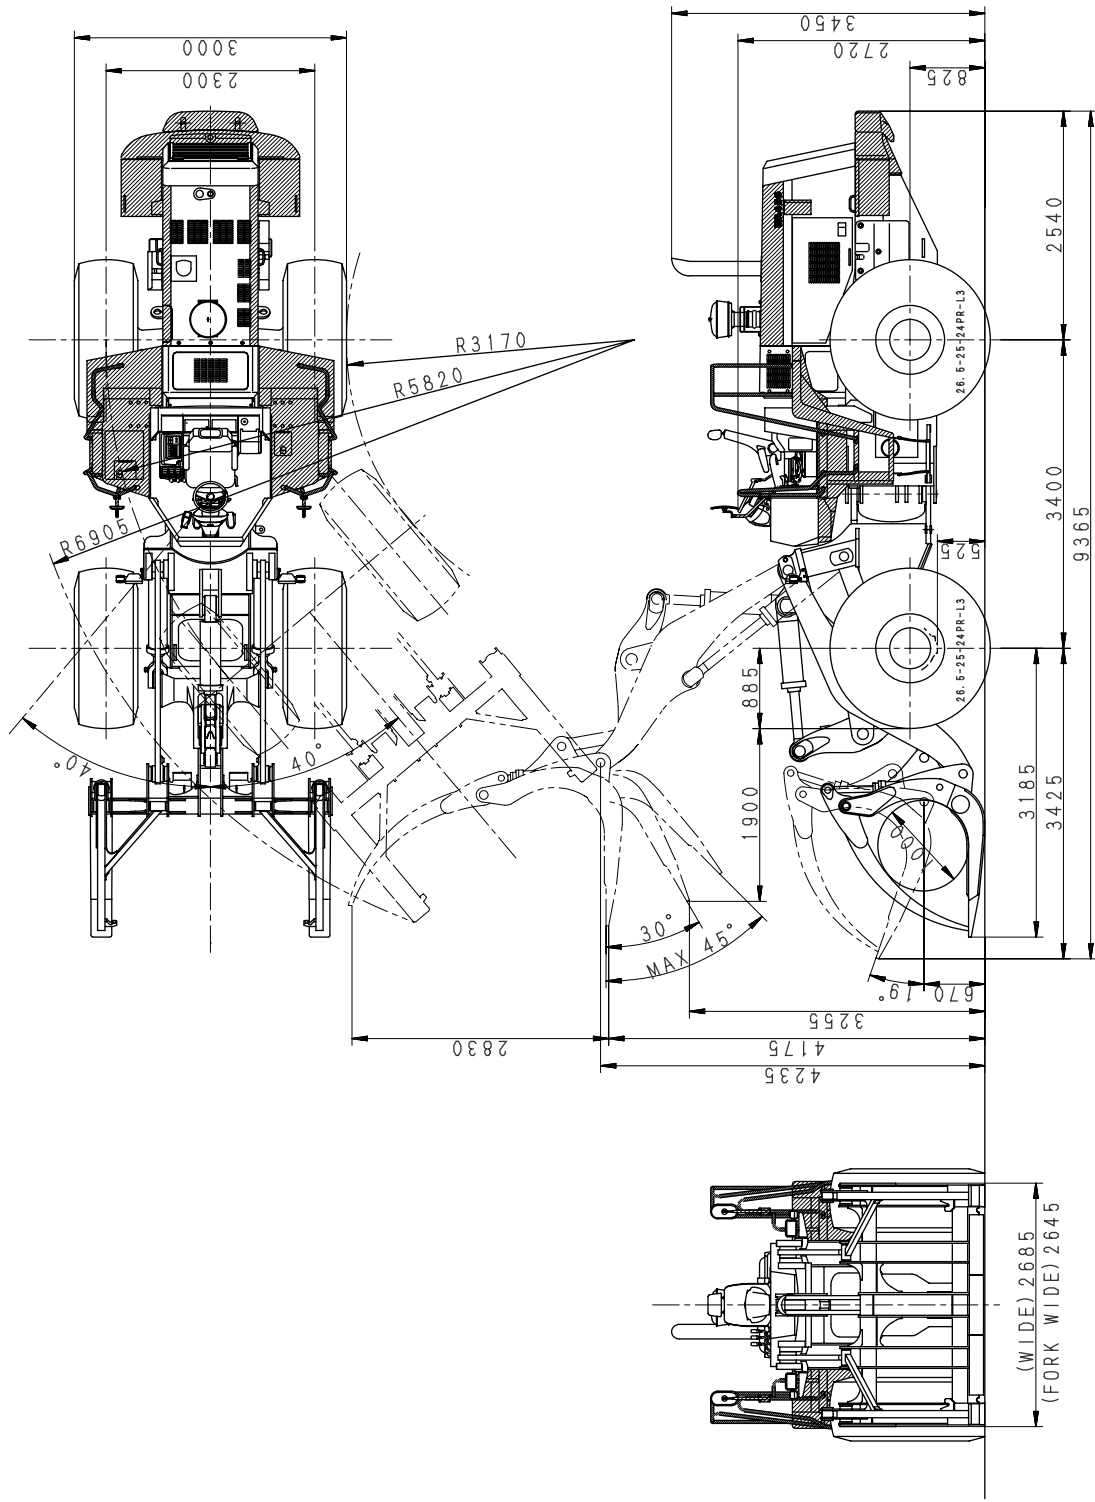


U42103

SKW01900

Serial No.: 53001 – 53999

Serial No.: 54001 and up

U42103

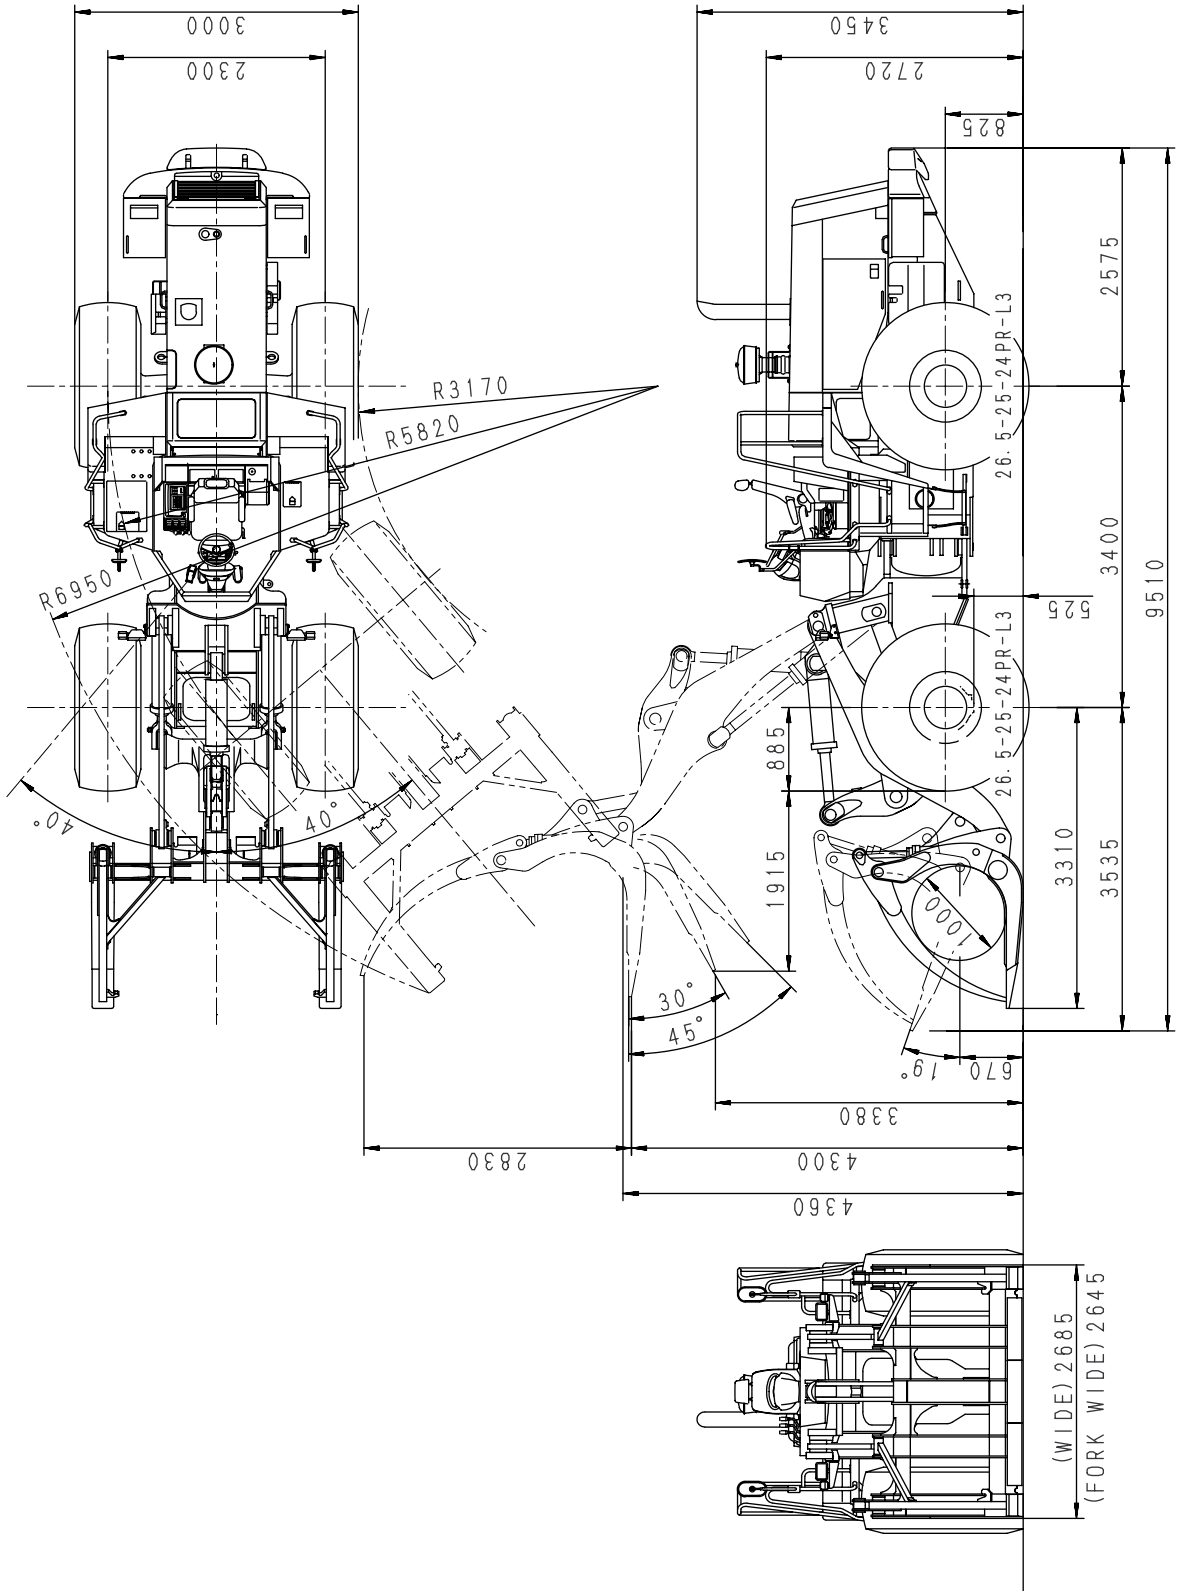

SWW02937

## SPECIFICATIONS

Machine model			WA450-3LL		
Serial No.			50305 – 52999	53001 – 53999 54001 and up	
Weight	Operating weight	kg	22,750	23,440	
	Distribution (front)	kg	11,510	11,420	
	Distribution (rear)	kg	11,240	12,020	
Performance	Rated load	kg	8,600	8,600	
	Travel speed	FORWARD 1st	km/h	6.6	6.6
		FORWARD 2nd	km/h	12.3	12.3
		FORWARD 3rd	km/h	21.8	21.8
		FORWARD 4th	km/h	34.0	34.0
		REVERSE 1st	km/h	6.8	6.8
		REVERSE 2nd	km/h	12.8	12.8
		REVERSE 3rd	km/h	22.7	22.7
		REVERSE 4th	km/h	36.0	36.0
	Max. rimpull		kN {kg}	188.1 {19,180}	188.1 {19,180}
Gradeability		deg	25.0	25.0	
Min. turning radius	Center of outside wheel	mm	5,820	5,820	
	Outside portion of chassis	mm	6,905	6,950	
Dimensions	Overall length	mm	9,365	9,510	
	Overall width (chassis)	mm	3,000	3,000	
	Log grapple width	mm	2,685	2,685	
	Overall height (top of exhaust pipe)		mm	3,450	3,450
		(Grapple arm open)	mm	7,005	7,130
	Wheelbase	mm	3,400	3,400	
	Tread	mm	2,300	2,300	
	Min. ground clearance	mm	525	525	
	Height of grapple hinge pin	mm	4,235	4,360	
	Dumping clearance (30°)	mm	3,255	3,380	
	Dumping reach	mm	1,900	1,915	
	Grapple dump angle	deg	45	45	
Grapple tilt angle (travel posture)	deg	19	19		


U42103

Machine model			WA450-3LL	
Serial No.			50305 – 52999	53001 – 53999 54001 and up
Engine	Model		Komatsu S6D125	
	Type		4-cycle, water-cooled, in-line, 6-cylinder, direct injection, with turbocharger	
	No. of cylinders – bore x stroke	mm	6 – 125 x 150	
	Piston displacement	ℓ {cc}	11.04 {11,040}	
	Flywheel horsepower	kW {HP}/rpm	196 {259}/2,200	
	Maximum torque	Nm {kgm}/rpm	1,050 {107}/1,400	
	Fuel consumption ratio	g/kWh {g/HPH}	224 {169}	
	High idling speed	rpm	2,400 ± 50	
	Low idling speed	rpm	700 – 750	
	Starting motor		24 V 7.5 kW	
Alternator		24 V 50 A		
Battery		12 V 150 Ah x 2		
Power train	Torque converter		3-element, 1-stage, single-phase (Komatsu TCA38-8A)	
	Transmission		Spur gear, constant-mesh multiple-disc, hydraulically actuated, modulation type	
	Reduction gear		Spiral bevel gear, splash lubrication	
	Differential		Straight bevel gear, torque proportioning	
	Final drive		Planetary gear single stage, splash lubrication	
Axle, wheel	Drive type		Front-, rear-wheel drive	
	Front axle		Fixed frame, full-floating type	
	Rear axle		Center pin support full-floating type	
	Tire		26.5-25-24PR	
	Wheel rim		22.00 x 25TB (for water ballast)	
Inflation pressure	Front tire	kMPa {kg/cm <sup>2</sup> }	392 {4.0}	
	Rear tire	kMPa {kg/cm <sup>2</sup> }	343 {3.5}	
Brakes	Service brake		Front-, rear-wheel independent system control, sealed multiple-disc wet-type disc brake With hydraulic booster	
	Parking brake		Drive shaft, wet type disc brake Hydraulically released spring type	
Brake cooling system	Cooling type		Oil circulating	
	Brake cooling pump		Gear pump	
	Capacity	ℓ/min	55	
	Brake tank capacity	ℓ	22.5	

Machine model		WA450-3LL	
Serial No.		50305 – 52999	53001 – 53999 54001 and up
Steering system	Type	Articulated steering	
	Structure	Fully hydraulic power steering	
Hydraulic system	Hydraulic pump type		Gear pump
	Delivery	Hydraulic pump	302
		Switch pump	122
		Steering pump	168
		PPC pump	62
Control valve	Set pressure for work equipment	MPa {kg/cm <sup>2</sup> }	3-spool type 20.58 {210}
	Set pressure for steering	MPa {kg/cm <sup>2</sup> }	Spool type 20.58 {210}
Cylinder	Lift arm cylinder No. – bore x stroke	mm	Reciprocating piston 2 – 180 x 764
	Fork cylinder No. – bore x stroke	mm	Reciprocating piston 1 – 200 x 550
	Log grapple cylinder No. – bore x stroke	mm	Reciprocating piston 2 – 130 x 411
	Steering cylinder No. – bore x stroke	mm	Reciprocating piston 2 – 100 x 440
Work equipment	Link type	Single link	

U42103

## WEIGHT TABLE

 This weight table is a guide for use when transporting or handling components.

Unit: kg

Machine model	WA450-3LL	
	Serial No.	Serial No.
	50305 – 52999	53001 – 53999 54001 and up
Engine	1120	1120
Radiator	168	168
Transmission (including torque converter)	1000	1000
Center drive shaft	36	36
Front drive shaft	40	40
Rear drive shaft	19	19
Front axle	1455	1455
Rear axle	1466	1466
Front differential	235	235
Rear differential	244	244
Planetary carrier and brake assembly (each)	685	685
Axle pivot (rear axle)	148	148
Wheel (each)	240	240
Tire (each)	421	421
Steering valve	24	24
Steering cylinder (each)	38	38
Brake valve (R.H.)	8.5	8.5
Hydraulic tank	231	231
Hydraulic, PPC and brake cooling pump (tandem pump)	33	33
Steering, switch pump (tandem pump)	20	20
PPC valve	3	3
Main control valve	90	90
Lift cylinder (each)	192	192
Fork cylinder	222	222
Log grapple cylinder (each)	78	78
Engine hood	184	184
Front frame	1830	1830
Rear frame	1420	1586
Bucket link	89	89
Bellcrank	415	415
Lift arm (including bushing)	1440	1540
Log grapple	1772	1772

U42103



**Download the full PDF manual instantly.**

**Our customer service e-mail:**

**[aservicemanualpdf@yahoo.com](mailto:aservicemanualpdf@yahoo.com)**