

# Shop Manual

WHEEL LOADER

**WA800-3E0**

**WA900-3E0**

SERIAL NUMBERS

WA800-70001

WA900-60001

and up

**KOMATSU**

## Table of contents

00 Index and foreword	
Index	SEN02036-09
Composition of shop manual .....	2
Table of contents.....	4
Foreword and general information	SEN02037-03
Safety notice .....	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard .....	9
Handling of electric equipment and hydraulic component .....	11
Handling of connectors newly used for engines .....	20
How to read electric wire code.....	23
Precautions when carrying out operation .....	26
Method of disassembling and connecting push-pull type coupler .....	29
Standard tightening torque table.....	32
Conversion table.....	36
01 Specification	
Specification and technical data	SEN02039-01
General assembly drawing.....	2
Specifications .....	4
Weight table .....	7
Table of fuel, coolant and lubricants .....	10
10 Structure, function and maintenance standard	
Engine and cooling system	SEN02351-01
Engine mount .....	2
Transmission mount .....	3
Damper.....	4
Radiator, oil cooler, aftercooler .....	6
Fuel system .....	9
Power train, Part 1	SEN02352-00
Power train .....	2
Power train system.....	4
Torque converter .....	6
Torque converter regulator valve.....	14
Transmission .....	16
Transfer .....	28
Transmission control valve.....	31
Power train, Part 2	SEN02470-01
Torque converter oil cooler .....	2
Drive shaft .....	4
Center support.....	6
Axle .....	8
Differential .....	10
Final drive.....	16
Steering system	SEN02353-01
Steering piping.....	2
AJSS lever linkage .....	4
EPC valve.....	5
Steering column.....	6
Rotary valve .....	7
Steering control valve .....	10
Steering unit (orbit-roll valve).....	22

Steering pump .....	25
Steering cylinder.....	27
Slow return valve.....	29
Emergency steering piping.....	30
Diverter valve .....	31
Emergency steering pump .....	37
Brake system .....	SEN02354-01
Brake piping .....	2
Brake .....	3
Brake valve .....	6
Accumulator charge valve.....	14
PPC relief valve.....	18
Accumulator (for brake).....	20
Slack adjuster.....	21
Parking brake .....	23
Parking brake caliper .....	25
Spring cylinder.....	26
Parking brake solenoid.....	27
Brake cooling system (if equipped) .....	28
Brake cooling system (55°C specification) (If equipped).....	36
Undercarriage and frame .....	SEN02355-00
Axle mount .....	2
Center hinge pin.....	5
Tire and wheel.....	7
Jack up point.....	8
Hydraulic system, Part 1 .....	SEN02356-00
Hydraulic piping.....	2
Work equipment lever linkage .....	3
Hydraulic tank .....	4
Torque converter charging, PPC and brake pump .....	8
Hydraulic system, Part 2 .....	SEN02471-00
Main control valve .....	2
Accumulator (For PPC valve).....	17
Main piston pump.....	18
Main piston pump cut-off solenoid valve .....	29
PPC valve .....	30
PPC relief valve.....	35
Switch pump.....	36
Control pump.....	45
Work equipment .....	SEN02357-00
Work equipment linkage.....	2
Bucket positioner and lift arm kick-out .....	6
Remote lift arm positioner .....	8
Auto greasing system.....	9
Hydraulic cylinder.....	10
Cab and its attachments .....	SEN02358-00
ROPS cab .....	2
Air conditioner .....	3
Electrical system, Part 1 .....	SEN02359-00
Machine monitor system .....	2
Main monitor .....	4
Maintenance monitor.....	8
Electrical system, Part 2 .....	SEN02360-02
Work equipment control system.....	2
Remote position, joystick steering controller.....	5
Active power maximizing electrical circuit .....	6
Automatic transmission system (ATM) .....	13

Electrical system, Part 3	SEN02361-02
Engine starting/stopping circuit .....	2
Parking brake circuit.....	4
Preheating circuit.....	10
Emergency engine stop.....	12
Hydraulic oil level sensor.....	14
Battery and starting motor disconnecter switch and starting aid connector .....	16
Sensor .....	18
20 Standard value table	
Standard service value table	SEN02154-01
Standard value table for engine.....	2
Standard value table for chassis .....	3
Standard value table for electrical system .....	7
30 Testing and adjusting	
Testing and adjusting, Part 1	SEN02155-04
Tools for testing, adjusting, and troubleshooting .....	3
Measuring engine speed.....	8
Measuring intake air (boost) pressure.....	10
Measuring exhaust gas color .....	11
Measuring exhaust temperature.....	12
Adjusting valve clearance.....	14
Measuring compression pressure .....	15
Measuring blow-by pressure .....	17
Measuring engine oil pressure .....	19
Handling fuel system equipment .....	20
Releasing residual pressure in fuel system.....	20
Testing fuel pressure .....	21
Measuring fuel return rate and leakage.....	22
Bleeding air from fuel circuit.....	25
Testing leakage in fuel system .....	27
Handling reduced cylinder mode operation.....	28
Handling no-injection cranking operation .....	28
Handling controller voltage circuit .....	29
Adjusting speed sensor .....	29
Testing and adjusting alternator belt tension.....	30
Testing and adjusting belt tension for air conditioner compressor.....	31
Testing and adjusting power train oil pressure .....	32
Procedure for operating emergency steering spool when transmission valve fails.....	37
Testing and adjusting, Part 2	SEN02156-02
Measuring operating effort of AJSS lever (AJSS specification) .....	3
Testing and adjusting AJSS lever angle sensor and frame angle sensor (AJSS specification) ..	4
Testing and adjusting steering stopper bolt (AJSS specification).....	6
Testing and adjusting steering stop valve.....	8
Measuring steering oil pressure .....	9
Testing and adjusting emergency steering oil pressure .....	10
Bleeding air from steering circuit.....	12
Measuring brake pedal.....	13
Measuring brake performance .....	14
Testing and adjusting accumulator charge pressure .....	15
Measuring wheel brake oil pressure reduction.....	17
Measuring wear of wheel brake disc.....	19
Bleeding air from wheel brake circuit .....	20
Releasing residual pressure in brake accumulator circuit.....	21
Testing parking brake performance .....	22
Measuring parking brake solenoid oil pressure.....	23

Testing and adjusting wear of parking brake pad.....	24
Testing and adjusting PPC oil pressure .....	25
Adjusting PPC valve linkage .....	27
Testing and adjusting work equipment oil pressure .....	28
Bleeding air from piston pump .....	30
Bleeding air from work equipment circuit .....	31
Adjusting work equipment lever linkage.....	32
Releasing remaining pressure in hydraulic circuit.....	34
Testing and adjusting bucket proximity switch .....	35
Testing and adjusting lift arm proximity switch .....	36
Testing and adjusting active working proximity switch .....	37
Checking proximity switch operation pilot lamp .....	38
Testing and adjusting lift arm position detection lever .....	39
Adjusting speedometer module of main monitor.....	40
Testing and adjusting, Part 3	SEN02157-04
Special function of engine service monitor.....	2
VHMS controller initial setting procedure .....	26
Precautions for replacing VHMS controller .....	48
Pm-clinic inspection table.....	54
40 Troubleshooting	
Failure code table, fuse and relay locations	SEN02142-04
Failure code table.....	2
Method of displaying action code and failure code on machine monitor.....	9
Transmission & AJSS controller LED display.....	11
Transmission control system.....	12
AJSS (Advanced Joystick Steering System) control system.....	13
Location of fuse.....	14
Location of relay.....	18
General information on troubleshooting	SEN02143-02
Points to remember when troubleshooting.....	2
Sequence of events in troubleshooting .....	3
Testing before troubleshooting .....	4
Classification and procedures of troubleshooting .....	5
Contents of troubleshooting table.....	6
Connection table for connector pin numbers .....	8
T- branch box and T- branch adapter table .....	44
Troubleshooting by failure code (Display of code), Part 1	SEN02144-01
Failure code [15B0NX] (Transmission oil filter: Clogging).....	4
Failure code [AA1ANX] (Air cleaner L.H: Clogged).....	6
Failure code [AA1BNX] (Air cleaner R.H: Clogged) .....	9
Failure code [AB00L4] (Alternator: Failure on battery charge circuit (R terminal signal is present and engine is stopped).....	12
Failure code [AB00L6] (Alternator: Failure on battery charge circuit (R terminal signal is present and engine is stopped).....	14
Failure code [AB00MA] (Alternator: Failure on battery charge circuit (Absence of R terminal signal and detection error) .....	16
Failure code [AB00MB] (Alternator: Failure on battery charge circuit (Absence of R terminal signal and detection error) .....	18
Failure code [AB00MC] (Alternator: Failure on battery charge circuit (Absence of R terminal signal and detection error) .....	20
Failure code [B@BAZK] (Engine oil: Oil level low).....	22
Failure code [B@BAZG] (Engine oil: Low oil pressure) .....	24
Failure code [B@BCZK] and [b@BCZK] (Radiator coolant: Low coolant level) .....	28
Failure code [B@BDNS] (Engine: Overheating) .....	30
Failure code [B@C6NS] (Front brake oil temperature: Overheating) .....	32
Failure code [B@CENS] (Torque converter oil temperature overheating) .....	34
Failure code [B@JFZG] (Brake oil: Low oil pressure).....	36

Troubleshooting by failure code (Display of code), Part 2	SEN02145-01
Failure code [CA111] Engine controller (Left bank): Internal abnormality .....	4
Failure code [CB111] Engine controller (Right bank): Internal abnormality .....	6
Failure code [CA115] Abnormal engine Ne and Bkup speed sensors (At left bank):	
Abnormal speed sensor signal .....	8
Failure code [CB115] Abnormal engine Ne and Bkup speed sensors (At right bank):	
Abnormal speed sensor signal .....	9
Failure code [CA122] Charge pressure sensor too high (At left bank only):	
Excessively high voltage detected .....	10
Failure code [CA123] Charge pressure sensor too low (At left bank only):	
Excessively low voltage detected .....	12
Failure code [CA131] Throttle sensor abnormally high level (Only left bank):	
High voltage detection .....	13
Failure code [CA132] Throttle sensor too low (At left bank only):	
Excessively low voltage detected .....	15
Failure code [CA135] Oil pressure sensor too high (At left bank only):	
Excessively high voltage detected .....	16
Failure code [CA141] Oil pressure sensor too low (At left bank only):	
Excessively low voltage detected .....	18
Failure code [CA144] Coolant temperature sensor too high:	
Excessively high voltage detected .....	20
Failure code [CA145] Coolant temperature sensor too low (At left bank only):	
Excessively low voltage detected .....	22
Failure code [CA153] Charge temperature sensor too high (At left bank only):	
Excessively high voltage detected .....	24
Failure code [CA154] Charge temperature sensor too low (At left bank only):	
Excessively low voltage detected .....	26
Failure code [CA187] Sensor power supply (2) abnormally low level (Left bank):	
Low voltage detection .....	28
Failure code [CB187] Sensor power supply (2) abnormally low level (Right bank):	
Low voltage detection .....	29
Failure code [CA212] Engine oil temperature sensor abnormally high level (Only left bank):	
High voltage detection .....	30
Failure code [CA213] Engine oil temperature sensor abnormally low level (Only left bank):	
Low voltage detection .....	32
Failure code [CA221] Atmospheric pressure sensor too high (At left bank only):	
Excessively high voltage detected .....	33
Failure code [CA222] Atmospheric pressure sensor too low (At left bank only):	
Excessively low voltage detected .....	35
Failure code [CA227] Sensor power source (2) too high (At left bank):	
Excessively high voltage detected .....	36
Failure code [CB227] Sensor power supply (2) abnormally high level (Right bank):	
High voltage detection .....	38
Failure code [CA234] Engine over speed (At left bank only): Excessively high speed .....	40
Failure code [CA238] Abnormal power source for Ne speed sensor (At left bank only):	
Excessively low voltage detected .....	42
Failure code [CB238] Abnormal power source for Ne speed sensor (At right bank only):	
Excessively low voltage detected .....	44
Failure code [CA263] Fuel temperature sensor too high (At left bank):	
Excessively high voltage detected .....	46
Failure code [CB263] Fuel temperature sensor too high (At right bank):	
Excessively high voltage detected .....	48
Failure code [CA265] Fuel temperature sensor abnormally low level (Left bank):	
Low voltage detection .....	49
Failure code [CB265] Fuel temperature sensor abnormally low level (Right bank):	
Low voltage detection .....	49
Failure code [CA271] PCV1 short circuit (Left bank): Short circuit .....	50
Failure code [CB271] PCV1 short circuit (Right bank): Short circuit .....	51

Failure code [CA272] PCV1 disconnection (Left bank): Disconnection .....	52
Failure code [CB272] PCV1 disconnection (Right bank): Disconnection .....	53
Failure code [CA273] PCV2 short circuit (Left bank): Short circuit .....	54
Failure code [CB273] PCV2 short circuit (Right bank): Short circuit .....	55
Failure code [CA274] PCV2 disconnection (Left bank): Disconnection .....	56
Failure code [CB274] PCV2 disconnection (Right bank): Disconnection .....	57
Troubleshooting by failure code (Display of code), Part 3	SEN02146-01
Failure code [CA322] Injector No. 1 (L/B No.1) system disconnection or short circuit (At left bank): Disconnection, short circuit .....	4
Failure code [CA323] Injector No. 5 (L/B No.5) system disconnection or short circuit (At left bank): Disconnection, short circuit .....	6
Failure code [CA324] Injector No. 3 (L/B No.3) system disconnection or short circuit (At left bank): Disconnection, short circuit .....	8
Failure code [CA325] Injector No. 6 (L/B No.6) system disconnection or short circuit (At left bank): Disconnection, short circuit .....	10
Failure code [CA331] Injector No. 2 (L/B No.2) system disconnection or short circuit (At left bank): Disconnection, short circuit .....	12
Failure code [CA332] Injector No. 4 (L/B No.4) system disconnection or short circuit (At left bank): Disconnection, short circuit .....	14
Failure code [CA342] Engine controller data mismatch (Left bank): Mismatch .....	16
Failure code [CB342] Engine controller data mismatch (Right bank): Mismatch .....	17
Failure code [CA351] Abnormal injector drive circuit (At left bank): Abnormal circuit .....	18
Failure code [CB351] Injector drive circuit abnormality (Right bank): Circuit abnormality .....	20
Failure code [CA352] Sensor power supply (1) abnormally low level (Left bank): Low voltage detection .....	22
Failure code [CB352] Sensor power supply (1) abnormally low level (Right bank): Low voltage detection .....	23
Failure code [CA386] Sensor power supply (1) abnormally high level (Left bank): High voltage detection .....	24
Failure code [CB386] Sensor power supply (1) abnormally high level (Right bank): High voltage detection .....	26
Failure code [CA431] Trouble in idle validation switch .....	28
Failure code [CA432] Idle validation action error .....	30
Failure code [CA441] Power supply voltage abnormally low level (Left bank): Low voltage detection .....	31
Failure code [CB441] Power supply voltage abnormally low level (Right bank): Low voltage detection .....	31
Failure code [CA442] Power supply voltage abnormally high level (Left bank): High voltage detection .....	32
Failure code [CB442] Power supply voltage abnormally high level (Right bank): High voltage detection .....	32
Failure code [CA449] Common rail abnormally high pressure (2) (Left bank): Abnormally high pressure occurrence .....	33
Failure code [CB449] Common rail abnormally high pressure (2) (Right bank): Abnormally high pressure occurrence .....	33
Failure code [CA451] Common rail pressure sensor too high (At left bank): Excessively high voltage detected .....	34
Failure code [CB451] Common rail pressure sensor abnormally high level (Right bank): High voltage detection .....	36
Failure code [CA452] Common rail pressure sensor abnormally low level (Left bank): Abnormally low voltage detection .....	38
Failure code [CB452] Common rail pressure sensor abnormally low level (Right bank): Abnormally low voltage detection .....	38
Failure code [CA553] Common rail pressure too high (1) (At left bank): Excessively high pressure detected .....	39
Failure code [CB553] Common rail pressure too high (1) (At right bank): Excessively high pressure detected .....	40

Failure code [CA554] In-range error in common rail pressure sensor (At left bank):	
In-range error.....	41
Failure code [CB554] In-range error in common rail pressure sensor (At right bank):	
In-range error.....	41
Failure code [CA559] Loss of pressure feed from supply pump (1) (At left bank):	
Loss of pressure feed detected .....	42
Failure code [CB559] Loss of pressure feed from supply pump (1) (At right bank):	
Loss of pressure feed detected .....	48
Failure code [CA689] Abnormal engine Ne speed sensor (At left bank): Abnormal signal .....	50
Failure code [CB689] Abnormal engine Ne speed sensor (At right bank): Abnormal signal.....	52
Failure code [CA691] Intake air temperature sensor abnormally high level (Only left bank):	
High voltage detection .....	54
Failure code [CA692] Intake air temperature sensor abnormally low level (Only left bank):	
Low voltage detection .....	56
Failure code [CA731] Abnormal engine Bkup speed sensor phase (At left bank):	
Abnormal phase.....	57
Failure code [CB731] Abnormal engine Bkup speed sensor phase (At right bank):	
Abnormal phase.....	57
Troubleshooting by failure code (Display of code), Part 4	SEN02147-02
Failure code [CA757] Loss of all engine controller data (At left bank): Loss of all data .....	3
Failure code [CB757] Loss of all engine controller data (At right bank): Loss of all data .....	3
Failure code [CA778] Engine Bkup speed sensor abnormality (At left bank):	
Bkup signal error.....	4
Failure code [CB778] Engine Bkup speed sensor abnormality (Right bank):	
Bkup signal error.....	6
Failure code [CA781] Inter-multicontroller communication error (Left bank):	
Communication error .....	8
Failure code [CB781] Inter-multicontroller communication error (Right bank):	
Communication error .....	10
Failure code [CA1257] Multicontroller distinction wiring harness key error (Left bank):	
Distinction error.....	11
Failure code [CB1257] Multicontroller distinction wiring harness key error (Right bank):	
Distinction error.....	12
Failure code [CB1548] Injector #7 (R/B #1) system disconnection/short circuit (Right bank):	
Disconnection/Short circuit .....	14
Failure code [CB1549] Injector #8 (R/B #2) system disconnection/short circuit (Right bank):	
Disconnection/Short circuit .....	16
Failure code [CB1551] Injector #10 (R/B #4) system disconnection/short circuit (Right bank):	
Disconnection/Short circuit .....	18
Failure code [CB1552] Injector #11 (R/B #5) system disconnection/short circuit (Right bank):	
Disconnection/Short circuit .....	20
Failure code [CB1553] Injector #12 (R/B #6) system disconnection/short circuit (Right bank):	
Disconnection/Short circuit .....	22
Failure code [CB1622] Injector #9 (R/B #3) system disconnection/short circuit (Right bank):	
Disconnection/Short circuit .....	24
Failure code [CA1633] KOMNET abnormality (Left bank): Communication error .....	26
Failure code [CA2185] Throttle sensor power supply abnormally high level (Only left bank):	
High voltage detection .....	28
Failure code [CA2186] Throttle sensor power source too low (At left bank only):	
Excessively low voltage detected .....	30
Failure code [CA2249] Loss of pressure feed from supply pump (2) (At left bank):	
Loss of pressure feed detected .....	31
Failure code [CB2249] Loss of pressure feed from supply pump (2) (At right bank):	
Loss of pressure feed detected .....	31
Failure code [CA2555] Intake heater relay voltage low error (Left bank only).....	32
Failure code [CA2556] Intake heater relay voltage high error (Left bank only) .....	34
Failure code [D160KZ] (or TM & AJSS controller LED display [10], abnormality in backup lamp relay system: Disconnection, short circuit or hot short circuit.....	36



Failure code [D180KA] (Preheating relay output system: Disconnection) .....	38
Failure code [D180KB] (Preheating relay output system: Grounding fault) .....	39
Failure code [D180KY] (Preheating relay output system: Hot short circuit) .....	40
Failure code [D19AKB] (or TM & AJSS controller LED display [56], abnormality in joystick caution relay output system: Disconnection or short circuit).....	42
Failure code [D19BKZ] (or TM & AJSS controller LED display [62], abnormality in joystick neutral interlock relay output system: Disconnection or short circuit).....	44
Failure code [D1EFKA] (Pre-lubrication start relay output system: Disconnection) .....	46
Failure code [D1EFKB] (Pre-lubrication start relay output system: Grounding fault) .....	48
Failure code [D1EFKY] (Pre-lubrication start relay output system: Hot short circuit).....	50
Failure code [D1EHKA] (Engine start relay output system: Disconnection).....	52
Failure code [D1EHKB] (Engine start relay output system: Grounding fault).....	54
Failure code [D1EHKY] (Engine start relay output system: Hot short circuit) .....	56
Failure code [D5ZHL6] (Starting switch terminal C signal: Error).....	58
Failure code [D5ZSKA] (Machine monitor communication output: Disconnection).....	60
Failure code [D5ZSKB] (Machine monitor communication output: Grounding fault).....	61
Failure code [D5ZSKY] (Machine monitor communication output: Hot short circuit) .....	62
Troubleshooting by failure code (Display of code), Part 5	SEN02148-02
Failure code [DB2RKR] (Engine controller CAN-NET communication: Disconnection and grounding fault) .....	3
Failure code [DBB0KK] (or VHMS LED display: "n9" → "01", VHMS controller: Low supply voltage).....	6
Failure code [DBB0KQ] (or VHMS LED display: "nF" → "11", VHMS controller model selection: Disagreement of model selection signals).....	8
Failure code [DBB3KK] (or VHMS LED display: "n9" → "05", VHMS controller: Low direct supply voltage) .....	10
Failure code [DBB5KP] (or VHMS LED display: "n9" → "04", VHMS controller sensor power supply (5 V): Low output voltage) .....	12
Failure code [DBB6KP] (or VHMS LED display: "n9" → "02", VHMS controller sensor power supply (24 V): Low output voltage) .....	14
Failure code [DBBQKR] (or VHMS LED display: "n8" → "02", VHMS controller CAN communication abnormality).....	16
Failure code [DBG2KK] (Solenoid power supply: Low voltage) .....	18
Failure code [DBG3KK] (Battery direct power supply: Low voltage).....	20
Failure code [DBG9KQ] (Model selection signal: Abnormal) .....	22
Failure code [DBGKR] (Pre-lubrication controller CAN-NET communication: Disconnection or grounding fault).....	23
Failure code [DBL0KR] (Power ladder controller CAN-NET communication: Disconnection or grounding fault) .....	26
Failure code [DDE2KB] (Engine oil pressure switch error: Grounding fault).....	28
Failure code [DDE2L6] (Engine oil pressure switch error: Disconnection or hot short circuit)....	30
Failure code [DDK3KZ] (or TM & AJSS controller LED display [20], abnormality in joystick forward-reverse switch system: Disconnection or hot short circuit).....	32
Failure code [DDK5KZ] (or TM & AJSS controller LED display: "21", Abnormality in shifting up/down switch system: Disconnection, short circuit or hot short circuit).....	35
Failure code [DDP5KZ] (Abnormality in steering lock switch system: Disconnection or short circuit) .....	38
Failure code [DGE5KX] (Atmospheric temperature sensor: Out of input signal range (short))...	40
Failure code [DGH2KX] (Hydraulic oil temperature sensor: Out of input signal range (short))...	42
Failure code [DGR4KX] (Front brake oil temperature sensor: Out of input signal range (short)).....	44
Troubleshooting by failure code (Display of code), Part 6	SEN02268-00
Failure code [DGT5KA] (or VHMS LED display: "n3" → "12", L.H. bank exhaust gas temperature sensor system (Front): Disconnection or short circuit).....	3
Failure code [dGT5KA] (or VHMS LED display: "n3" → "22", L.H. bank exhaust gas temperature sensor system (Rear): Disconnection or short circuit) .....	6
Failure code [DGT5KB] (or VHMS LED display: "n3" → "11", L.H. bank exhaust gas temperature sensor system (Front): Hot short circuit).....	10

Failure code [dGT5KB] (or VHMS LED display: "n3" → "21", L.H. bank exhaust gas temperature sensor system (Rear): Hot short circuit) .....	12
Failure code [DGT6KA] (or VHMS LED display: "n3" → "24", R.H. bank exhaust gas temperature sensor system (Front): Disconnection or short circuit) .....	14
Failure code [dGT6KA] (or VHMS LED display: "n3" → "26", R.H. exhaust gas temperature sensor system (Rear): Disconnection or short circuit) .....	17
Failure code [DGT6KB] (or VHMS LED display "n3" → "23", R.H. bank exhaust gas temperature sensor system (front): Hot short circuit) .....	20
Failure code [dGT6KB] (or VHMS LED display "n3" → "25", R.H. bank exhaust gas temperature sensor system (rear): Hot short circuit) .....	22
Failure code [DHE5KB] (or VHMS_LED display: "n3" → "32", Blow-by pressure sensor system: Short circuit) .....	24
Failure code [DHE5KY] (or VHMS LED display: "n3" → "31", Blow-by pressure sensor system: Hot short circuit) .....	26
Failure code [DHP2KX] (Main pump oil pressure sensor error: Disconnection or short circuit) ..	28
Failure code [DHT3KX] (or VHMS LED display: "n6" → "14", Transmission oil pressure sensor system: Out of input signal range) .....	30
Failure code [DHT8KX] (Steering pump oil pressure sensor error): Disconnection or short circuit) .....	32
Failure code [DHU2KX] (Front brake oil pressure sensor error: Disconnection or short circuit) .....	34
Failure code [DHU3KX] (Rear brake oil pressure sensor error: Disconnection or short circuit) ..	36
Failure code [DK00L8] (or TM & AJSS controller LED display [58], steering and frame angle displacement) .....	38
Failure code [DK30KX] (or TM & AJSS controller LED display [57], abnormality in steering angle potentiometer system): Disconnection or short circuit) .....	40
Failure code [DKD0KX] (or TM & AJSS controller LED display [59], abnormality in frame angle potentiometer system: Disconnection or short circuit) .....	42
Failure code [DLE4KA] (or TM & AJSS controller LED display [23], abnormality in engine speed sensor system: Disconnection, short circuit or hot short circuit) .....	44
Failure code [DLT4KA] (or TM & AJSS controller LED display [22], abnormality in speed sensor system: Disconnection, short circuit or hot short circuit) .....	46
Failure code [DUM7KY] (Pre-lubrication operation lamp output abnormality: Hot short circuit) ..	48
Failure code [DUM7KZ] (Pre-lubrication operation lamp output abnormality: Disconnection or grounding fault) .....	49
Failure code [DXF0KZ] (or TM & AJSS controller LED display [63], abnormality in joystick EPC solenoid system: Disconnection, short circuit or hot short circuit) .....	51
Failure code [DXH4KZ] (or TM & AJSS controller LED display [14], abnormality in 1st solenoid system: Disconnection, short circuit or hot short circuit) .....	52
Failure code [DXH5KZ] (or TM & AJSS controller LED display [15], abnormality in 2nd solenoid system: Disconnection, short circuit or hot short circuit) .....	54
Failure code [DXH6KZ] (or TM & AJSS controller LED display [16], abnormality in 3rd solenoid system: Disconnection, short circuit or hot short circuit) .....	56
Failure code [DXH7KZ] (or TM & AJSS controller LED display [13], abnormality in R solenoid system: Disconnection, short circuit or hot short circuit) .....	58
Failure code [DXH8KZ] (or TM & AJSS controller LED display [12], abnormality in F solenoid system: Disconnection, short circuit or hot short circuit) .....	60
Failure code [F@BBZL] (or VHMS LED display: "n3" → "38", Blow-by pressure sensor system: High pressure error) .....	62
Failure code [F@BYNR] (or VHMS LED display: "n3" → "62", L.H. front exhaust gas temperature sensor (2): Abnormal rise of exhaust gas temperature) .....	63
Failure code [f@BYNR] (or VHMS LED display: "n3" → "72", L.H. rear exhaust gas temperature sensor (2): Abnormal rise of exhaust gas temperature) .....	63
Failure code [F@BYNS] (or VHMS LED display: "n3" → "61", L.H. front exhaust gas temperature sensor (1): Abnormal rise of exhaust gas temperature) .....	64
Failure code [f@BYNS] (or VHMS LED display: "n3" → "71", L.H. rear exhaust gas temperature sensor (1): Abnormal rise of exhaust gas temperature) .....	64

Failure code [F@BZNR] (or VHMS LED display: "n3" → "82", R.H. front exhaust gas temperature sensor (2): Abnormal rise of exhaust gas temperature).....	65
Failure code [f@BZNR] (or VHMS LED display: "n3" → "92", R.H. rear exhaust gas temperature sensor (2): Abnormal rise of exhaust gas temperature).....	65
Failure code [F@BZNS] (or VHMS LED display: "n3" → "38", R.H. front exhaust gas temperature sensor (1): Abnormal rise of exhaust gas temperature).....	66
Failure code [f@BZNS] (or VHMS LED display: "n3" → "39", R.H. rear exhaust gas temperature sensor (1): Abnormal rise of exhaust gas temperature).....	66
Troubleshooting of electrical system (E-mode).....	SEN02149-01
E-1 Engine does not start.....	4
E-2 Abnormality in preheating system .....	10
E-3 Transmission and AJSS controller does not work .....	16
E-4 Transmission and AJSS controller model selection error .....	18
E-5 Parking brake does not work (as the emergency brake) .....	20
E-6 Parking brake is applied while machine is traveling .....	24
E-7 Parking brake is released as starting switch is turned ON .....	26
E-8 Setting to the neutral position becomes unavailable while the parking brake is in operation (parking brake operates normally).....	28
E-9 Parking brake remains in the neutral and not removable to other position (when parking brake is not applied).....	30
E-10 Defective kick-down switch.....	32
E-11 Defective hold switch .....	36
E-12 Lift arm (boom) kick-out is unavailable .....	40
E-13 Bucket positioner functional error .....	42
E-14 Active working functional error .....	44
E-15 Turn signal or hazard display do not flash .....	50
E-16 Small lamp does not light up .....	56
E-17 Head lamp does not light up.....	59
E-18 Abnormality in lighting up of front working lamp.....	62
E-19 Abnormality in lighting up of rear working lamp.....	62
E-20 Abnormality in transmission cut-off.....	62
E-21 Abnormality in low idle selection.....	62
E-22 Abnormality in parking brake dragging warning .....	62
E-23 Abnormality in buzzer .....	62
Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN02150-01
Method of using troubleshooting chart .....	3
H-1 Machine does not move .....	5
H-2 Machine lacks power or speed (every speed range).....	6
H-3 Excessive time lag when starting machine or shifting gear .....	7
H-4 Torque converter oil temperature is high .....	8
H-5 Steering does not turn .....	9
H-6 Turning, response of steering is poor .....	10
H-7 Joystick lever is heavy.....	11
H-8 Steering wheel shakes or jerks.....	12
H-9 Minimum turning radii to right and left are different .....	13
H-10 Wheel brakes do not work or braking effect is poor .....	14
H-11 Wheel brakes are not released or brakes drag .....	15
H-12 Lift arm does not rise.....	16
H-13 Lift arm moves slowly or does not have sufficient lifting power.....	17
H-14 When raising lift arm, becomes slow at certain height .....	18
H-15 Lift arm cylinder cannot hold down bucket .....	18
H-16 Lift arm has large amount of hydraulic drift .....	18
H-17 Lift arm fluctuates while working .....	19
H-18 Lift arm drops momentarily when lever is operated from HOLD to RAISE.....	19
H-19 Bucket does not tilt back .....	20
H-20 Bucket moves slowly or has insufficient tilt back power .....	21
H-21 Bucket movement becomes slow during tilt back.....	22
H-22 Bucket cylinder cannot hold down bucket .....	22

H-23 Bucket has large amount of hydraulic drift .....	22
H-24 Bucket fluctuates while traveling under load (work equipment valve "HOLD").....	23
H-25 Bucket dumps momentarily when lever is operated from HOLD to TILT .....	23
H-26 Lift arm and bucket levers do not move smoothly .....	24
Troubleshooting of engine (S-mode) .....	SEN02151-01
Method of using troubleshooting chart .....	3
S-1 Starting performance is poor.....	6
S-2 Engine does not start.....	7
S-3 Engine does not pick up smoothly .....	10
S-4 Engine stops during operations .....	11
S-5 Engine does not rotate smoothly .....	12
S-6 Engine lacks output (or lacks power).....	13
S-7 Exhaust smoke is black (incomplete combustion).....	15
S-8 Oil consumption is excessive (or exhaust smoke is blue) .....	16
S-9 Oil becomes contaminated quickly .....	17
S-10 Fuel consumption is excessive .....	18
S-11 Oil is in coolant (or coolant spurts back or coolant level goes down).....	19
S-12 Oil pressure drops .....	20
S-13 Oil level rises (Entry of coolant or fuel).....	21
S-14 Coolant temperature becomes too high (overheating) .....	22
S-15 Abnormal noise is made .....	23
S-16 Vibration is excessive .....	24
Troubleshooting of machine monitor system (M-mode) .....	SEN02152-00
Machine monitor system .....	3
M-1 Machine monitor does not work .....	4
M-2 Engine starts immediately after (within 3 sec of) turning starting switch ON, but all the machine monitors remain lit .....	6
M-3 Speedometer display does not work .....	7
M-4 Shift indicator error.....	9
M-5 Monitor turn signal (hazard) indicator does not light up .....	20
M-6 Parking indication error .....	22
M-7 Abnormality in preheating system .....	23
M-8 Night lamp does not light up.....	28
M-9 Front work lamp error.....	30
M-10 Rear work lamp error .....	34
M-11 Abnormality in transmission cut-off switch.....	38
M-12 Abnormality in low idle selection .....	42
M-13 Emergency steering indication error .....	44
M-14 Parking brake dragging warning error.....	46
M-15 Buzzer and caution lamp error upon parking brake dragging warning outputting.....	47
M-16 Buzzer error .....	50
M-17 Switching state of machine monitor is not stored.....	56
M-18 Failure indication mode error .....	58
M-19 Machine monitor does not indicate failure code.....	60
M-20 Abnormality in auto grease system .....	62
Troubleshooting of maintenance monitor system (K-mode) .....	SEN02153-02
Maintenance monitor system .....	3
K-1 Maintenance monitor does not work.....	4
K-2 Immediately after turning starting switch ON (within 3 sec.), engine starts but the maintenance monitor remains fully lit up .....	6
K-3 Work check item flashes upon turning starting switch ON (engine not running).....	8
K-4 Caution item flashes upon turning starting switch ON (engine running).....	12
K-5 The warning buzzer does not sound while caution item indicator flashes .....	28
K-6 The warning buzzer sounds while monitor indicates no error.....	30
K-7 The warning lamps (check lamp and caution lamp) do not flash while caution item indicator flashes .....	31
K-8 Warning lamps (check and caution lamps) lights up while the maintenance monitor indicates no error .....	33

K-9 Night lamp does not light up .....	36
K-10 Night lamp remains lit up .....	38
K-11 Service meter does not work .....	40
K-12 Service meter keeps on working (when engine stops) .....	42
K-13 Gauge items (fuel, engine coolant temperature and torque converter oil temperature) error	44
Troubleshooting of remote boom positioner controller system (if equipped) (W-mode) SEN04494-00	
W-1 Short circuit, disconnection in dumping solenoid system .....	4
W-2 Short circuit in power source at hot end of dumping solenoid .....	5
W-3 Short circuit in power source at return end of dumping solenoid .....	6
W-4 Boom kick-out function trouble .....	8
W-5 Disconnection in boom RAISE, LOWER detection pressure switch .....	10
W-6 Short circuit, disconnection in boom angle potentiometer system .....	12
W-7 Sensor cannot be adjusted .....	14
W-8 Abnormality in engine speed signal system .....	15
W-9 Remote positioner RAISE, LOWER LEDs do not light up .....	16
W-10 Remote positioner RAISE set LED does not flash .....	18
W-11 Remote positioner LOWER set LED does not flash .....	20
W-12 Buzzer for switch operation does not sound .....	22
W-13 Shock when stopping boom .....	23
W-14 Short circuit in boom RAISE, LOWER pressure detection switch .....	24
50 Disassembly and assembly	
General information on disassembly and assembly SEN02739-02	
How to read this manual .....	2
Coating materials list .....	4
Special tools list .....	7
Sketches of special tools .....	13
Engine and cooling system, Part 1 SEN02740-01	
Removal and installation of engine assembly .....	2
Removal and installation of radiator assembly .....	7
Removal and installation of damper assembly .....	10
Disassembly and assembly of damper assembly .....	11
Removal and installation of fuel tank assembly .....	15
Engine and cooling system, Part 2 SEN02741-03	
Removal and installation of right bank fuel supply pump assembly .....	2
Removal and installation of left bank fuel supply pump assembly .....	6
Removal and installation of cylinder head assembly .....	10
Removal and installation of fuel injector assembly .....	20
Removal and installation of engine front oil seal .....	25
Removal and installation of engine rear oil seal .....	28
Power train, Part 1 SEN02742-02	
Disassembly and assembly of transfer assembly .....	2
Disassembly and assembly of PTO assembly .....	16
Removal and installation of parking brake calipers assembly .....	20
Disassembly and assembly of parking brake calipers assembly .....	21
Removal and installation of parking brake pad .....	23
Removal and installation of parking brake spring cylinder .....	24
Removal and installation of torque converter and transmission assembly .....	25
Power train, Part 2 SEN02743-01	
Disassembly and assembly of torque converter assembly .....	2
Disassembly and assembly of transmission assembly .....	10
Power train, Part 3 SEN02744-01	
Removal and installation of front axle assembly .....	2
Removal and installation of rear axle assembly .....	4
Removal and installation of center support assembly .....	10
Disassembly and assembly of center support assembly .....	12
Removal and installation of differential assembly .....	16

Disassembly and assembly of differential assembly .....	18
Disassembly and assembly of final drive assembly .....	27
Brake system .....	SEN02745-02
Removal and installation of brake assembly .....	2
Disassembly and assembly of brake assembly .....	3
Removal and installation of left brake valve assembly .....	8
Removal and installation of right brake valve assembly .....	9
Disassembly and assembly of accumulator charge valve .....	10
Disassembly and assembly of slack adjuster .....	12
Undercarriage and frame .....	SEN02746-01
Removal and installation of center hinge pin .....	2
Removal and installation of counterweight assembly .....	10
Hydraulic system .....	SEN02747-02
Removal and installation of hydraulic tank and filter case assembly .....	2
Removal and installation of hydraulic pump assembly .....	4
Removal and installation of work equipment control valve assembly .....	7
Disassembly and assembly of work equipment control valve assembly .....	9
Disassembly and assembly of PPC valve assembly .....	12
Removal and installation of steering valve assembly .....	13
Removal and installation of diverter valve assembly .....	15
Disassembly and assembly of diverter valve assembly .....	16
Removal and installation of Orbit-roll assembly .....	18
Removal of steering stop valve .....	20
Disassembly and assembly of hydraulic cylinder assembly .....	21
Work equipment .....	SEN02748-01
Removal and installation of work equipment assembly .....	2
Replacement of boom front bushing .....	7
Work equipment .....	SEN02749-01
Removal and installation of operator cab assembly .....	2
Removal and installation of floor frame assembly .....	4
Disassembly and assembly of operator's seat assembly .....	7
Electrical system .....	SEN02750-00
Removal and installation of engine controller assembly .....	2
Removal and installation of transmission and steering controller assembly .....	3
Removal and installation of main monitor assembly .....	4
Removal and installation of air conditioner unit assembly .....	6
90 Diagrams and drawings .....	
Hydraulic diagrams and drawings .....	SEN02046-00
Power train hydraulic circuit diagram .....	2
Brake hydraulic circuit diagram .....	3
Work equipment hydraulic circuit diagram .....	5
Electrical diagrams and drawings .....	SEN02047-01
Electrical circuit diagram (1/8) .....	3
Electrical circuit diagram (2/8) .....	5
Electrical circuit diagram (3/8) .....	7
Electrical circuit diagram (4/8) .....	9
Electrical circuit diagram (5/8) .....	11
Electrical circuit diagram (6/8) .....	13
Electrical circuit diagram (7/8) .....	15
Electrical circuit diagram (8/8) .....	17
Electrical circuit diagram of emergency engine stop .....	19
Electrical circuit diagram of hydraulic oil level sensor .....	21
Electrical circuit diagram of battery and starting motor disconnecter switch and starting aid connector .....	23
Connector arrangement diagram .....	25

# WHEEL LOADER

## WA800-3E0

## WA900-3E0

**Machine model      Serial number**

WA800-3E0            70001 and up  
WA900-3E0            60001 and up

---

## 00 Index and foreword

### Foreword and general information

---


Safety notice .....	2
How to read the shop manual .....	7
Explanation of terms for maintenance standard .....	9
Handling of electric equipment and hydraulic component .....	11
Handling of connectors newly used for engines .....	20
How to read electric wire code .....	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table .....	32
Conversion table .....	36

## Safety notice


(Rev. 2008/08)

### Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

### 1. General precautions

 **Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine. In addition, read this manual and understand its contents before starting the work.**

- 1) Before carrying out any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
  - Always wear safety glasses when hitting parts with a hammer.
  - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR warning signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, fork-lift, service car, etc.
- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.
- 9) Avoid continuing work for long hours and take rests at proper intervals to keep your body in good condition. Take rests in specified safe places.

### Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much



## 2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on a hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

## 3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

**4. Precautions for sling work and making signs**


1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is well seen from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.

- Do not stand under the load.
- Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

**⚠ Slinging with 1 rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.**

7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

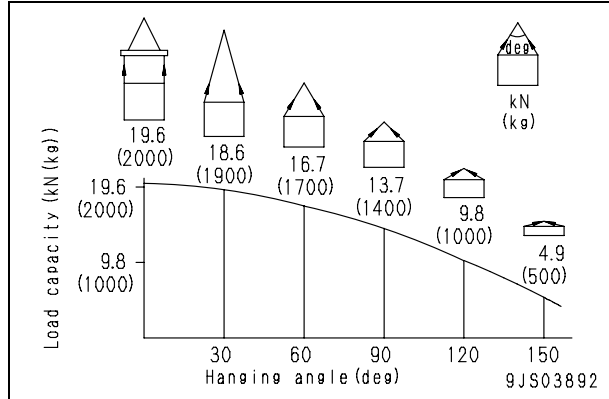

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
  - Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

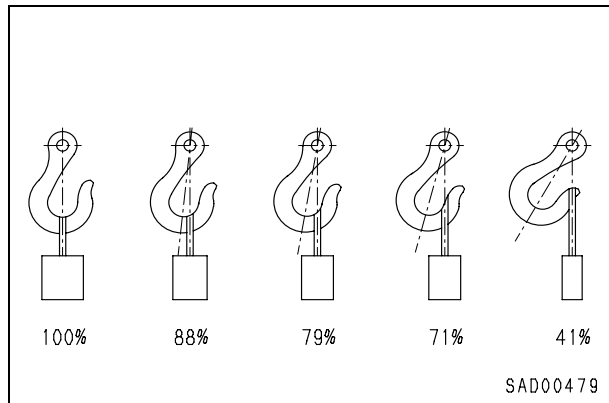


- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
  - Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
  - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
  - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
  - Check that the load is stable, and then remove the sling.
  - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

#### 5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

#### 6. Precautions for using overhead hoist crane

**▲ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .**

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

#### 7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes  
(Standard "Z" twist ropes without galvanizing)  
(JIS G3525, No. 6, Type 6X37-A)

Nominal diameter of rope mm	Allowable load	
	kN	ton
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).

## 8. Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit

### 1) Disconnection

**⚠** For the environment, the air conditioner of this machine uses the refrigerant (air conditioner gas: R134a) which has fewer factors of the depletion of the ozone layer. However, it does not mean that you may discharge the refrigerant into the atmosphere as it is. Be sure to recover the refrigerant when disconnecting the refrigerant gas circuit and then reuse it.

★ Ask professional traders for collecting and filling operation of refrigerant (R134a).

★ Never release the refrigerant (R134a) to the atmosphere.

**⚠** If the refrigerant gas gets in your eyes or contacts your skin, you may lose your sight and your skin may be frozen. Accordingly, put on safety glasses, safety gloves and safety clothes when recovering or adding the refrigerant. Refrigerant gas must be recovered and added by a qualified person.

### 2) Connection


1] When installing the air conditioner circuit hoses and tubes, take care that dirt, dust, water, etc. will not enter them.

2] When connecting the air conditioner hoses and tubes, check that O-rings (1) are fitted to their joints.

3] Check that each O-ring is not damaged or deteriorated.

4] When connecting the refrigerant piping, apply compressor oil for refrigerant (R134a) (DENSO: ND-OIL8, VALEO THERMAL SYSTEMS: ZXL100PG (equivalent to PAG46)) to its O-rings.

★ Example of O-ring (Fitted to every joint of hoses and tubes)

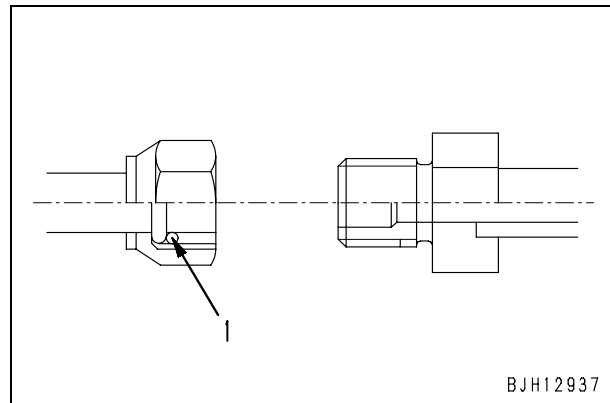

★ For tightening torque, see the precautions for installation in each section of "Disassembly and assembly".

## How to read the shop manual

- Some attachments and optional parts in this shop manual may not be delivered to certain areas. If one of them is required, consult KOMATSU distributors.
- Materials and specifications are subject to change without notice.
- Shop manuals are divided into the “Chassis volume” and “Engine volume”. For the engine unit, see the engine volume of the engine model mounted on the machine.

### 1. Composition of shop manual

This shop manual contains the necessary technical information for services performed in a workshop. For ease of understanding, the manual is divided into the following sections.

#### 00. Index and foreword

This section explains the shop manuals list, table of contents, safety, and basic information.

#### 01. Specification

This section explains the specifications of the machine.

#### 10. Structure, function and maintenance standard

This section explains the structure, function, and maintenance standard values of each component. The structure and function sub-section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting. The maintenance standard sub-section explains the criteria and remedies for disassembly and service.

#### 20. Standard value table

This section explains the standard values for new machine and judgement criteria for testing, adjusting, and troubleshooting. This standard value table is used to check the standard values in testing and adjusting and to judge parts in troubleshooting.

#### 30. Testing and adjusting

This section explains measuring instruments and measuring methods for testing and adjusting, and method of adjusting each part. The standard values and judgement criteria for testing and adjusting are explained in Testing and adjusting.

#### 40. Troubleshooting

This section explains how to find out failed parts and how to repair them. The troubleshooting is divided by failure modes. The “S mode” of the troubleshooting related to the engine may be also explained in the Chassis volume and Engine volume. In this case, see the Chassis volume.

#### 50. Disassembly and assembly

This section explains the special tools and procedures for removing, installing, disassembling, and assembling each component, as well as precautions for them. In addition, tightening torque and quantity and weight of coating material, oil, grease, and coolant necessary for the work are also explained.

#### 90. Diagrams and drawings (chassis volume)/Repair and replacement of parts (engine volume)

- Chassis volume  
This section gives hydraulic circuit diagrams and electrical circuit diagrams.
- Engine volume  
This section explains the method of reproducing, repairing, and replacing parts.

### 2. Revision and distribution

Any additions, revisions, or other change of notices will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.

### 3. Filing method

File by the brochures in the correct order of the form number printed in the shop manual composition table.

- **Revised edition mark**








When a manual is revised, the ones and tens digits of the form number of each brochure is increased by 1. (Example: 00, 01, 02 ...)

- **Revisions**

Revised brochures are shown in the shop manual composition table.

### 4. Symbols

Important safety and quality portions are marked with the following symbols so that the shop manual will be used practically.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing work.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing work.
	Weight	Weight of parts of component or parts. Caution necessary when selecting hoisting wire, or when working posture is important, etc.
	Tightening torque	Places that require special attention for tightening torque during assembly.
	Coat	Places to be coated with adhesives, etc. during assembly.
	Oil, coolant	Places where oil, etc. must be added, and capacity.
	Drain	Places where oil, etc. must be drained, and quantity to be drained.

### 5. Units

In this shop manual, the units are indicated with International System of units (SI). For reference, conventionally used Gravitational System of units is indicated in parentheses { }.

## Explanation of terms for maintenance standard

The maintenance standard chapter explains the criteria for replacing or reusing products and parts in the machine maintenance work. The following terms are used to explain the criteria.

### 1. Standard size and tolerance

- To be accurate, the finishing size of parts is a little different from one to another.
- To specify a finishing size of a part, a temporary standard size is set and an allowable difference from that size is indicated.
- The above size set temporarily is called the "standard size" and the range of difference from the standard size is called the "tolerance".
- The tolerance with the symbols of + or – is indicated on the right side of the standard size.


Example:

Standard size	Tolerance
120	-0.022 -0.126

- ★ The tolerance may be indicated in the text and a table as [standard size (upper limit of tolerance/lower limit of tolerance)].  
Example) 120 (-0.022/-0.126)
- Usually, the size of a hole and the size of the shaft to be fitted to that hole are indicated by the same standard size and different tolerances of the hole and shaft. The tightness of fit is decided by the tolerance.
- Indication of size of rotating shaft and hole and relationship drawing of them

Example:

Standard size	Tolerance	
	Shaft	Hole
60	-0.030 -0.076	+0.046 0

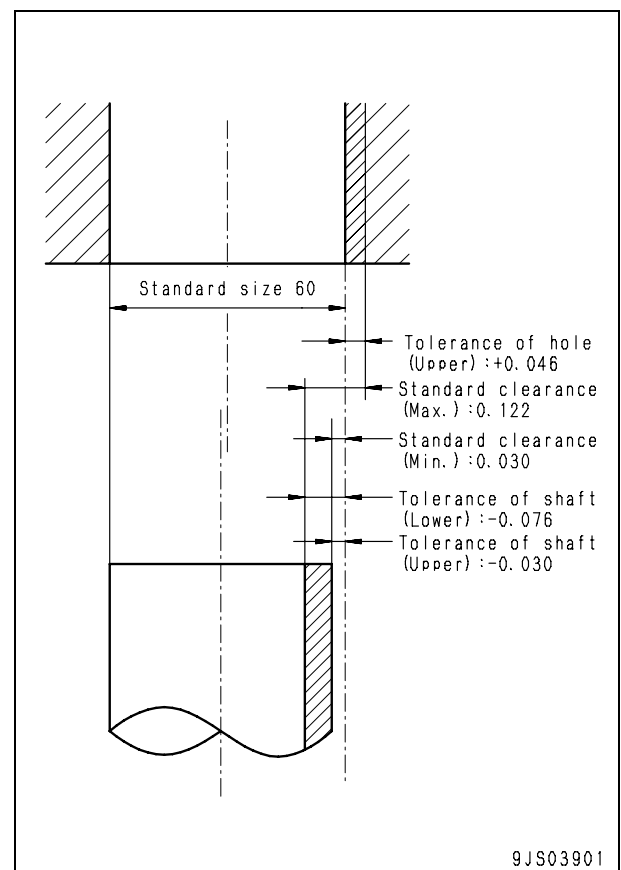



**Download the full PDF manual instantly.**

**Our customer service e-mail:**

**[aservicemanualpdf@yahoo.com](mailto:aservicemanualpdf@yahoo.com)**